


# STAR PRINTER CONTROLLER PCB AND DIP SWITCH SETTINGS

Printer Slide Assembly, Star Pedestal, C05672  
 Star Printer Controller PCB (C08933, CR8933)

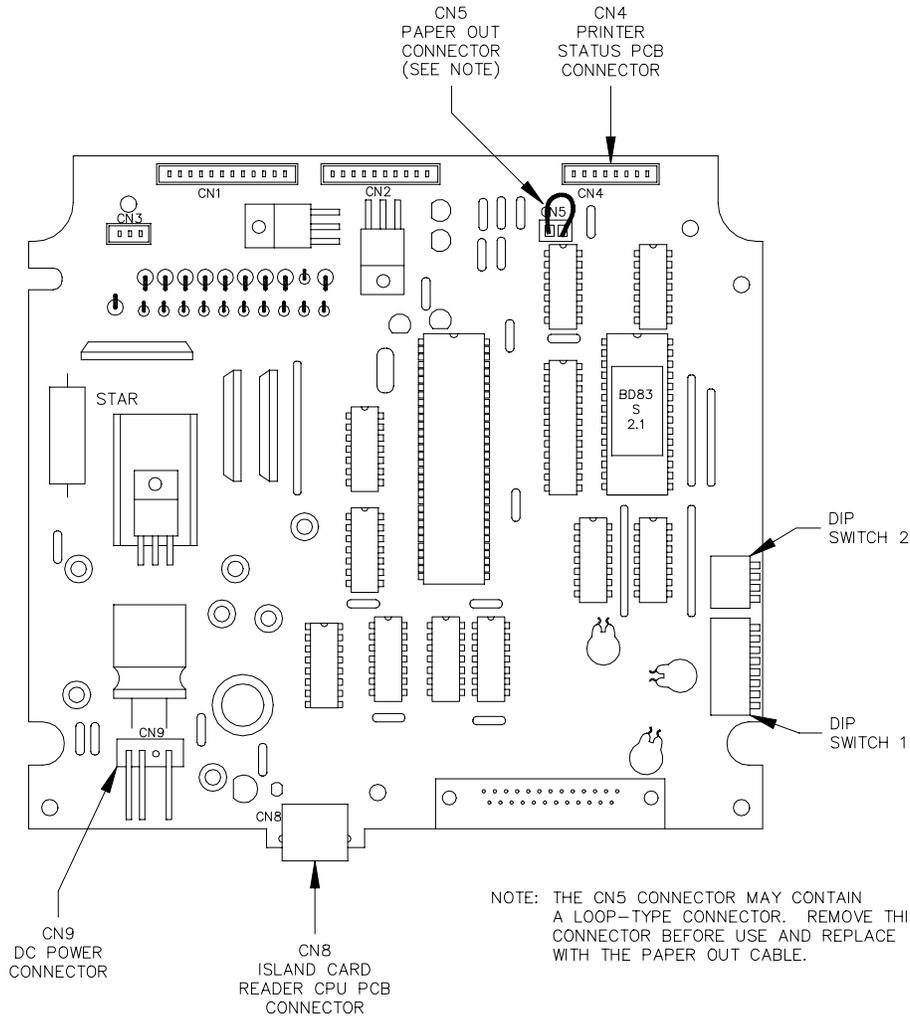

## Dip Switch Settings

The Star Printer Controller dip switches (DSW1 and DSW2) are set at the factory prior to shipment; however, these switches may have moved during handling. Use the PCB layout to locate the switches, and before installation, verify that the switches are positioned as shown.

Switch	DSW1	DSW2
1	On	On
2	On	On
3	On	On
4	On	Off
5	Off	—
6	On	—
7	On	—
8	Off	—

