


# Spring Installation Instructions

NOTE: Veeder-Root recommends that the EMR3 Meter Register is driven in the counter-clockwise (CCW) rotation. When looking down at the end of the flow meter vertical drive shaft it should be turning CCW (see below).



NOTE: The flow meter's drive shaft end view may vary depending on the flow meter type.


- 1. Remove the four cover bolts of the EMR<sup>3</sup> Display Head and lift off the cover. Put the cover and bolts aside.
- 2. With the encoder spring in your left hand and the input shaft in your right, orient the input shaft as shown in Figure 1, then rotate the input shaft in a counter-clockwise direction as you 'screw' it into the spring until the flange on the input shaft is about 1/8" from the end of the spring.

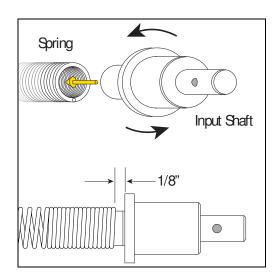

NOTE: The Input Shaft's appearance may vary depending on the flow meter type.

Figure 1. Screwing Input Shaft CCW Into Encoder Spring

 3. With the Encoder Spring/Input Shaft assembly in one hand, push the open spring end onto the pulse encoder's shaft. Work the spring onto the shaft until it is about 1/8" from the pulse encoder (Figure 2).



4. Place the thin washer from the kit onto the input shaft against the underside of the flange on the input shaft and then CAREFULLY bend the spring to insert the end of the input shaft into the center hole on the bottom of the EMR³ display head (Figure 3. Install the meter coupling as instructed in the EMR³ Installation Guide, Manual No. 577013-758.



Figure 3. Inserting Input Shaft Into Base Of Display Head

If additional information is required, contact Mechanical / EMR Customer Service at:

## 800-873-3313 Option 6

### Notice

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.

Veeder-Root reserves the right to change system options or features, or the information contained in this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be photocopied, reproduced, or translated to another language without the prior written consent of Veeder-Root.

### DAMAGE CLAIMS

- 1. Thoroughly examine all components and units as soon as they are received. If damaged, write a complete and detailed description of the damage on the face of the freight bill. The carrier's agent must verify the inspection and sign the description.
- Immediately notify the delivering carrier of damage or loss. This notification may be given either in person or by telephone. Written confirmation must be mailed within 48 hours. Railroads and motor carriers are reluctant to make adjustments for damaged merchandise unless inspected and reported promptly.
- 3. Risk of loss, or damage to merchandise remains with the buyer. It is the buyer's responsibility to file a claim with the carrier involved.

#### **RETURN SHIPPING**

For the parts return procedure, please follow the appropriate instructions in the "General Returned Goods Policy" and "Parts Return" section of the Veeder-Root EMR<sup>3</sup> price list.