

Field Service Bulletin

Marley Pump
500 E. 59th Street
Davenport, IA 52807
Tel: (800) 262-7539
(319) 391-8600
Fax: (800) 304-7502

Date: November 1, 1999
Attention: Red Jacket Distributors
Subject: CPT Grounding

Red Jacket has made a change in how the CPT controller is grounded. The ground connection has been moved to the incoming power ground terminal at the top of the capacitor board, no longer the grounding lug. Earlier boards had the terminal for the incoming ground covered with sealant indicating that the ground was to be connected to the ground lug on the bottom of the controller.

New boards do not have the sealant applied to the incoming ground terminal and the chassis "box" connection is already made by Red Jacket. Therefore, the incoming ground attaches to the terminal now located at the top of the board. This is illustrated in section 3-11 in revision H and I of the CPT Controller Installation and Operation guide.

Thank you for your continued support of Red Jacket. For additional information, please contact your Red Jacket Regional Sales Manager or Red Jacket Technical Support at 1-800-262-7539.