

Installation Instructions

REPLACEMENT RETRACTOR REEL – MODEL No. 071-124 AND 071-130

The following defined terms are used throughout this literature to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.

DANGER

Indicates presence of a hazard which *will* cause *severe* personal injury, death or substantial property damage if ignored.

CAUTION

Indicates presence of a hazard which *will* or *can* cause *minor* personal injury, death or substantial property damage if ignored.

WARNING

Indicates presence of a hazard which *can* cause *severe* personal injury, death or substantial property damage if ignored.

NOTICE

Indicates special instructions on installations, operation, or maintenance which are important but not related to personal injury hazards.

WARNING

It is the responsibility of the individual performing the installation to comply with all local codes and safety regulations regarding gasoline and vapors.

NOTICE

The maximum hose loop under the nozzle must be 10 inches or less when the nozzle is returned.

1. Detach the clamp from the hose of the dispenser.
2. Remove the (4) screws from the cover of overhead retractor.
3. Detach the clamp from cord.
4. Slowly rotate the reel counter-clockwise to release any remaining tension in the reel.
5. Once the tension is released, remove the 3/4" nut from the back of the reel.
6. Replace the retractor line back onto the new reel.
7. Replace the new reel back into the retractor case and tighten nut.
8. Wind retractor reel clock-wise approximately 1-1/2 to 2 times and then re-tie clip on retractor line.
9. Replace cover and (4) screws and reattach hose to clip.
10. If adjustment is required in spring tension, remove the (4) screws from the cover, extend cable approximately 18", wind or unwind one turn at a time and repeat step 9.