



# REDJACKET® Verifying Wiring Connections

**Notice**

It is extremely important to recheck and verify ALL wiring connections IMMEDIATELY BEFORE applying power to the CPT Controller(s) and CPT pump(s).

***Failure to perform this test may void product warranty.***

The resistance and continuity checks outlined below will prevent problems during operation due to improper installation.

## Checking Motor Field Wiring

The resistance measured between the terminals below should be between 2-3 Ω

Terminals		Resistance
M1	to	M2
M1	to	M3
M2	to	M3

**Notice**

Resistance measured between three legs must be within ± 5% to ensure proper phase balance.

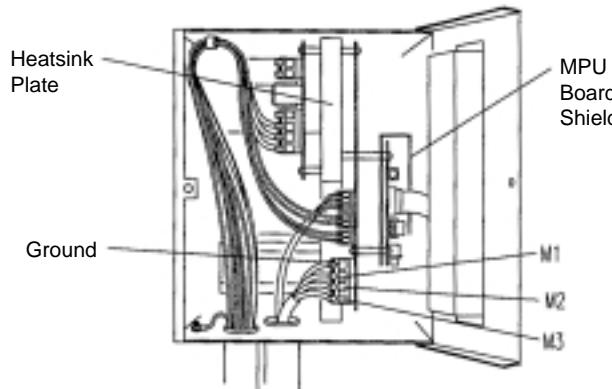


Figure 1 Resistance and Continuity Checking

## Checking Motor Wiring to Ground

The resistance between the terminals below should be infinite.

Terminals		Resistance
M1	to	Ground
M2	to	Ground
M3	to	Ground

**Notice**

The resistance between the heatsink plate and the MPU board shield should be infinite.

**Notice**

Remove packing material under fan before startup.

**Aviso**

Es extremadamente importante chequear TODO el cableado y conexiones inmediatamente ANTES de aplicar energía a el(los) controladore(s) y bomba(s) CPT.

**De no hacer esta prueba podría invalidar la garantía.**

El siguiente chequeo de continuidad y resistencia eliminará problemas de operación debido a una instalación incorrecta.

### Chequeo del Cableado al Motor

La resistencia medida entre los terminales indicados abajo debe ser de 2-3 Ω

Terminales			Resistencia
M1	a	M2	2-3 Ω
M1	a	M3	2-3 Ω
M2	a	M3	2-3 Ω

**Aviso**

La resistencia medida entre los terminales debe tener un máximo de ±5% de discrepancia para mantener un balance correcto entre las fases.

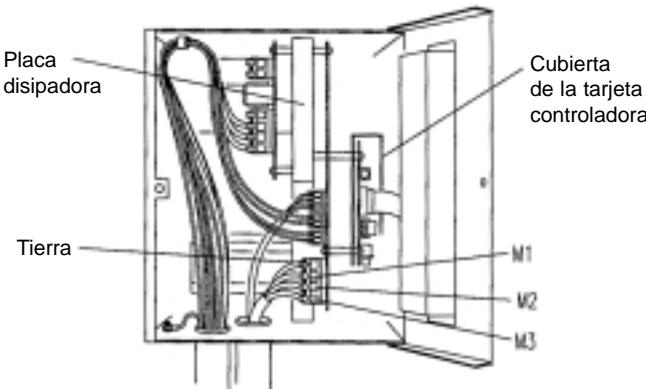


Figura 1 Chequoo de Resistencia y Continuidad

### Chequeo del Cableado del Motor y Tierra

La resistencia entre los terminales del motor y tierra debe ser infinita.

Terminales			Resistencia
M1	a	tierra	Infinita
M2	a	tierra	Infinita
M3	a	tierra	Infinita

**Nota**

La resistencia entre la placa disipadora y la cubierta de la tarjeta controladora debe ser infinita.

**Nota**

Antes de dar alimentación al controlador, quitar el material abajo del abanicó.