


⚠ WARNING

EMR⁴

For purposes of complying with UL (safety) and OIML requirements, the instructions below must be followed when connecting the cable between the Display Head (DH) and the Interconnection Box (IB). Refer to Manual 577014-339 for additional information.

Truck Display Head

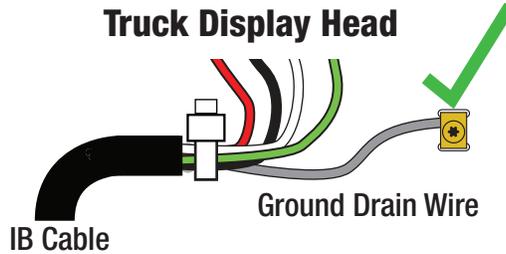

Terminal/Fueling Depot Display Head

