

THE PLUS VIEW APP INSTRUCTIONAL GUIDE



THE PLUS VIEW is a free mobile app available for download on Android and Apple iOS mobile/tablet devices. It provides remote access to inventory, delivery, and alarm data for your TLS-450PLUS and TLS4 Series Automatic Tank Gauges (ATGs).

- The station overview provides an immediate status check on tank inventory
- Access inventory and last delivery reports quickly through the Reports tab
- View active alarms at a site instantly through the Alarms tab
- Pin favorite sites for easy access in the Station List
- Request a fuel delivery or email a technician for support in the app to optimize workflows



► 1. DOWNLOAD THE APP

Type **THE PLUS VIEW** into the Google Play Store or Apple App Store. Select and install the app. No password is required for this.



► 2. GETTING STARTED

The screen shown here is the initial view when you start. To proceed, click the **ADD** button at the bottom.



► 3. IN-APP CONFIGURATION

- **Station List:** Press '+Add'
- **Fill Out:** Station Name, Username, and Password
- **Select Connection Type:** PLUS VIEW ID (QR Code Scan) or IP Address



FIELD PARAMETERS

Station Name: Any name you'd like for the site

Username: Enter your TLS4/TLS450PLUS ATG username

Password: Enter your TLS4/TLS450PLUS ATG password

IP Address / Host Name: Optional; not needed if using PLUS VIEW ID Connection

All other fields are optional. You may fill them out to appear realistic or leave them blank. When you are finished, click the **SAVE** button at the top.

SAVE

► 4. SCAN PLUS VIEW ID QR CODE ON THE PHONE

- **Select:** 'SCAN PLUS VIEW ID' (allow app to use camera)
 - **NOTE:** It will very quickly recognize the QR Code and begin the Provisioning Process. ATG Screen will say 'Connecting' while undergoing authentication process.
- **New QR Code:** Once authentication is complete, a new QR Code will populate on the screen. Press 'Scan QR Code' and 'Scan from ATG' to finalize.
- **Status:** Once connection is finalized ATG should read 'Connected'.
- **Save:** Press 'Save' and 'OK'

In order for the QR-code connection to work, the ATG must be configured to use the default HTTPS port; port 443



► 5. ACCESS SITES

Once you are finished, your home screen will list all sites you've added. To see detail about a site, simply click on the site's name.

The **Inventory** tab will show inventory levels.

The **Deliveries** tab shows fuel delivery history.

The **Alarms** tab shows site alerts.



Home Screen

Inventory

Deliveries

Alarms

► 6. VIEW THE SETUP PROCESS IN ACTION

The how to video walks through **THE PLUS VIEW** app setup steps shown in this guide and can be used as a quick reference during installation.

