

## Introduction

This manual provides instructions for installing the door node speaker (beeper) kit (M04435K001) on Encore 500 units. Dual-sided units require two kits. This kit is intended to provide an additional beeper for newer units to provide enhanced beeper volume. Removal of the existing beeper is not required.

This manual is written for Gilbarco® Authorized Service Contractors (ASCs) and Customer Service Contractors (CSCs).

This kit must be installed by an ASC or CSC to insure warranty.

## Required Reading

Before installing the equipment, the installer must read, understand, and follow:

- This manual
- National Fire Protection Agency (NFPA) 70
- The National Electric Code (NEC)
- Applicable federal, state and local codes and regulations

Failure to do so may adversely affect the safe use and operation of the equipment.

## Related Document

The following documents provide important safety information regarding all service and installation activities. Always use the latest version of these manuals:

<b>Document Number</b>	<b>Title</b>	<b>GOLD® Library</b>
MDE-3804	Encore and Eclipse® Series Start-Up and Service Manual	Encore and Eclipse
MDE-3893	Encore and Eclipse Owner's Manual	Encore and Eclipse

## Required Parts

Ensure that you have the following parts, prior to attempting this installation:

Description	Part Number	Quantity Per Side
Cable, Speaker/Wire	M00636A001	1
Bracket, Speaker Retrofit	M04432B001	1
Screw, Slotted W/LW, Self-tapping	Q11677	2

## Required Tools

The following tools may be required to install this kit:

- Clean cloth or rag
- Screwdriver
- Wire cutters
- Nut driver set or socket set

# Important Safety Information

This section introduces the hazards and safety precautions associated with installing, inspecting, maintaining or servicing this product. Before performing any task on this product, read this safety information and the applicable sections in this manual, where additional hazards and safety precautions for your task will be found. Fire, explosion, electrical shock or pressure release could occur and cause death or serious injury, if these safe service procedures are not followed.

## Preliminary Precautions


You are working in a potentially dangerous environment of flammable fuels, vapors, and high voltage or pressures. Only trained or authorized individuals knowledgeable in the related procedures should install, inspect, maintain or service this equipment.

## Emergency Total Electrical Shut-Off

The first and most important information you must know is how to stop all fuel flow to the pump/dispenser and island. Locate the switch or circuit breakers that shut off all power to all fueling equipment, dispensing devices, and Submerged Turbine Pumps (STPs).

**⚠ WARNING**

The EMERGENCY STOP, ALL STOP, and PUMP STOP buttons at the cashier's station WILL NOT shut off electrical power to the pump/dispenser. This means that even if you activate these stops, fuel may continue to flow uncontrolled.



You must use the TOTAL ELECTRICAL SHUT-OFF in the case of an emergency and not the console's ALL STOP and PUMP STOP or similar keys.

## Total Electrical Shut-Off Before Access

Any procedure that requires access to electrical components or the electronics of the dispenser requires total electrical shut off of that unit. Understand the function and location of this switch or circuit breaker before inspecting, installing, maintaining, or servicing Gilbarco equipment.

## Evacuating, Barricading and Shutting Off

Any procedure that requires access to the pump/dispenser or STPs requires the following actions:



- An evacuation of all unauthorized persons and vehicles from the work area
- Use of safety tape, cones or barricades at the affected unit (s)
- A total electrical shut-off of the affected unit (s)

## Read the Manual

Read, understand and follow this manual and any other labels or related materials supplied with this equipment. If you do not understand a procedure, call a Gilbarco Authorized Service Contractor or call the Gilbarco Support Center at 1-800-800-7498. It is imperative to your safety and the safety of others to understand the procedures before beginning work.

## Follow the Regulations

Applicable information is available in National Fire Protection Association (NFPA) 30A; *Code for Motor Fuel Dispensing Facilities and Repair Garages*, NFPA 70; *National Electrical Code (NEC)*, Occupational Safety and Hazard Association (OSHA) regulations and federal, state, and local codes. All these regulations must be followed. Failure to install, inspect, maintain or service this equipment in accordance with these codes, regulations and standards may lead to legal citations with penalties or affect the safe use and operation of the equipment.

## Replacement Parts

Use only genuine Gilbarco replacement parts and retrofit kits on your pump/dispenser. Using parts other than genuine Gilbarco replacement parts could create a safety hazard and violate local regulations.

## Safety Symbols and Warning Words

This section provides important information about warning symbols and boxes.

### Alert Symbol



This safety alert symbol is used in this manual and on warning labels to alert you to a precaution which must be followed to prevent potential personal safety hazards. Obey safety directives that follow this symbol to avoid possible injury or death.

### Signal Words

These signal words used in this manual and on warning labels tell you the seriousness of particular safety hazards. The precautions below must be followed to prevent death, injury or damage to the equipment:



**DANGER:** Alerts you to a hazard or unsafe practice which will result in death or serious injury.



**WARNING:** Alerts you to a hazard or unsafe practice that could result in death or serious injury.



**CAUTION** with Alert symbol: Designates a hazard or unsafe practice which may result in minor injury.

**CAUTION** without Alert symbol: Designates a hazard or unsafe practice which may result in property or equipment damage

## Working With Fuels and Electrical Energy

### Prevent Explosions and Fires

Fuels and their vapors will explode or burn, if ignited. Spilled or leaking fuels cause vapors. Even filling customer tanks will

cause potentially dangerous vapors in the vicinity of the dispenser or island.

**No Open Fire**



Open flames from matches, lighters, welding torches or other sources can ignite fuels and their vapors.  
**No Sparks - No Smoking**



Sparks from starting vehicles, starting or using power tools, burning cigarettes, cigars or pipes can also ignite fuels and their vapors. Static electricity, including an electrostatic charge on your body, can cause a spark sufficient to ignite fuel vapors. Every time you get out of a vehicle, touch the metal of your vehicle, to discharge any electrostatic charge before you approach the dispenser island.

**Working Alone**

It is highly recommended that someone who is capable of rendering first aid be present during servicing. Familiarize yourself with Cardiopulmonary Resuscitation (CPR) methods, if you work with or around high voltages. This information is available from the American Red Cross. Always advise the station personnel about where you will be working, and caution them not to activate power while you are working on the equipment. Use the OSHA Lockout/ Tagout procedures. If you are not familiar with this requirement, refer to this information in the service manual and OSHA documentation.

**Working With Electricity Safely**

Ensure that you use safe and established practices in working with electrical devices. Poorly wired devices may cause a fire, explosion or electrical shock. Ensure that grounding connections are properly made. Take care that sealing devices and compounds are in place. Ensure that you do not pinch wires when replacing covers. Follow OSHA Lockout/Tagout requirements. Station employees and service contractors need to understand and comply with this program completely to ensure safety while the equipment is down.

**Hazardous Materials**

Some materials present inside electronic enclosures may present a health hazard if not handled correctly. Ensure that you clean hands after handling equipment. Do not place any equipment in the mouth.

**WARNING**

The pump/dispenser contains a chemical known to the State of California to cause cancer.

**WARNING**

The pump/dispenser contains a chemical known to the State of California to cause birth defects or other reproductive harm.

**In an Emergency**

**Inform Emergency Personnel**

Compile the following information and inform emergency personnel:

- Location of accident (for example, address, front/back of building, and so on)
- Nature of accident (for example, possible heart attack, run over by car, burns, and so on)
- Age of victim (for example, baby, teenager, middle-age, elderly)
- Whether or not victim has received first aid (for example, stopped bleeding by pressure, and so on)
- Whether or not a victim has vomited (for example, if swallowed or inhaled something, and so on)

**WARNING**



Gasoline ingested may cause unconsciousness and burns to internal organs.  
Do not induce vomiting.  
Keep airway open.  
Oxygen may be needed at scene.  
Seek medical advice immediately.

**WARNING**



Gasoline inhaled may cause unconsciousness and burns to lips, mouth and lungs.  
Keep airway open.  
Seek medical advice immediately.

**WARNING**



Gasoline spilled in eyes may cause burns to eye tissue.  
Irrigate eyes with water for approximately 15 minutes.  
Seek medical advice immediately.

**WARNING**






Gasoline spilled on skin may cause burns.  
Wash area thoroughly with clear water.  
Seek medical advice immediately.

**IMPORTANT:** Oxygen may be needed at scene if gasoline has been ingested or inhaled. Seek medical advice immediately.

 
**Lockout/Tagout**

Lockout/Tagout covers servicing and maintenance of machines and equipment in which the unexpected energization or start-up of the machine(s) or equipment or release of stored energy could cause injury to employees or personnel. Lockout/Tagout applies to all mechanical, hydraulic, chemical or other energy, but does not cover electrical hazards. Subpart S of 29 CFR Part 1910 - Electrical Hazards, 29 CFR Part 1910.333 contains specific Lockout/ Tagout provision for electrical hazards.

## Hazards and Actions

 <b>WARNING</b>	
	Spilled fuels, accidents involving pumps/dispensers, or uncontrolled fuel flow create a serious hazard.
	Fire or explosion may result, causing serious injury or death. Follow established emergency procedures.


The following actions are recommended regarding these hazards:

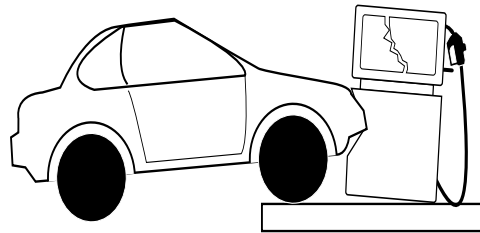

Collision of a Vehicle with Unit



 Fire at Island

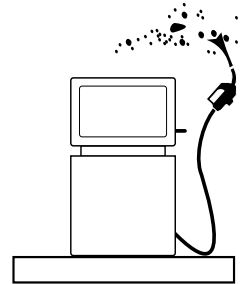

Fuel Spill

- Do not go near a fuel spill or allow anyone else in the area.
- Use station EMERGENCY CUTOFF immediately. Turn off all system circuit breakers to the island(s).
- Do not use console E-STOP, ALL STOP and PUMP STOP to shut off power. These keys do not remove AC power and do not always stop product flow.
- Take precautions to avoid igniting fuel. Do not allow starting of vehicles in the area. Do not allow open flames, smoking or power tools in the area.
- Do not expose yourself to hazardous conditions such as fire, spilled fuel or exposed wiring.
- Call emergency numbers.

*This page is intentionally left blank.*

# Door Node Speaker (Beeper) Kit Installation

## Preparing for Installation



- 1 Before proceeding, read and follow all safety instructions and procedures.
- 2 Remove power from the unit.


<b>⚠ WARNING</b>	
	To avoid potential electric shock, ensure that you remove all power to the dispenser before installing the speaker kit .

- 3 Unlock and open the CIM door. Refer to MDE-3893 Encore and Eclipse Series Owner's Manual for details on opening the CIM door.

## Installation Instructions

The speaker mounting bracket is installed under the display mounting bracket on the back of the CIM door.

 
**Figure 1: Door Node Board and Display Bracket**

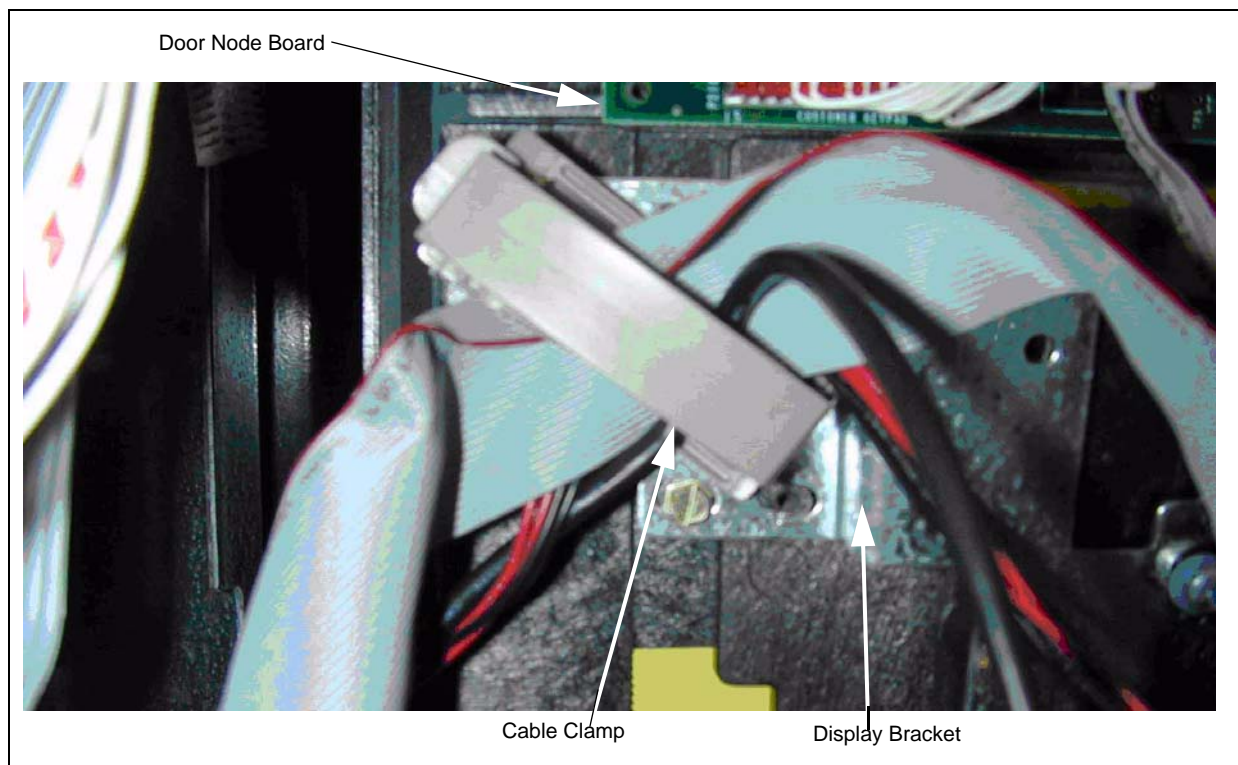

- 1 Remove the cables from the cable clamp mounted on the display bracket.

- 2 Remove and retain the two screws that secure the display bracket to the door. See [Figure 2](#).

  
**Figure 2: Door and Display Bracket**

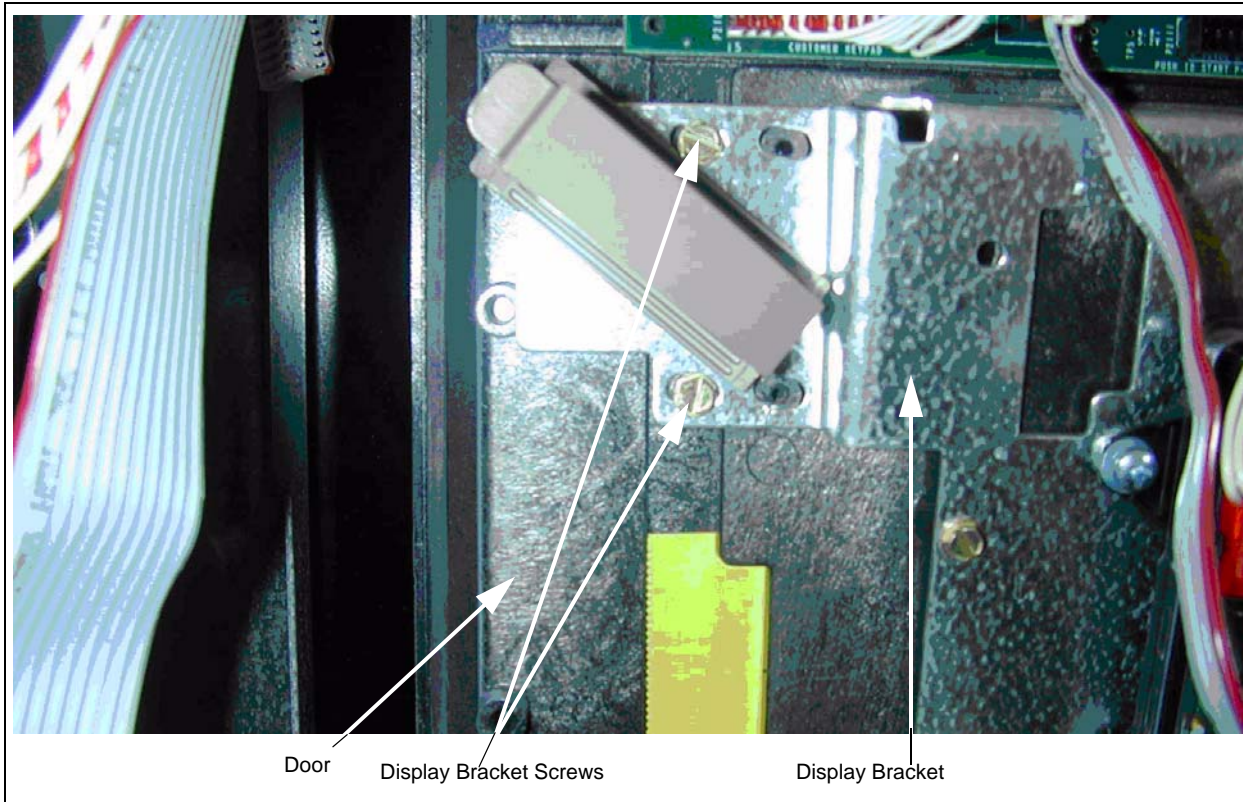

- 3 Hold the speaker/bracket assembly, such that the speaker cone faces the door and the 2 mounting holes are above the speaker. See [Figure 3](#). Slide the speaker/bracket assembly under the display mounting bracket until the mounting holes align with the mounting holes in the display mounting bracket.

 


Figure 3: Align Mounting Holes

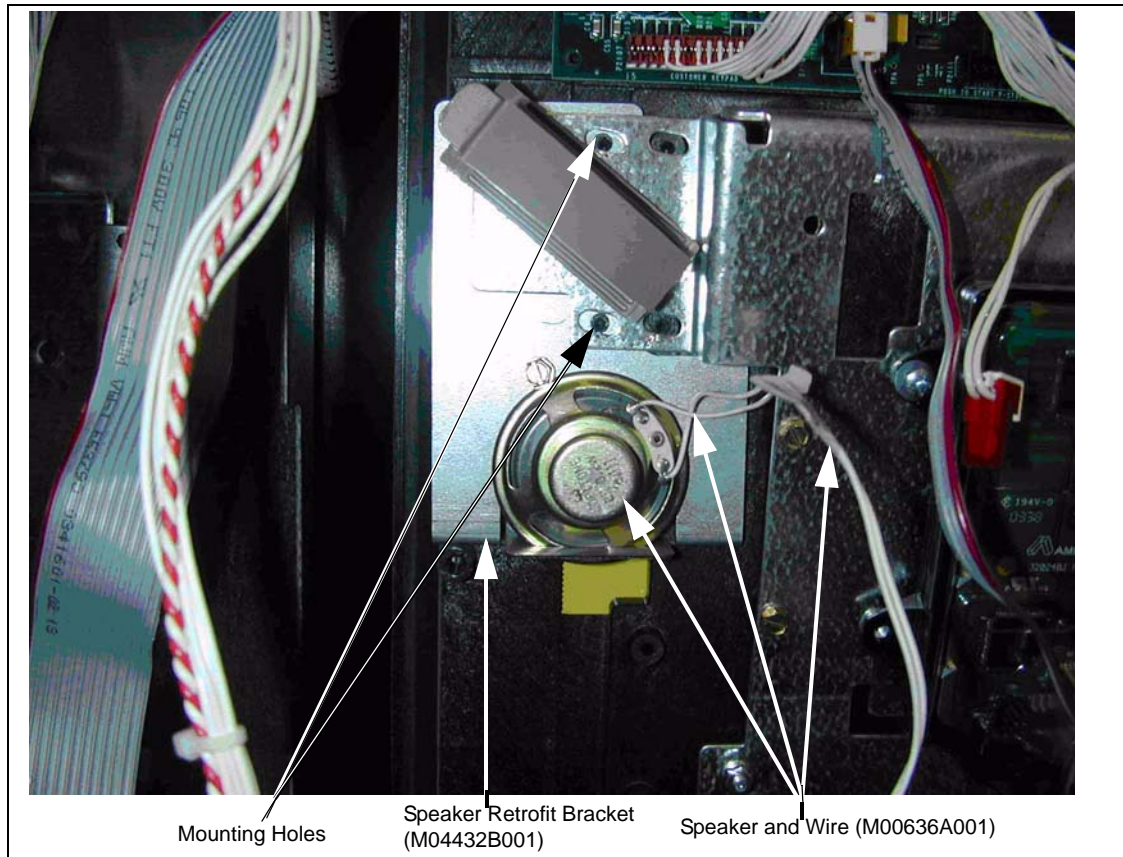

- 4 Re-install the two screws removed in step 2.
- 5 Re-install the cables into the cable clamp removed in step 1.
- 6 Connect the speaker cable connector to the P2104 connector on the door node board. See [Figure 4](#).

Figure 4: Door Node Board

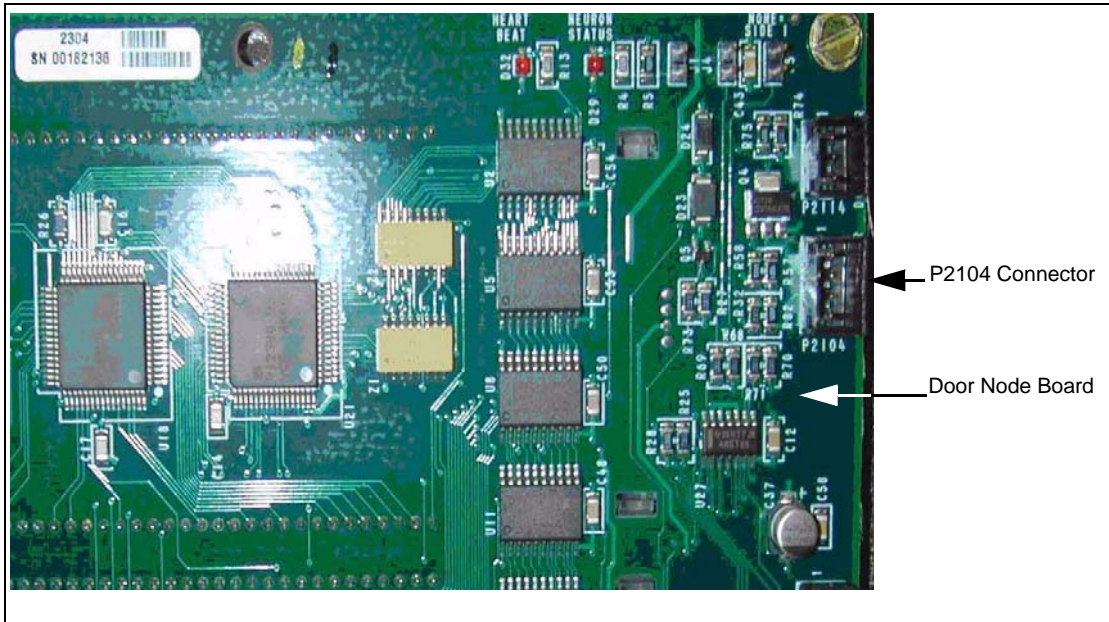

## Completing Installation

- 1 Restore power to the unit.
- 2 CC51 dispenser programming must be set to FC 2 for the beeper to produce sound.
- 3 Test beeper for correct response by activating a fueling position on the side involved.
- 4 Close and secure the CIM door.

*Eclipse®, Encore® and GOLD® are registered trademarks of Gilbarco Inc.*



© 2005 Gilbarco Inc.  
7300 West Friendly Avenue • Post Office Box 22087  
Greensboro, North Carolina 27420  
Phone (336) 547-5000 • <http://www.gilbarco.com> • Printed in the U.S.A.  
MDE-4532 Encore 500 Door Node Speaker (Beeper) Kit Installation Instructions • November 2005