

Installation Instructions

FLOATING SUCTION ADAPTER

The following defined terms are used throughout this literature to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.

DANGER

Indicates presence of a hazard which *will* cause *severe* personal injury, death or substantial property damage if ignored.

CAUTION

Indicates presence of a hazard which *will* or *can* cause *minor* personal injury, death or substantial property damage if ignored.


WARNING

Indicates presence of a hazard which *can* cause *severe* personal injury, death or substantial property damage if ignored.

NOTICE

Indicates special instructions on installations, operation, or maintenance which are important but not related to personal injury hazards.

- 1: Loosen and remove the six 1/4-20 x 1 1/4" socket head cap screws which hold the foot valve seat assembly in place.
- 2: Remove foot valve seat assembly.

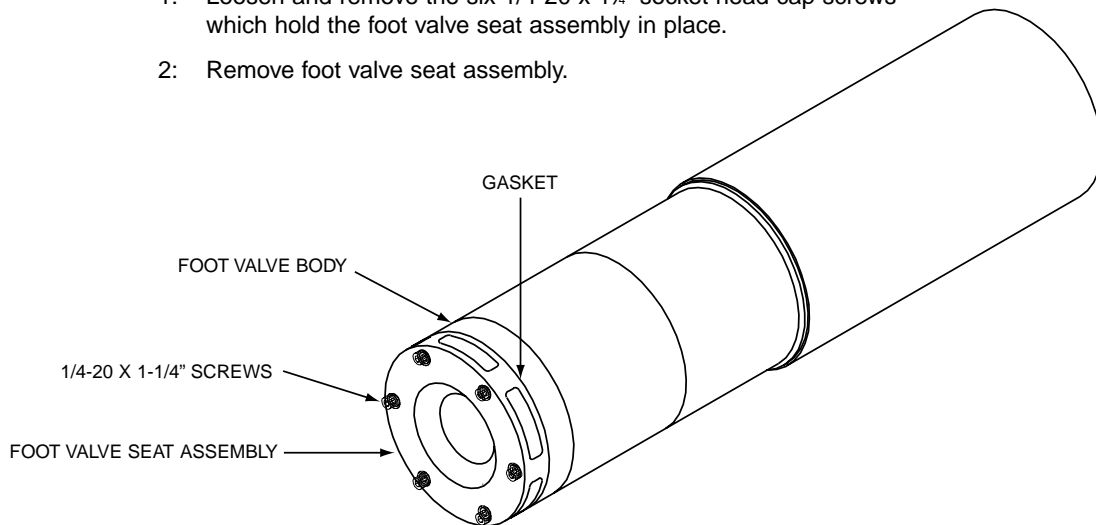

- 3: Use a putty knife to remove any residual gasket material left on the foot valve body.
- 4: Line up the holes in the new gasket and floating suction adapter with the holes in the foot valve body.
- 5: Insert the six 1/4-20 x 1" socket head cap screws and torque to 96-157 in-lbs.

