 
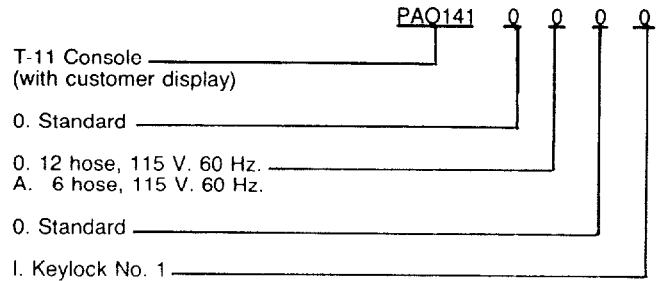 
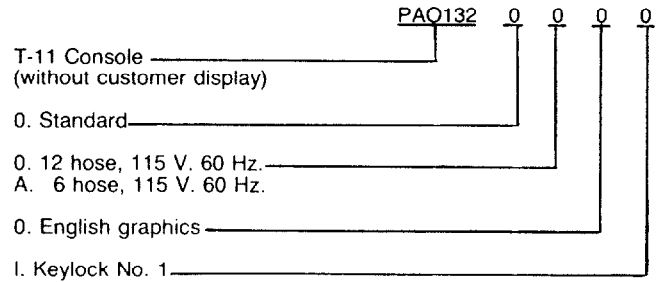 


Gilbarco Parts List

T-11 (Transac[®] Eleven)

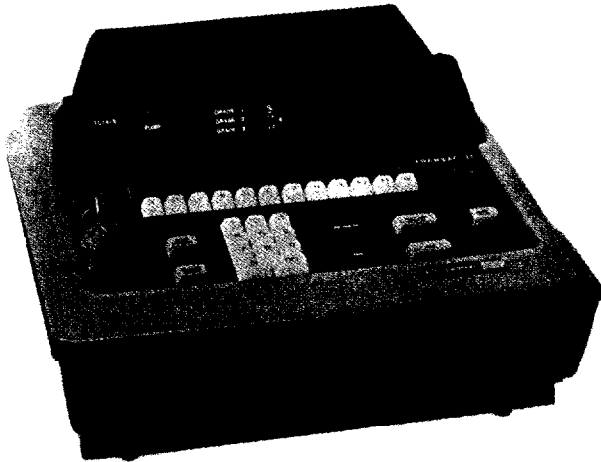

Important Instructions for Ordering Repair Parts

When Ordering Parts — The Symbol Number, Name of the Part, and the Model and Serial Number of the Unit Are Required.

Gilbarco Inc. • 7300 W. Friendly Ave., P.O. Box 22087, Greensboro, NC 27420
 Phone (910) 547-5000 FAX (910) 292-8871 Telex 4949970

WARNING

This equipment generates, uses, and can radiate radio frequency energy and if not installed according to instructions in this manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

 
This document is subject to change without notice. Considerable effort is expended to make it a valuable source of information and reference. However, it is not meant to be a substitute for adequate technical training for those involved in the installation and service of this equipment.

All Gilbarco computer programs (including software on diskettes and within memory chips) are copyrighted by and shall remain the property of Gilbarco Inc. Such computer programs may also contain trade secret information. Duplication, disclosure, modification, or unauthorized use of such computer programs is strictly prohibited, unless otherwise licensed by Gilbarco.

Copyright© 1987 Gilbarco Inc.
All Rights Reserved

TRANSAC is a registered trademark of Gilbarco, Inc..

CONSOLE ASSEMBLY

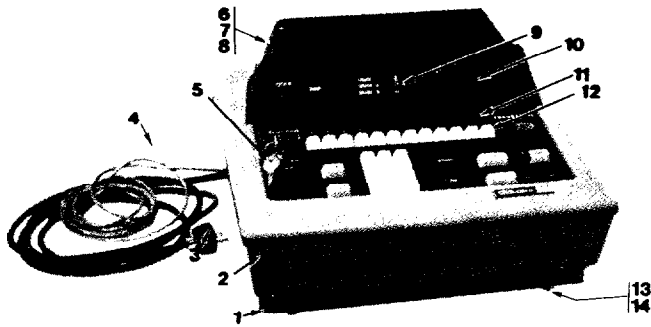

Code No.	No. Req.	Symbol No.	Description
1.	1	T12693-G1	Console base
2.	1	W01508-	Console Housing assembly (includes filter plate, vinyl tape, etc.)
		-G5S	Less Customer Display
		-G9S	With Customer Display
3.	1	R14424-G1	A.C. Cable assembly (part of power supply assembly)
4.	1	N20953-G1	Two-Wire Cable assembly (positive & negative wires)

INSIDE CONSOLE

Code No.	No. Req.	Symbol No.	Description
1.	1	T12677-G1	Processor P.C.B. (Ref: PLATE 4B)
2.	1	R15264-G1	Power Cable Assembly (J1A, J1B, J1C, J1D, J3, & J4)
3.	1	T12695-G1	Power Supply Assembly (Ref: PLATE 3)
4.	1	N20954-	Keyswitch Assembly [includes cable Assembly, Keys (Ref: PLATE 1, item 5) & Keyswitch (Ref: PLATE 2, item 4a)]
		-G1	used with M1 & 01 Keys
		-G2	used with M2 & 02 Keys
		-G3	used with M3 & 03 Keys
		-G4	used with M4 & 04 Keys
4a.	1	Q10583-	Rotary Keyswitch
		-01	used with M1 & 01 Keys
		-02	used with M2 & 02 Keys
		-03	used with M3 & 03 Keys
		-04	used with M4 & 04 Keys
5.	1	R15173-	Keyboard Assembly (use with Keytops listed on PLATE 1)
		-G1	use on 12 hose unit
		-G2	use on 6 hose unit
6.	1	T12694-	Control Panel Assembly (includes items 5, 10, 11 & 12 on PLATE 1; also items 4 & 5 on PLATE 2)
		-G1	use on 12 hose unit
		-G5	use on 6 hose unit
7.	1	N20957-G1	Keyboard Cable Assembly (J2 & J1)
8.	1	N20958-G1	Printer Cable (J3 to printer connection)
9.	4	Q10370-04	Quick Release Fastener

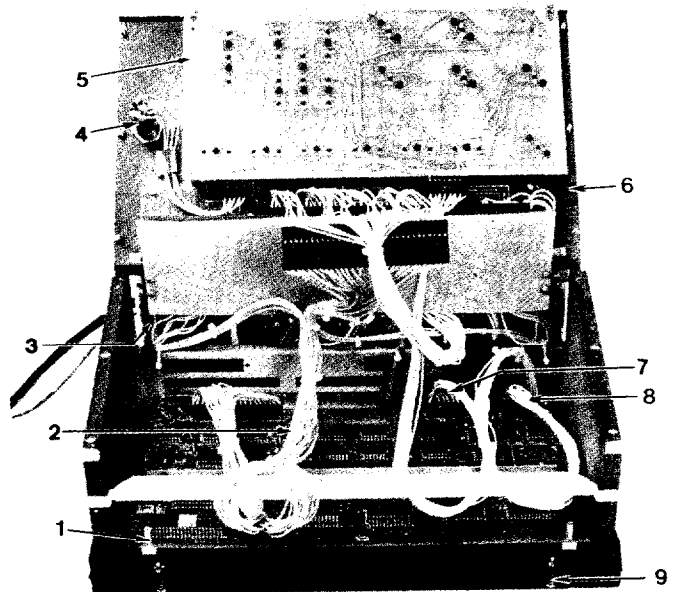 


PLATE 1


Code No.	No. Req.	Symbol No.	Description
5.	as req.	K89699-	Keys
		-08	Manager Key (M1)
		-09	Operator Key (O1)
		-10	Manager Key (M2)
		-11	Operator Key (O2)
		-12	Manager Key (M3)
		-13	Operator Key (O3)
		-14	Manager Key (M4)
		-15	Operator Key (O4)
6.	as req.	T12946-G1	Customer Display assembly (includes items #7-9)
7.	1	T12945	Customer Display Hood
8.	1	T12893-G1	Customer Display P.C.B.
9.	1	R15633	Filter plate
10.	1	T12062-G2	Display P.C.B. (Ref: PLATE 4g)
11.	1	T12071-	L.E.D. P.C.B. (Ref: PLATE 4g)
		-G2	Used on 12 hose units
		-G3	Used on 6 hose units
12.	as req.	Q10552-	Key top
		-31	0
		-15	1
		-16	2
		-17	3
		-18	4
		-19	5
		-20	6
		-21	7
		-22	8
		-23	9
		-24	10
		-25	11
		-26	12
		-30	Authorized
		-32	00
		-33	Paid
		-34	Emergency Stop
		-35	Pump Stop
		-36	Vol./Cash Display
		-11	PPU
		-12	Pump Totals
		-13	Station Totals
13.	4	Q10225-11	Recessed Rubber Bumpers
14.	4	Q10149-22	Pan hd. Screw (6-32 x 3/8" Lg.)

PLATE 2

POWER SUPPLY ASSEMBLY

PLATE 3

 T12695-G6

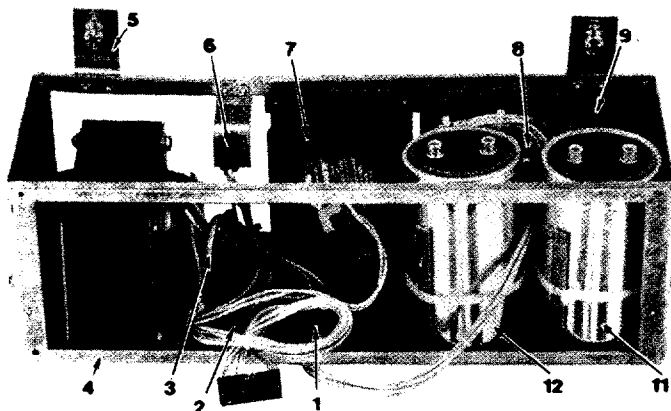


Code No.	No. Req.	Symbol No.	Description	Code No.	No. Req.	Symbol No.	Description
1.	1	K89784-G1	Varistor Assembly (TB1 to TB3)	7.	1	R15843-G1	Fan Assembly (includes N20530-01 Fan & R15844-01 Adapter Plate with pop-rivets)
2.	1	Q10130-12	Terminal Block	8.	1	Q10443-02	Line Filter
3.	1	R14424-G1	A.C. Cable Assembly	9.	2	Q10270-02	Bridge Rectifier
4.	1	T12123-G1	Power Supply Chassis (metal frame)	11.	1	Q10271-08	Capacitor 22000uf, 40v (C1 is part of T13738 Regulator P.C.B.)
5.	2	N20867-G1	Cover Retainer Bracket	12.	1	Q10271-09	Capacitor 26000uf, 30v (C2 is part of T13738 Regulator P.C.B.)
6.	1	Q10131-19	Fuse (3 amp)				

PRINTED CIRCUIT BOARDS

REGULATOR P.C.B.

PLATE 4A

 T13738-G2

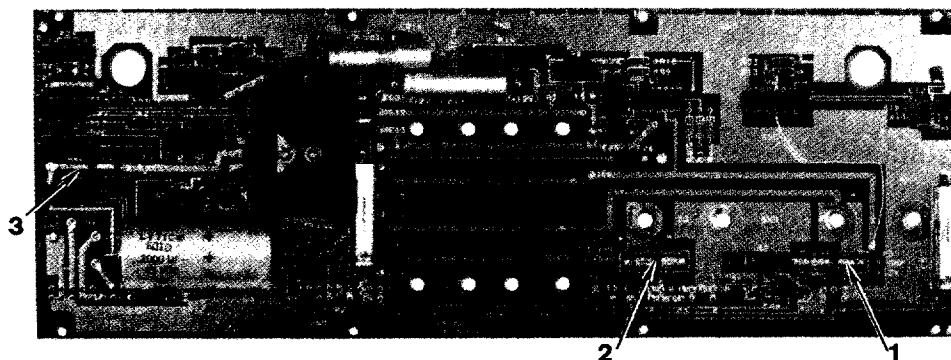


Code No.	No. Req.	Symbol No.	Description
1.	1	Q10444-02	Fuse 5 amp, 32v
2.	1	Q10444-03	Fuse 7.5 amp, 32v
3.	1	Q10444-01	Fuse .5 amp, 125v

PROCESSOR P.C.B.


T12677-G1

Code No.	No. Req.	Symbol No.	Description
1.	1	Q10365-02	Buzzer

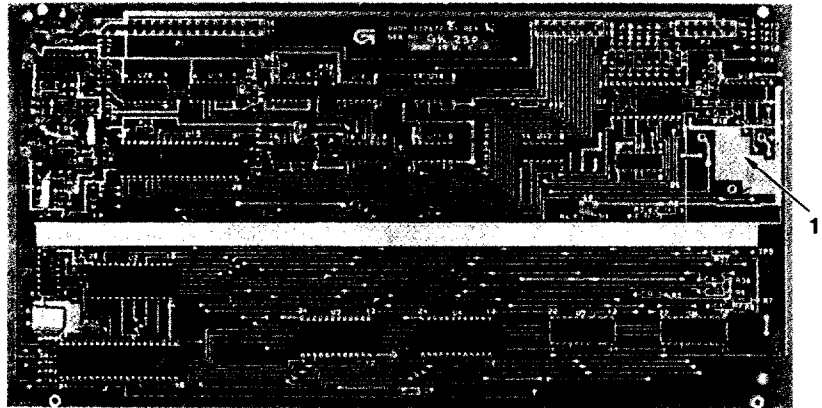 

DISPLAY P.C.B.

 
T12062-G2

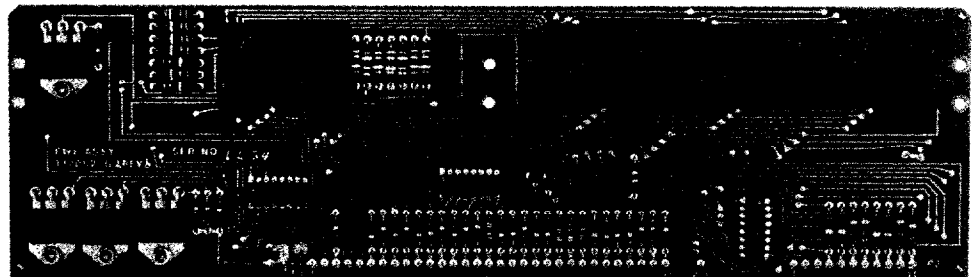

TWO-WIRE P.C.B.


T13743-G1

Code No.	No. Req.	Symbol No.	Description
1.	1	Q10617-01	Fuse .1 amp, 125v

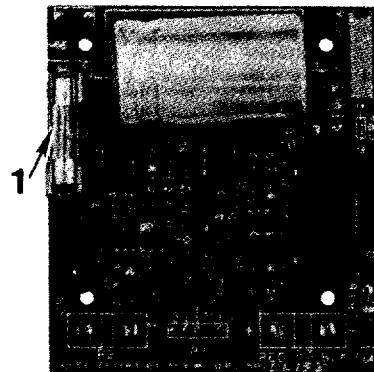 

L.E.D. P.C.B.

 
T12071-
-G2 12 Hose
-G3 6 Hose

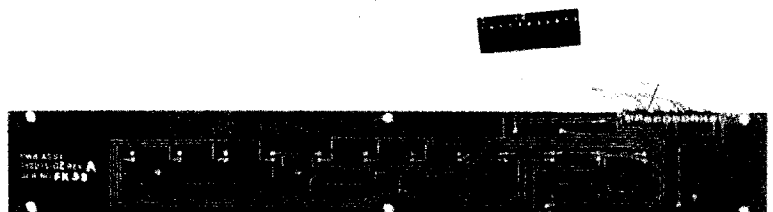

ISOLATION AND DISTRIBUTION BOX

PLATE 5

 PAO1330000 (12 hose)
 PAO1330001 (6 hose)

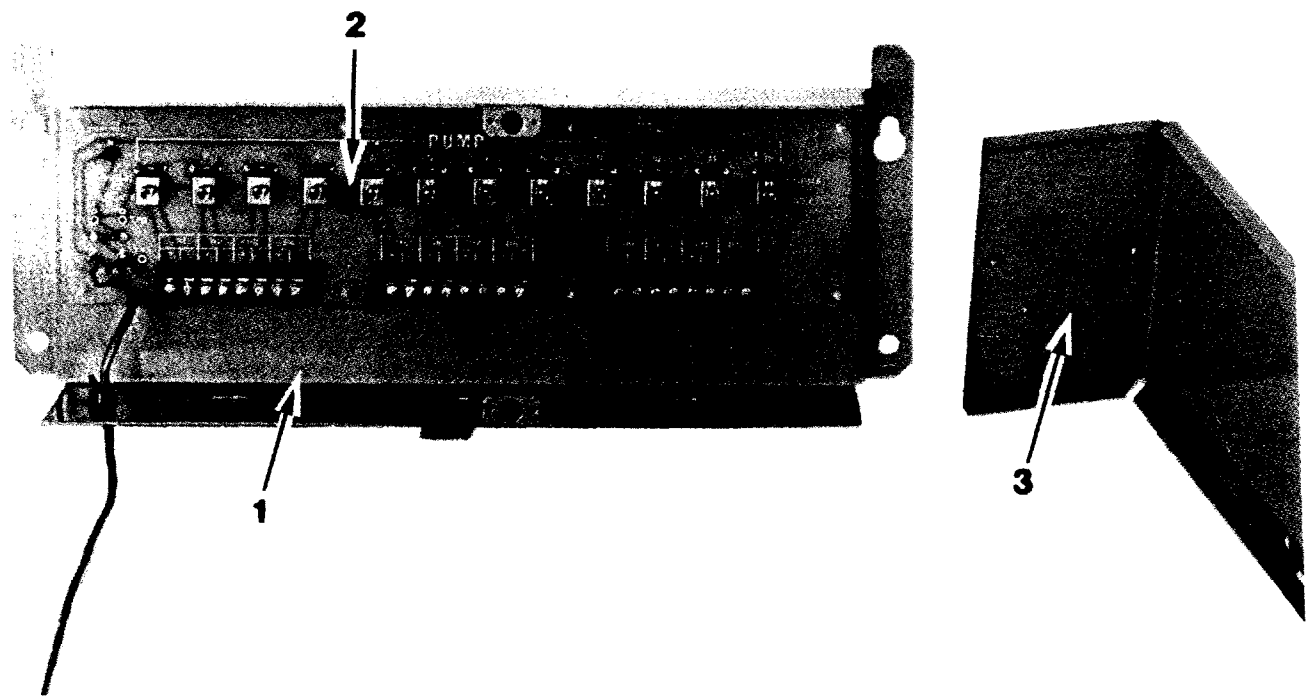

Code No.	No. Req.	Symbol No.	Description
1.	1	T12685-G1	Housing Assembly
2.	1	T12679- -G1	Isolation & Distribution P.C.B. 12 hose
		-G2	6 hose
3.	1	T12686-G1	Cover Assembly