

# **Position-Sensitive Pan/Sump Sensor**

## **Installation Guide**



# Notice

---

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

**Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.**

Veeder-Root reserves the right to change system options or features, or the information contained in this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be photocopied, reproduced, or translated to another language without the prior written consent of Veeder-Root.

Contact TLS Systems Technical Support for additional troubleshooting information at 800-323-1799.

## **DAMAGE CLAIMS / LOST EQUIPMENT**

Thoroughly examine all components and units as soon as they are received. If any cartons are damaged or missing, write a complete and detailed description of the damage or shortage on the face of the freight bill. The carrier's agent must verify the inspection and sign the description. Refuse only the damaged product, not the entire shipment.

Veeder-Root must be notified of any damages and/or shortages within 30 days of receipt of the shipment, as stated in our Terms and Conditions.

## **VEEDER-ROOT'S PREFERRED CARRIER**

1. Contact Veeder-Root Customer Service at 800-873-3313 with the specific part numbers and quantities that were missing or received damaged.
2. Fax signed Bill of Lading (BOL) to Veeder-Root Customer Service at 800-234-5350.
3. Veeder-Root will file the claim with the carrier and replace the damaged/missing product at no charge to the customer. Customer Service will work with production facility to have the replacement product shipped as soon as possible.

## **CUSTOMER'S PREFERRED CARRIER**

1. It is the customer's responsibility to file a claim with their carrier.
2. Customer may submit a replacement purchase order. Customer is responsible for all charges and freight associated with replacement order. Customer Service will work with production facility to have the replacement product shipped as soon as possible.
3. If "lost" equipment is delivered at a later date and is not needed, Veeder-Root will allow a Return to Stock without a restocking fee.
4. Veeder-Root will NOT be responsible for any compensation when a customer chooses their own carrier.

## **RETURN SHIPPING**

For the parts return procedure, please follow the appropriate instructions in the "General Returned Goods Policy" pages in the "Policies and Literature" section of the Veeder-Root **North American Environmental Products** price list. Veeder-Root will not accept any return product without a Return Goods Authorization (RGA) number clearly printed on the outside of the package.

## Introduction

Contractor Certification Requirements .....	1
Product Marking Information .....	1
Related Documents .....	1
Safety Warnings .....	3
Safety Precautions .....	3
Equipment Needed for Installation .....	4

## Installation

Installation Requirements .....	5
Installation Procedure .....	5
Sensor Field Wiring .....	7

## Appendix A: CCC Certification

## Figures

Figure 1.	Example Dispenser Pan Installation .....	5
Figure 2.	Example Dispenser Containment Sump Installation .....	6
Figure 3.	Example STP Containment Sump Installation .....	6
Figure 4.	Sensor Wiring Connections (No Polarity) .....	7
Figure 5.	Epoxy Sealing Two-Wire Connections .....	7

## Introduction

This manual contains procedures for the installation or replacement of the Veeder-Root Position-Sensitive Pan/Sump Sensor.

This manual assumes field wiring has been run from the console to the pan/sump junction box in which the sensor will be installed following instructions in the appropriate console's site prep manual.

Following sensor installation, you will need to setup the console to monitor the sensor.

## Contractor Certification Requirements

Veeder-Root requires the following minimum training certifications for contractors who will install and program the equipment discussed in this manual:

**Service Technician Certification (Previously known as Level 2/3):** Contractors holding valid Technician Certifications are approved to perform installation checkout, startup, programming and operations training, system tests, troubleshooting and servicing for all Veeder-Root Series Tank Monitoring Systems, including Line Leak Detection. This certification includes TLS-3xx and TLS4xx certification training.

**In-Station Diagnostics (ISD-PMC) Technician Certification:** ISD PMC Contractors holding a valid ISD/PMC Certification are approved to perform (ISD/PMC) installation checkout, startup, programming, and operations training. This training also includes troubleshooting and service techniques for the Veeder-Root In-Station Diagnostics system. A current Veeder-Root Technician Certification is a prerequisite for the ISD/PMC course.

All service personal on site must comply with all recommended safety practices identified by OSHA and your employer.

Review and comply with all the safety warnings in the manuals listed in this document above and any other Federal, State or Local requirements.

**Warranty Registrations** may only be submitted by selected Distributors.

## Product Marking Information


### RELATED DOCUMENTS

#### ***Documents Required to Install Equipment***

This intrinsically safe apparatus is only for use as part of a Veeder-Root Automatic Tank Gauging System (ATG Console with probes and sensors). To install intrinsically safe apparatus, use the specific control drawing that appears on the nameplate of the applicable associated apparatus (ATG Console):

Equipment	UL/cUL Control Drawing Document No.
<b>Associated Apparatus</b>	
TLS-450/8600	331940-008
TLS-350, TLS-350R	331940-011
TLS-300	331940-013
TLS4/8601	331940-018

The control drawings contain information related to the correct installation of the overall intrinsically Safe System. This includes information such as maximum number of apparatus, specific apparatus allowed in the system, maximum cable lengths, references to codes, proper grounding and so on. Control drawings can be found on he Internet at <https://www.veeder.com/us/technical-document-library>.

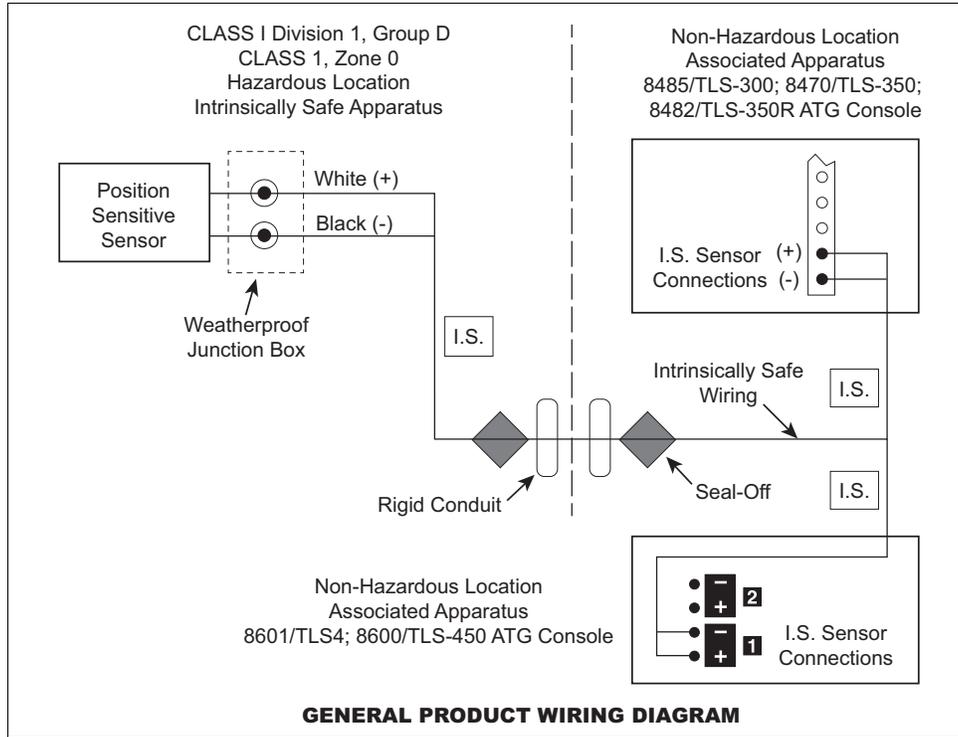

**Product Label Contents**

 <p>CL I, DIV. 1, GP.D CL I, ZONE 0 AEx ia IIA Ex ia IIA TC=T4 SECURITE INTRINSEQUE</p>	<p>I.S. CIRCUIT FOR HAZLOC SENSOR</p>		 <p>2466 c UL US LISTED</p>
	<p>-40°C ≤ Ta ≤ +60°C</p>		
	<p>MANUAL NO. 577013-809</p>		
	<p>F/N 794380-XXX</p>		
	<p>S/N XXXXXX</p>		

## Safety Warnings

 <b>WARNING</b>	
    	<p>This product is to be installed and operated in the highly combustible environment of a gasoline storage tank where flammable liquids and explosive vapors may be present.</p> <p><b>FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS AND SAFETY PRECAUTIONS COULD CAUSE DAMAGE TO PROPERTY, ENVIRONMENT, RESULTING IN SERIOUS INJURY OR DEATH.</b></p> <ol style="list-style-type: none"> <li>1. Read and follow all instructions in this manual, including all safety warnings to protect yourself and others from serious injury, explosion, or electrical shock.</li> <li>2. Comply with all applicable codes including: the National Electrical Code; federal, state, and local codes; and other applicable safety codes.</li> <li>3. To protect yourself and others from being struck by vehicles, block off your work area during installation or service.</li> <li>4. Do not alter or modify any component or substitute components in this kit.</li> <li>5. <b>Warning!</b> Substitution of components may impair intrinsic safety.</li> <li>6. Field wiring to the Sensor must not share a conduit with any non-intrinsically safe device's wiring.</li> <li>7. <b>Warning!</b> To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.</li> <li>8. Before installing or taking the unit into a hazardous area, earth the unit in a safe area to remove any static charge. Then immediately transport the unit to the installation site. Do not rub or clean the unit prior to installation. Cleaning is not required under normal service conditions. Do not rub or clean the unit after installation. If the unit is not fixed to a known earth point when installed, ensure that a separate earth connection is made to prevent the potential of a static discharge. When fitting or removing the unit, use of anti-static footwear or clothing is required.</li> <li>9. Materials used in the construction of this device do not contain, by mass, more than 10% in total of aluminum, magnesium, zirconium and titanium or 7.5% in total of magnesium, titanium and zirconium.</li> </ol>

## Safety Precautions

The following safety symbols are used throughout this manual to alert you to important safety hazards and precautions.

	<p><b>EXPLOSIVE</b> Fuels and their vapors are extremely explosive if ignited.</p>		<p><b>FLAMMABLE</b> Fuels and their vapors are extremely flammable.</p>
	<p><b>ELECTRICITY</b> High voltage exists in, and is supplied to, the device. A potential shock hazard exists.</p>		<p><b>TURN POWER OFF</b> Live power to a device creates a potential shock hazard. Turn Off power to the device and associated accessories when servicing the unit.</p>
	<p><b>WEAR EYE PROTECTION</b> Fuel spray from residual pressure in the lines can cause serious eye injuries. Always wear eye protection.</p>		<p><b>INJURY</b> Careless or improper handling of materials can result in bodily injury.</p>

 <p><b>GLOVES</b> Wear gloves to protect hands from irritation or injury.</p>	 <p><b>USE SAFETY BARRICADES</b> Unauthorized people or vehicles in the work area are dangerous. Always use safety cones or barricades, safety tape, and your vehicle to block the work area.</p>
 <p><b>READ ALL RELATED MANUALS</b> Knowledge of all related procedures before you begin work is important. Read and understand all manuals thoroughly. If you do not understand a procedure, ask someone who does.</p>	

## Equipment Needed for Installation

1. Position-Sensitive Sensor - Form No. 794380-323, includes 12-foot cable w/ connector one end.
2. Wiring Kit - Part No. 312020-990 (Table 1).

**Table 1. Wiring Kit - Part No. 312020-990**

Item	Description	Part No.	Qty.
1	Wire Nut	576008-461	2
2	Sealing Pack	514100-304	1
3	Cord Grip	331028-011	1
4	Tie Wrap	510901-337	2

3. Optional - Universal Sensor Mounting kit - Part No. 330020-012.
4. Optional - 20-foot cable w/ connector one end - Part No. 331102-001

# Installation

## Installation Requirements

1. The sensor should rest in the lowest point of the pan or sump and completely compress the position indicator or you will have a 'Sensor Out' alarm (see example installations).
2. The sensor should be mounted in a true vertical position to ensure proper operation of the sensor.
3. The sensor should be mounted such that you can pull the sensor straight out of the pan/sump if service is required.

## Installation Procedure

**IMPORTANT!** Do not install the sensor if there is any liquid in the dispenser pan. Failure to comply can result in equipment damage or undetected potential environmental and health hazards.



1. Turn OFF power to the TLS Console.
2. Make sure no liquid exists in the pan/sump.
3. Figure 1 through Figure 3 show sensor installation examples using rigid conduit to the console. However, direct burial cable may have been used from the junction box to the console. Also, the examples make use of the optional Universal Sensor Mounting kit. Other mounting methods, such as a tube in which the sensor is inserted, are acceptable if the installation requirements noted above are met.

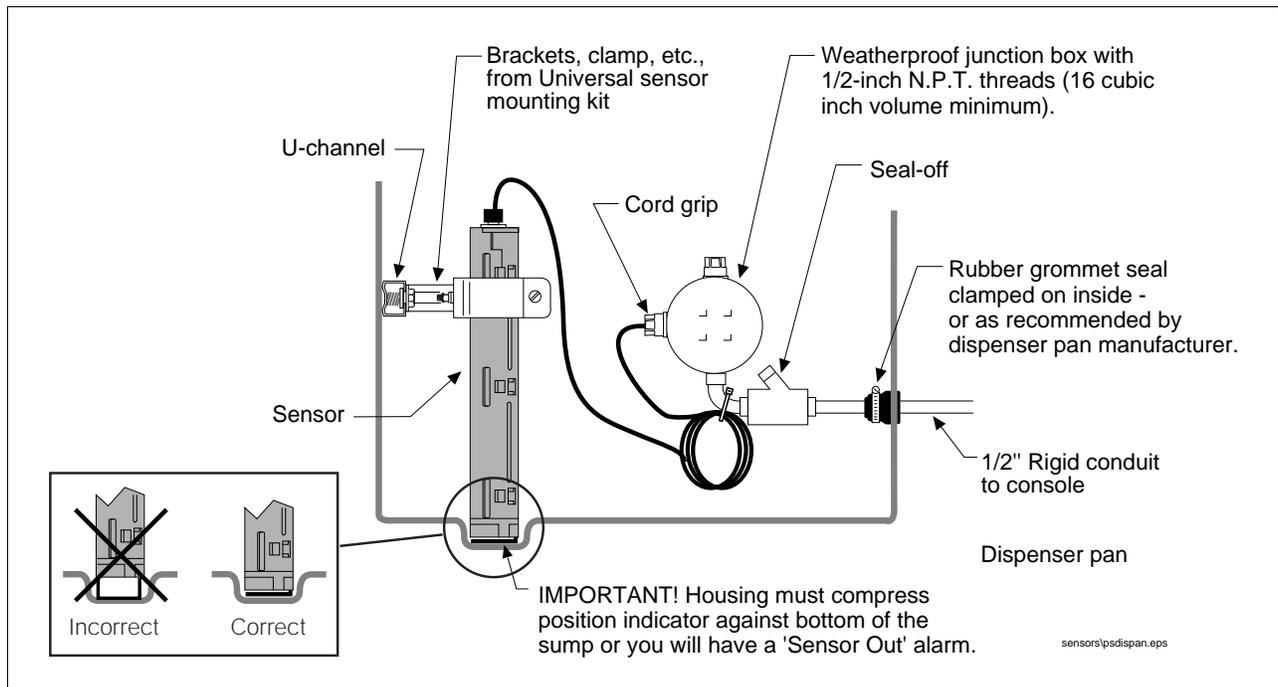


Figure 1. Example Dispenser Pan Installation

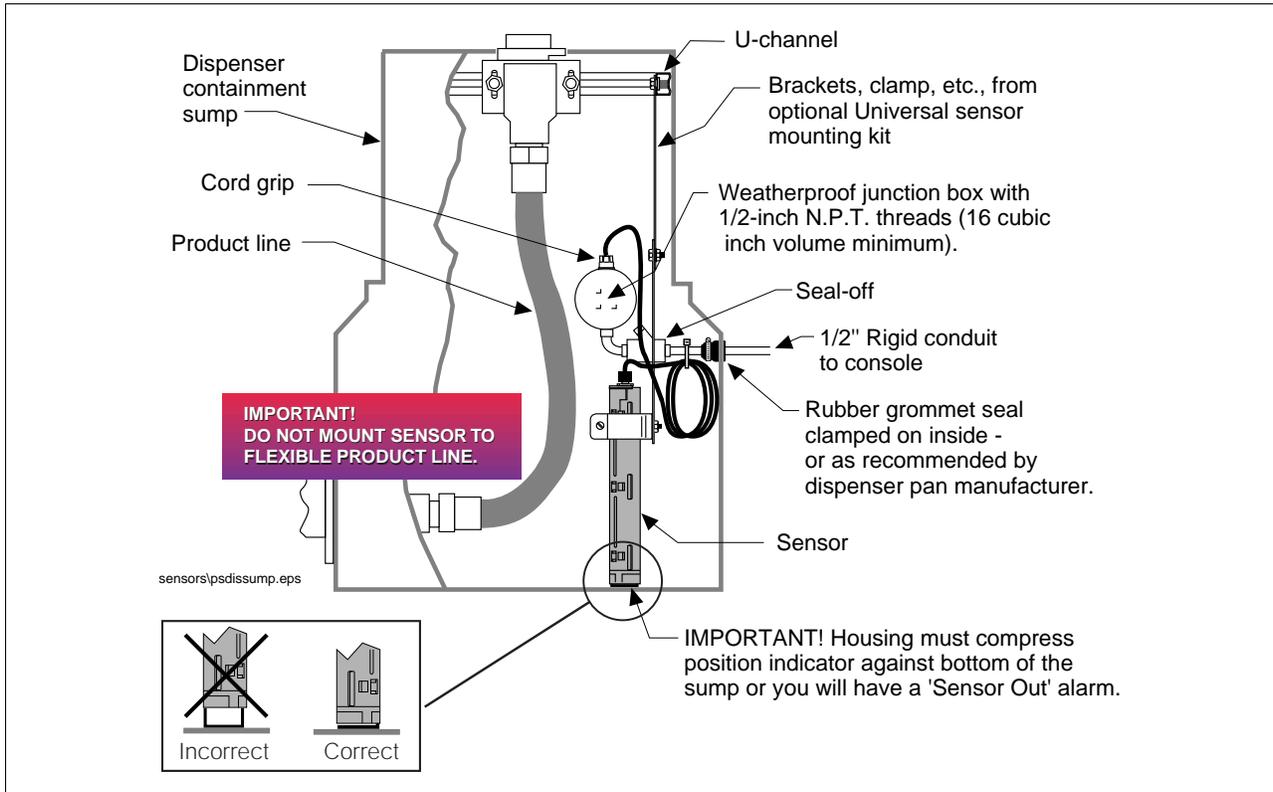


Figure 2. Example Dispenser Containment Sump Installation

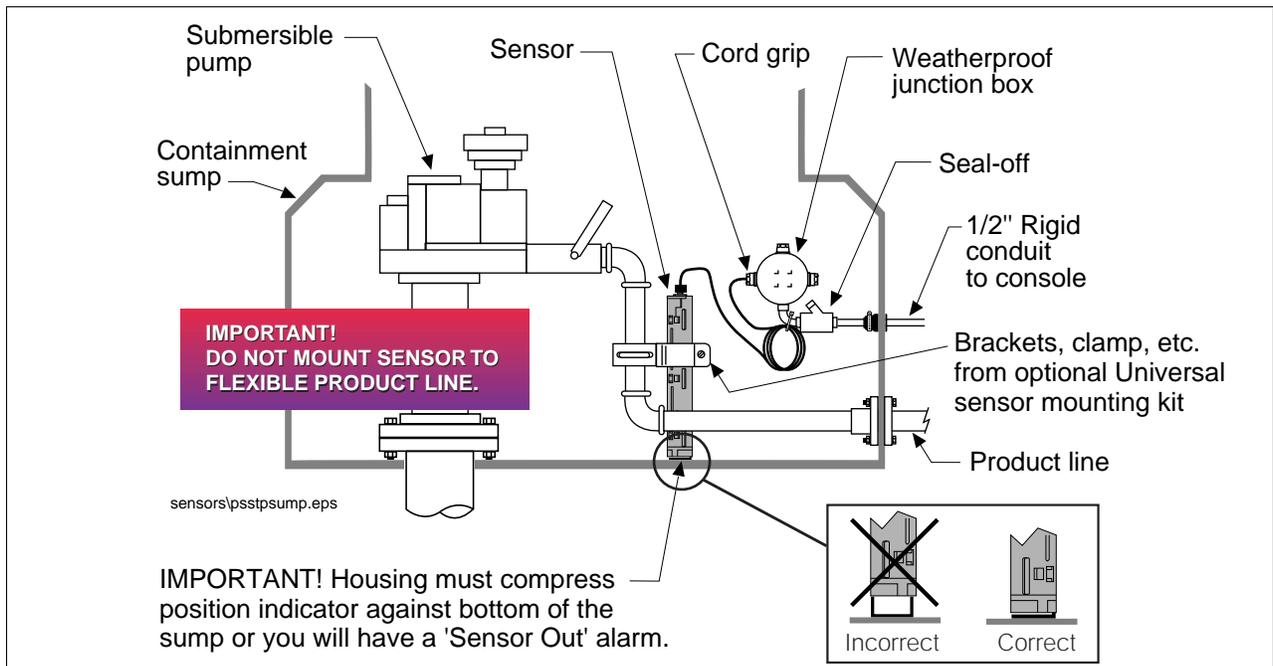


Figure 3. Example STP Containment Sump Installation

### SENSOR FIELD WIRING

1. Screw the connector on the end of the sensor cable onto the plug in the top of the sensor housing.
2. Install the Cord Grip supplied with the wiring kit in the pan/sump junction box in which the field wiring from the console terminates.
3. Coil up the excess cable and tie wrap it out of the way. Feed the two-lead end of the sensor cable through the cord grip in the junction box. Tighten the cord grip nut to ensure a watertight seal at the cable entry.
4. Using wire nuts, connect the two-wire cable to the field wires from the console as shown in Figure 4. and seal connections in epoxy pack as shown in Figure 5.
5. Push the epoxy sealed bag into the junction box. Replace and tighten the junction box cover.

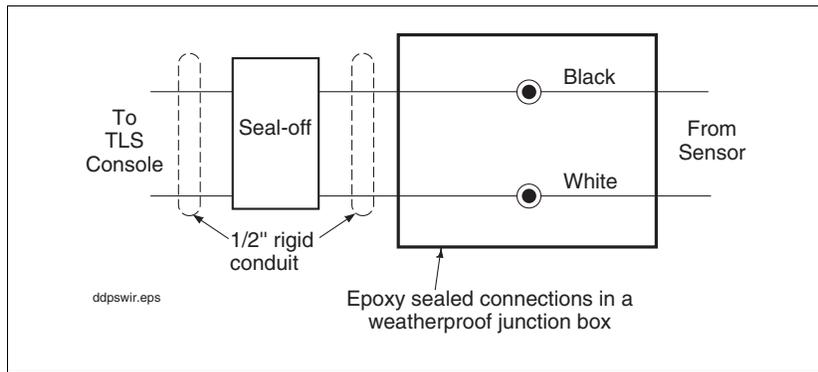


Figure 4. Sensor Wiring Connections (No Polarity)

**A**

**B**

**C**

**Instructions:**  
 NOTE: When temperature is below 50°F (10°C), keep resin in a warm place prior to mixing (e.g., in an inside pocket next to body).

1. Open epoxy sealant package, and remove resin pak.
2. Holding resin pak as shown in A, bend pak along long length.
3. As shown in B, firmly squeeze the RED SIDE of the resin, forcing it through the center seal and into BLACK SIDE.
4. Mix thoroughly to a uniform color by squeezing contents back and forth 25-30 times.
5. Squeeze mixed, warm resin into one end of bag and cutoff other end.
6. Slowly insert wiring connections into sealing pack until they fit snugly against the opposite end as shown in C.
7. Twist open end of bag and use tie wrap to close it off and position the tie wrapped end up until the resin jells.

**CAUTION:** Epoxy sealant is irritating to eyes, respiratory system, and skin. Can cause allergic skin reaction. Contains: epoxy resin and Cycloaliphatic epoxy-carboxylate.

**Precautions:** Wear suitable protective clothing, gloves, eye, and face protection. Use only in well ventilated areas. Wash thoroughly before eating, drinking, or smoking.

consoles/epxy2w.eps

Figure 5. Epoxy Sealing Two-Wire Connections

## Appendix A: CCC Certification

本产品经认证符合 CNCA-C23-01: 2019《强制性产品认证实施规则 防爆电气》的要求。

The product(s) is verified and certified according to CNCA-C23-01: 2019 China Compulsory Certification Implementation Rule on Explosion Protected Electrical Product.



#	产品名称 Product 型号 Type	防爆标志 Ex Marking	3C 证书编号 CCC Certificate No.
1	位置型传感器 7943XX-323	Ex ia IIA T4 Ga	2021312315000429

### 依据标准

Series standards GB/T 3836.1-2021, GB/T 3836.4-2021

<p><b>安全使用条件</b> <i>Specific conditions of safety use:</i></p>	<ul style="list-style-type: none"> <li>- 使用环境温度: <math>-40^{\circ}\text{C} \leq T_a \leq +60^{\circ}\text{C}</math>。</li> <li>- 在进入危险区域或安装之前, 请将本产品安全区域中接地以消除静电电荷。然后立即将设备运输到安装现场。</li> <li>- 在安装之前, 请勿擦拭或清洁本产品。在正常工作状态时, 无需清洁。</li> <li>- 安装后请勿擦拭或清洁本产品。如果在安装时未将本产品固定到已明确的接地点, 请确保进行单独的接地连接, 以防静电释放危险。在安装或拆卸本产品时, 需要使用防静电的鞋类和衣服。</li> <li>- Ambient temperature range: <math>-40^{\circ}\text{C} \leq T_a \leq +60^{\circ}\text{C}</math>.</li> <li>- Before installing or taking into a hazardous area, earth the unit in a safe area to remove any static charge. Then immediately transport the unit to the installation site.</li> <li>- Do not rub or clean the unit prior to installation. Cleaning is not required under normal service conditions.</li> <li>- Do not rub or clean the unit after installation. If the unit is not fixed to a known earth point when installed, ensure that a separate earth connection is made to prevent the potential of static discharge. When fitting or removing the unit, use of anti-static footwear and clothing is required.</li> </ul>
--	--



For technical support, sales or  
other assistance, please visit:  
[veeder.com](http://veeder.com)