
USED FOR MODELS: 9753ETW1 380 VAC

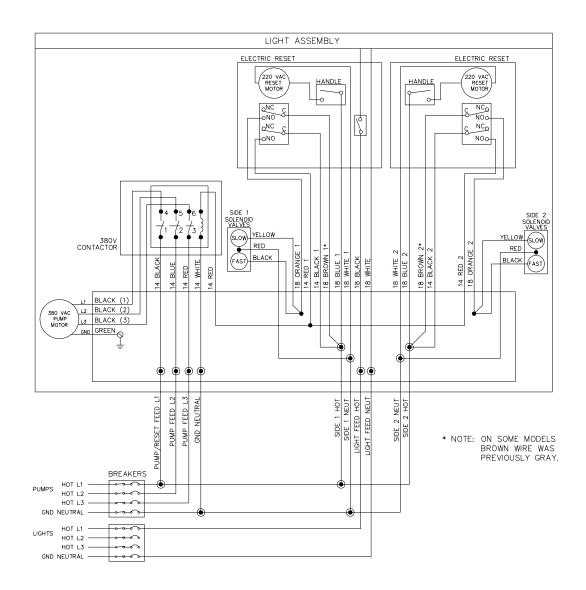

See opposite side of this sheet for Installation Notes.

GASBOY WIRING DIAGRAM 024218

NOTES:

- 1. All wiring is to be installed and used in accordance with local building/fire codes, all Federal State, and Local codes, the National Electrical Code (NFPA 70), NFPA 30, and the Automotive and Marine Service Station Code (NFPA 30A) codes and regulations.
- 2. Indicates Factory Connection
 - Indicates Field Connection
- 3. Reset Complete (switch detect) line is used only when connecting to external control circuitry. Wire must be left capped when not in use.
- 4. Voltage between L1 and grounded Neutral should be 220 VAC.
- 5. See the Installation Manual for more detailed installation (wire size, conduit, etc.) and maintenance requirements.