



Installation Instructions

Prolink 2-slot Add-on

The following terms are used throughout this document to bring attention to the presence of hazards of various risk levels, or to important information concerning use of the product

DANGER!!	Indicates the presence of a hazard that will cause severe personal injury, death, or substantial property damage if ignored .	Caution	Indicates the presence of a hazard that will or can cause minor personal injury or property damage if ignored .
WARNING!	Indicates the presence of a hazard that can cause severe personal injury, death, or substantial property damage if ignored .	Notice	Indicates special instructions on installation, operation, or maintenance that are important but not related to personal injury hazards.

Connecting a 2-slot add-on

Step 1: Lock out and tag out electrical power from the Prolink system.

Step 2: Remove the System Interlink Cover, located on the right-hand side of the Prolink main data chassis. Refer to *figure 1*.

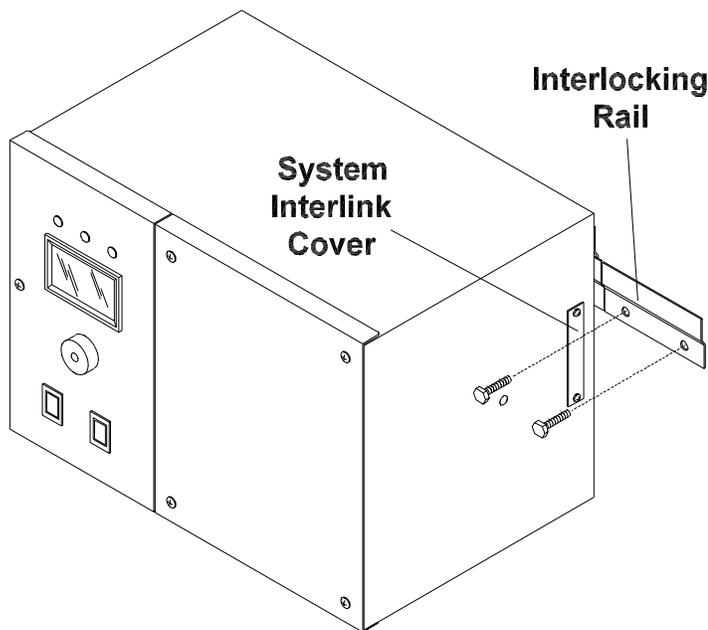


Figure 1 Removing the System Interlink cover and mounting the Interlocking Rail

Step 3: Remove the corresponding System Interlink cover from left hand side of the 2-slot add-on.

Step 4: Mount the provided interlocking rail end to end with the existing interlocking rail. Make sure they are both in-line and level. Refer to *figure 1*.

Step 5: Hang the 2-slot add-on on the second rail as shown in *figure 2*.

For Technical Assistance Call:
1-800-777-2480

RE260-287 Rev B 06/99

Red Jacket/Marley Pump reserves the right to make design improvements and pricing modifications as necessary and without notice. Contact Red Jacket for information relevant to the operation of Red Jacket Equipment with equipment from other manufacturers

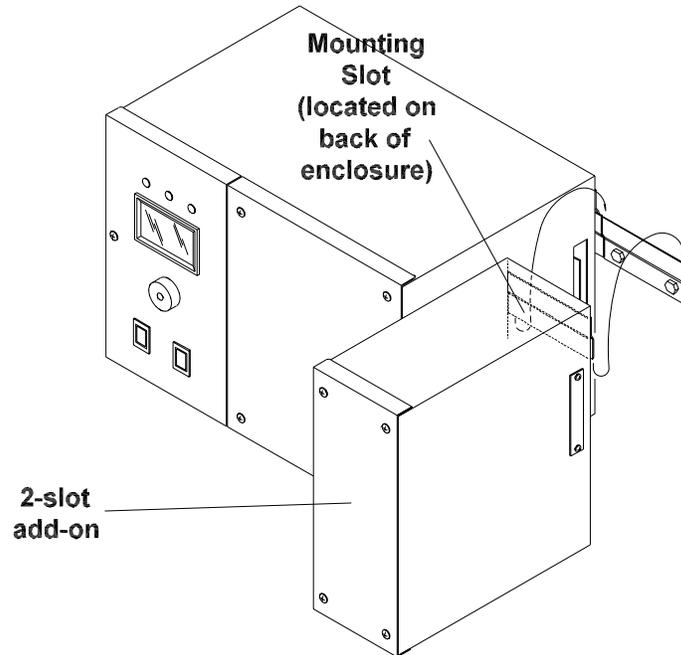


Figure 2 Hanging the 2-slot add-on on the Interlocking Rail

Step 6: Slide the 2-slot along the interlocking rail until the 2-slot add-on backplane connector mates with the Prolink main data chassis backplane board.

Step 7: Use the thumb screw provided to secure the two chassis together as shown in figure 3. Use the provided mounting screw to attach the chassis mounting tab to the wall.

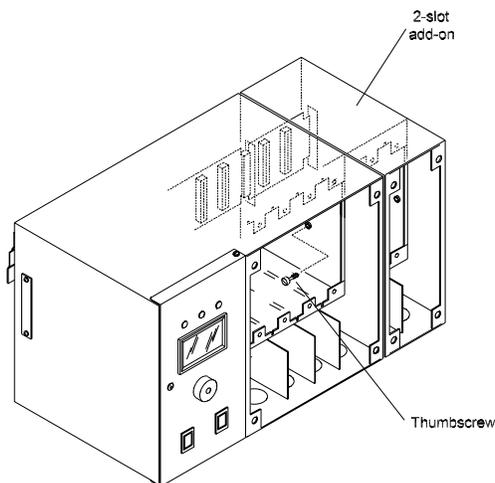


Figure 3 Securing the 2-slot add-on

Step 8: Re-apply power to the Prolink system.