

## Introduction

## **Purpose**

This document provides information regarding the cables that are used to map the FlexPay™ Encrypting PIN Pad (EPP). To map the FlexPay EPP, use the mapping cables and the EPP FlexPay Key Mapping tool. Refer to MDE-4784 FlexPay™ Encrypting PIN Pad Start-up and Service Manual for instructions on how to install and configure the tool.

The following cables are used to map the FlexPay EPP:

- FlexPay EPP Download Cable (M08743A001)
- FlexPay EPP Standalone Download Cable (M08743A002)

## **Table of Contents**

Topic	Page
Introduction	1
Important Safety Information	2
Cables for FlexPay EPP Mapping 4	

## **Related Documents**

Document Number	Title	GOLD Library
MDE-3804	Encore® and Eclipse® Start-up/Service Manual	Encore and Eclipse
MDE-4784	FlexPay Encrypting PIN Pad Start-up and Service Manual	FlexPay

## **Abbreviations and Acronyms**

Term	Description
EPP	Encrypting PIN Pad

# **Important Safety Information**

This section introduces the hazards and safety precautions associated with installing, inspecting, maintaining or servicing this product. Before performing any task on this product, read this safety information and the applicable sections in this manual, where additional hazards and safety precautions for your task will be found. Fire, explosion, electrical shock or pressure release could occur and cause death or serious injury, if these safe service procedures are not followed.

#### **Preliminary Precautions**

You are working in a potentially dangerous environment of flammable fuels, vapors, and high voltage or pressures. Only trained or authorized individuals knowledgeable in the related procedures should install, inspect, maintain or service this equipment.

#### **Emergency Total Electrical Shut-Off**

The first and most important information you must know is how to stop all fuel flow to the pump/dispenser and island. Locate the switch or circuit breakers that shut off all power to all fueling equipment, dispensing devices, and Submerged Turbine Pumps (STPs).

### **⚠** WARNING



The EMERGENCY STOP, ALL STOP, and PUMP STOP buttons at the cashier's station WILL NOT shut off electrical power to the pump/dispenser. This means that even if you activate these stops, fuel may continue to flow uncontrolled.

You must use the TOTAL ELECTRICAL SHUT-OFF in the case of an emergency and not the console's ALL STOP and PUMP STOP or similar keys.

#### **Total Electrical Shut-Off Before Access**

Any procedure that requires access to electrical components or the electronics of the dispenser requires total electrical shut off of that unit. Understand the function and location of this switch or circuit breaker before inspecting, installing, maintaining, or servicing Gilbarco equipment.

### **Evacuating, Barricading and Shutting Off**

Any procedure that requires access to the pump/dispenser or STPs requires the following actions:









- An evacuation of all unauthorized persons and vehicles from the work area
- Use of safety tape, cones or barricades at the affected
- A total electrical shut-off of the affected unit (s)

#### Read the Manual

Read, understand and follow this manual and any other labels or related materials supplied with this equipment. If you do not understand a procedure, call a Gilbarco Authorized Service Contractor or call the Gilbarco Support Center at 1-800-800-7498. It is imperative to your safety and the safety of others to understand the procedures before beginning work.

#### Follow the Regulations

Applicable information is available in National Fire Protection Association (NFPA) 30A; Code for Motor Fuel Dispensing Facilities and Repair Garages, NFPA 70; National Electrical Code (NEC), Occupational Safety and Hazard Association (OSHA) regulations and federal, state, and local codes. All these regulations must be followed. Failure to install, inspect, maintain or service this equipment in accordance with these codes, regulations and standards may lead to legal citations with penalties or affect the safe use and operation of the equipment.

#### **Replacement Parts**

Use only genuine Gilbarco replacement parts and retrofit kits on your pump/dispenser. Using parts other than genuine Gilbarco replacement parts could create a safety hazard and violate local regulations.

## **Safety Symbols and Warning Words**

This section provides important information about warning symbols and boxes.

#### **Alert Symbol**

This safety alert symbol is used in this manual and on warning labels to alert you to a precaution which must be followed to prevent potential personal safety hazards. Obey safety directives that follow this symbol to avoid possible injury or death.

#### Signal Words

These signal words used in this manual and on warning labels tell you the seriousness of particular safety hazards. The precautions below must be followed to prevent death, injury or damage to the equipment:



**DANGER**: Alerts you to a hazard or unsafe practice which will result in death or serious injury.



**WARNING**: Alerts you to a hazard or unsafe practice that could result in death or serious injury.



**CAUTION** with Alert symbol: Designates a hazard or unsafe practice which may result in minor injury. **CAUTION** without Alert symbol: Designates a hazard or unsafe practice which may result in property or equipment damage.

## Working With Fuels and Electrical Energy

#### **Prevent Explosions and Fires**

Fuels and their vapors will explode or burn, if ignited. Spilled or leaking fuels cause vapors. Even filling customer tanks will cause potentially dangerous vapors in the vicinity of the dispenser or island.

#### No Open Fire

Open flames from matches, lighters, welding torches or other sources can ignite fuels and their vapors.



#### No Sparks - No Smoking

Sparks from starting vehicles, starting or using power tools, burning cigarettes, cigars or pipes can also ignite fuels and their vapors. Static electricity, including an electrostatic charge on your body, can cause a spark sufficient to ignite fuel vapors. Every time you get out of a vehicle, touch the metal of your vehicle, to discharge any electrostatic charge before you approach the dispenser island.

#### **Working Alone**

It is highly recommended that someone who is capable of rendering first aid be present during servicing. Familiarize yourself with Cardiopulmonary Resuscitation (CPR) methods, if you work with or around high voltages. This information is available from the American Red Cross. Always advise the station personnel about where you will be working, and caution them not to activate power while you are working on the equipment. Use the OSHA Lockout/ Tagout procedures. If you are not familiar with this requirement, refer to this information in the service manual and OSHA documentation.

#### **Working With Electricity Safely**

Ensure that you use safe and established practices in working with electrical devices. Poorly wired devices may cause a fire, explosion or electrical shock. Ensure that grounding connections are properly made. Take care that sealing devices and compounds are in place. Ensure that you do not pinch wires when replacing covers. Follow OSHA Lockout/Tagout requirements. Station employees and service contractors need to understand and comply with this program completely to ensure safety while the equipment is down.

### **Hazardous Materials**

Some materials present inside electronic enclosures may present a health hazard if not handled correctly. Ensure that you clean hands after handling equipment. Do not place any equipment in the mouth.

#### **⚠** WARNING

The pump/dispenser contains a chemical known to the State of California to cause cancer.

#### **▲ WARNING**

The pump/dispenser contains a chemical known to the State of California to cause birth defects or other reproductive harm.

## In an Emergency

#### **Inform Emergency Personnel**

Compile the following information and inform emergency personnel:

- Location of accident (for example, address, front/back of building, and so on)
- Nature of accident (for example, possible heart attack, run over by car, burns, and so on)
- Age of victim (for example, baby, teenager, middle-age, elderly)
- Whether or not victim has received first aid (for example, stopped bleeding by pressure, and so on)
- Whether or not a victim has vomited (for example, if swallowed or inhaled something, and so on)

### **★** WARNING



Gasoline ingested may cause unconsciousness and burns to internal organs.

Do not induce vomiting.

Keep airway open.

Oxygen may be needed at scene.

Seek medical advice immediately.

### **★** WARNING



Gasoline inhaled may cause unconsciousness and burns to lips, mouth and lungs.

Keep airway open.

Seek medical advice immediately.

#### **⚠** WARNING



Gasoline spilled in eyes may cause burns to eye tissue.

Irrigate eyes with water for approximately 15 minutes.

Seek medical advice immediately.

#### **↑** WARNING



Gasoline spilled on skin may cause burns. Wash area thoroughly with clear water. Seek medical advice immediately.

**IMPORTANT**: Oxygen may be needed at scene if gasoline has been ingested or inhaled. Seek medical advice immediately.


#### Lockout/Tagout

Lockout/Tagout covers servicing and maintenance of machines and equipment in which the unexpected energization or start-up of the machine(s) or equipment or release of stored energy could cause injury to employees or personnel. Lockout/Tagout applies to all mechanical, hydraulic, chemical or other energy, but does not cover electrical hazards. Subpart S of 29 CFR Part 1910 - Electrical Hazards, 29 CFR Part 1910.333 contains specific Lockout/ Tagout provision for electrical hazards.

# **Cables for FlexPay EPP Mapping**

## FlexPay EPP Download Cable (M08743A001)

Figure 1: FlexPay EPP Download Cable (M08743A001)

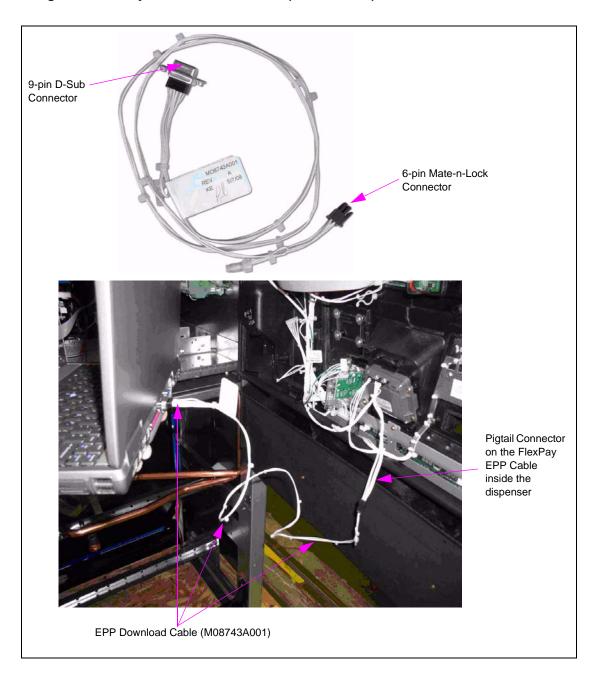

This cable is used when the FlexPay EPP is already installed in the dispenser and the dispenser has been powered up. The power required to program the FlexPay EPP is supplied by the dispenser. Plug the 9-pin D-Sub connector to the back of the laptop and the 6-pin Mate-n-Lock connector to the back of the FlexPay EPP pigtail connector.

Note: This cable cannot be used if the PIN Pad cable attached to the PIN Pad in the dispenser does not have a pigtail.

## FlexPay EPP Standalone Download Cable (M08743A002)

6-pin Mate-n-Lock Connector 9-pin D-Sub Connector **USB** Connector EPP Standalone **Download Cable** (M08743A002)


Figure 2: FlexPay EPP Standalone Download Cable (M08743A002)

This cable can be used in the following ways:

- Attach the cable to the FlexPay EPP before it is installed in the dispenser.
- If the FlexPay EPP is already installed in the dispenser, remove the FlexPay EPP cable from the back of the PIN Pad and plug the cable directly at the back of the FlexPay EPP. The FlexPay EPP will receive the required power from the laptop.

This cable has the following three connections:

- A 9-pin D-Sub connector that should be connected to the back of the laptop.
- A 6-pin Mate-n-Lock connector that should be connected to the back of the FlexPay EPP.
- A USB connector that plugs into a working USB port on the laptop. The USB connection from the laptop provides the power required for the FlexPay EPP to enable it to be programmed or mapped.



Eclipse® and Encore® are registered trademarks of Gilbarco Inc. FlexPay $^{\text{\tiny M}}$  is a trademark of Gilbarco Inc. Phillips $^{\text{\tiny B}}$  is a registered trademark of the Phillips Screw Co.

