

# **Carbon Canister Vapor Polisher**

TLS-450PLUS & TLS-3XX Consoles

## **Installation and Maintenance Guide**



# Notice

---

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

**Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.**

Veeder-Root reserves the right to change system options or features, or the information contained in this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be photocopied, modified or translated to another language without the prior written consent of Veeder-Root. Contact TLS Systems Technical Support for additional troubleshooting information at 800-323-1799.

## **DAMAGE CLAIMS / LOST EQUIPMENT**

Thoroughly examine all components and units as soon as they are received. If any cartons are damaged or missing, write a complete and detailed description of the damage or shortage on the face of the freight bill. The carrier's agent must verify the inspection and sign the description. Refuse only the damaged product, not the entire shipment.

Veeder-Root must be notified of any damages and/or shortages within 30 days of receipt of the shipment, as stated in our Terms and Conditions.

## **VEEDER-ROOT'S PREFERRED CARRIER**

1. Contact Veeder-Root Customer Service at 800-873-3313 with the specific part numbers and quantities that were missing or received damaged.
2. Fax signed Bill of Lading (BOL) to Veeder-Root Customer Service at 800-234-5350.
3. Veeder-Root will file the claim with the carrier and replace the damaged/missing product at no charge to the customer. Customer Service will work with production facility to have the replacement product shipped as soon as possible.

## **CUSTOMER'S PREFERRED CARRIER**

1. It is the customer's responsibility to file a claim with their carrier.
2. Customer may submit a replacement purchase order. Customer is responsible for all charges and freight associated with replacement order. Customer Service will work with production facility to have the replacement product shipped as soon as possible.
3. If "lost" equipment is delivered at a later date and is not needed, Veeder-Root will allow a Return to Stock without a restocking fee.
4. Veeder-Root will NOT be responsible for any compensation when a customer chooses their own carrier.

## **RETURN SHIPPING**

For the parts return procedure, please follow the appropriate instructions in the "General Returned Goods Policy" pages in the "Policies and Literature" section of the Veeder-Root **North American Environmental Products** price list. Veeder-Root will not accept any return product without a Return Goods Authorization (RGA) number clearly printed on the outside of the package.

## **FOR INSTALLATIONS IN THE STATE OF CALIFORNIA**

Please refer to the Vapor Recovery Certification Phase II EVR Executive Orders at the California Air Resources Board website ([www.arb.ca.gov](http://www.arb.ca.gov)) for the latest manual revisions pertaining to Executive Orders VR-202 (Assist Phase II EVR System Including ISD System), VR-203 (Balance Phase II EVR System) or VR-204 (Balance Phase II EVR System Including ISD System).

## Introduction

Contractor Certification Requirements .....	1
Related Documents .....	2
Safety Precautions .....	2
Before You Begin .....	3
Veeder-Root Parts .....	4

<b>Standard Vent Stack Installation Procedure .....</b>	<b>6</b>
---	----------

## Alternate Vent Stack Installations

Alternate Vent Stack Installations .....	14
Offset Mount Installations .....	15
Flat Mounting.....	15

## Test Port Installation

Standard Installation Procedure .....	18
Alternate Lowering of the Upper Test Port .....	18

## Maintenance

Sensor Housing Kit (P/N 330020-644) .....	19
Filter Kit (P/N 330020-645) .....	20
Valve Enclosure Assembly Kit (P/N 330020-643) .....	21
Thermal Probe Kit (P/N 330020-653) .....	23

## Figures

Figure 1.	Typical direct wired installation example .....	7
Figure 2.	Installing CCVP onto bracket .....	8
Figure 3.	Inlet plumbing detail and classified area definition .....	9
Figure 4.	Locating the Vapor Valve Connector.....	10
Figure 5.	Field Wiring Connections for Vapor Valve - Direct-Wired CCVP Only .....	10
Figure 6.	Epoxy Sealing CCVP Vapor Valve Field Wiring Connections - Direct-wired CCVP Only.....	11
Figure 7.	Direct-Wired Vapor Valve Connects to Available TLS-450PLUS USM Module Position.....	12
Figure 8.	Direct-Wired Vapor Valve Connects to Available TLS-3XX Smart Sensor Interface Module Position .....	12
Figure 9.	Through Canopy W/extended Plumbing .....	14
Figure 10.	Vent Stack Mounting .....	14
Figure 11.	Offset Mount on a 2" or 3" Pipe .....	16
Figure 12.	Offset Mount on a Supported Riser.....	17
Figure 13.	Optional Lowering of Upper Test Port.....	18
Figure 14.	Removing Sensor Housing Assembly .....	19
Figure 15.	Replacing sensor housing assembly.....	19
Figure 16.	Accessing the VALVE FILTER and O-Ring.....	20
Figure 17.	Replacing the Valve Filter and O-Ring .....	20
Figure 18.	Removing Vapor Valve Assembly .....	21
Figure 19.	Replacing Vapor Valve Assembly .....	22
Figure 20.	CCVP Thermal Probe.....	23
Figure 21.	Preparing the Thermal Probe Cable for the Protective Boot.....	24
Figure 22.	Positioning the Tie Wrap Over the Probe Cable Protective Boot.....	24

## Tables

Table 1.	CCVP 2" Installation Kit .....	4
Table 2.	CCVP 3" Installation Kit .....	5
Table 3.	CCVP Replacement Parts Kits .....	5

## Introduction

This manual contains instructions to install a Veeder-Root Carbon Canister Vapor Polisher (CCVP) into a gasoline tank vent pipe.

For a CCVP Vapor Valve that will be direct wired to a TLS console, this manual assumes all preliminary site preparation is completed, and that wiring from the console to a CCVP intrinsically-safe junction box is in place and meets the requirements set out in the appropriate console Site Prep manual.

For wireless CCVP installations, follow the steps herein to install the CCVP itself, but refer to manual 577013-964 for installation of, and connection to, the wireless components.

## Contractor Certification Requirements

Veeder-Root requires the following minimum training certifications for contractors who will install and set up the equipment discussed in this manual:

Veeder-Root Contractor Certification Requirements	Installer Certification <sup>6</sup>	ATG Technician Certification <sup>7</sup>	VR Vapor Products Certification <sup>8</sup>	TLS-450PLUS EVR for CA Certification
Install <sup>1</sup> ISD	X	X	X	X
Install PMC	X	X	X	X
Install CCVP	X	X	X	X
Install Wireless ISD/PMC	X	X	X	X
Installation Checkout <sup>2</sup>		X	X	X
ATG Startup <sup>3</sup> / Training <sup>4</sup> / Service <sup>5</sup>		X	X	X
ISD Startup / Training / Service			X	X
PMC Startup / Training / Service			X	X
CCVP Startup / Training / Service			X	X
Wireless ISD/PMC Startup / Training / Service			X	X
Install Pressure Sensor (ATG)	X	X	X	X
Maintain Pressure Sensor (ATG)		X	X	X
Calibrate Pressure Sensor (ATG)		X	X	X
Clear ATG Pressure Sensor Alarm (ATG)		X	X	X
Clear ISD/PMC Alarms (ISD/PMC)			X	X
<sup>1</sup> Perform wiring and conduit routing; equipment mounting <sup>2</sup> Inspect wiring and conduit routing; equipment mounting <sup>3</sup> Turn power on, program and test the systems <sup>4</sup> Provide supervised field experience in service techniques and operations <sup>5</sup> Troubleshoot and provide routing maintenance <sup>6</sup> UST Monitoring Systems – Installer (Level 1) <sup>7</sup> Certified UST Monitoring Technician <sup>8</sup> VR Vapor Products				

All service personnel on site must comply with all recommended safety practices identified by OSHA and your employer. Review and comply with all the safety warnings in this and any related documents, and any other Federal, State, or Local requirements.










**Warranty Registrations** may only be submitted by selected Distributors.








## Related Documents

576013-879	TLS-3XX Series Consoles Site Prep Manual
577013-937	In-Station Diagnostics Install, Setup & Operation Manual - V-R Polisher/Franklin CAS (TLS-350)
577013-948	Pressure Management Control Install, Setup and Operation Manual - Healy Assist EVR (TLS-350)
576013-858	Direct Burial Cable Installation Guide
577013-964	TLS RF Wireless 2 System (W2) Installation Manual
331940-012	TLS RF System Control Drawing
577014-073	TLS-450PLUS Site Prep & Installation Manual
577014-033	TLS-XB Site Prep and Installation Manual
577014-484	Veeder-Root ISD For TLS-450PLUS Consoles Install Manual - V-R Polisher/Franklin CAS
577014-460	Veeder-Root PMC For TLS-450PLUS Consoles Install Manual - V-R Polisher

## Safety Precautions

The following safety symbols may be used throughout this manual to alert you to important safety hazards and precautions.

 <p><b>EXPLOSIVE</b> Fuels and their vapors are extremely explosive if ignited.</p>	 <p><b>FLAMMABLE</b> Fuels and their vapors are extremely flammable.</p>
 <p><b>ELECTRICITY</b> High voltage exists in, and is supplied to, the device. A potential shock hazard exists.</p>	 <p><b>TURN POWER OFF</b> Live power to a device creates a potential shock hazard. Turn Off power to the device and associated accessories when servicing the unit.</p>
 <p><b>READ ALL RELATED MANUALS</b> Knowledge of all related procedures before you begin work is important. Read and understand all manuals thoroughly. If you do not understand a procedure, ask someone who does.</p>	 <p><b>USE SAFETY BARRICADES</b> Unauthorized people or vehicles in the work area are dangerous. Always use safety cones or barricades, safety tape, and your vehicle to block the work area.</p>
<p><b>WARNING</b> <b>WARNING</b> indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>	<p><b>NOTICE</b> <b>NOTICE</b> is used to address practices not related to physical injury.</p>
 <p><b>GLOVES</b> Wear gloves to protect hands from irritation or injury.</p>	 <p><b>WEAR EYE PROTECTION</b> Wear eye protection when working with pressurized fuel lines or epoxy sealant to avoid possible eye injury.</p>
 <p><b>INJURY</b> Careless or improper handling of materials can result in bodily injury.</p>	

 <b>WARNING</b>	
     	<p>This product is to be installed and operated in the highly combustible environment of a gasoline station where flammable liquids and explosive vapors may be present.</p> <p><b>ATTEMPTING TO SERVICE TANK MONITORS AND EQUIPMENT WITHOUT PROPER TRAINING CAN CAUSE DAMAGE TO PROPERTY, ENVIRONMENT, RESULTING IN PERSONAL INJURY OR DEATH.</b></p> <p>The following hazards exist:</p> <ol style="list-style-type: none"> <li>1. Electrical shock resulting in serious injury or death may result if power is on during installation and the device is improperly installed.</li> <li>2. Product leakage could cause severe environmental damage or explosion resulting in death, serious personal injury, property loss and equipment damage.</li> </ol> <p>Observe the following precautions:</p> <ol style="list-style-type: none"> <li>1. Read and follow all instructions in this manual, including all safety warnings.</li> <li>2. Comply with all applicable codes including: the National Electrical Code; federal, state, and local codes; and other applicable safety codes.</li> <li>3. Before installing this device, turn Off, tag/lock out power to the system, including console and submersible pumps.</li> <li>4. To protect yourself and others from being struck by vehicles, block off your work area during installation or service.</li> <li>5. Substitution of components may impair intrinsic safety.</li> </ol>

## Before You Begin

- Comply with all recommended safety practices identified by OSHA (Occupational Safety and Health Administration) and your employer.
- The canister can only be installed in systems with a vapor recovery vent stack fitted with a UL Listed pressure/vacuum (P/V) valve (ref. [https://www.arb.ca.gov/testmeth/vol2/tp201.1e\\_cert\\_may2006.pdf](https://www.arb.ca.gov/testmeth/vol2/tp201.1e_cert_may2006.pdf)). The outlet of the carbon canister vapor valve has the same classified area requirements as the P/V valve per figure 3 and is subject to approval by the local authority having jurisdiction.
- Where separate intrinsically safe circuits are installed in the same raceway they must be segregated in accordance with Article 504 of the NEC.
- Review and comply with all the safety warnings in the installation manuals and any other national, state or local requirements.
- Consult Figure 1 along with the National Electrical Code and the compliance section of 576013-879 TLS-3XX or 577014-073 TLS-450PLUS Series Console Site Prep Manual, as appropriate, before installing the CCVP into the hazardous location. If the Carbon Canister is being wired directly to a TLS console, a 2-conductor, 18 AWG shielded cable must be installed in intrinsically safe conduit from the intrinsically safe wiring compartment of the TLS console to the carbon canister. Conduit for direct wired installations must be properly sealed in accordance with the latest National Electric Code (NFPA 70) and the Code for Motor Fuel Dispensing Facilities and Repair Garages (NFPA 30A) since they pass from a Class I, Division 1 or 2 hazardous area into a non-hazardous area.
- Use of direct burial cable may be subject approval by the local authority having jurisdiction. See manual 576013-858 for a complete listing of required materials and an overview of direct burial installations.
- Use only UL certified Gas/TFE yellow Teflon tape on all fittings. Do not use pipe dope to seal pipe threads or fittings in and out of the CCVP.

- Customer supplied vent riser and vent riser fittings shall be standard full weight (ASTM Schedule 40) wrought iron or steel.
- Vapor polisher installation kit provides either 2" tee (Form Number 861290-002) or 3" reducing tee with busing (Form Number 861290-003) to reduce to 1/2" NPT. Customer supplied reducing tee must not reduce from 2" or 3" to less than 1/2" NPT. If tee reduces to larger than 1/2" use appropriate bushing to reduce the tee to 1/2" NPT.
- For new or rebuilt sites, it is recommended that the installation design specify a threaded fitting for joining the vent pipes to the underground piping system.
- Modification to plumbing in the inlet flow path (i.e., excessive bends) to the CCVP can result in non-compliance with local codes and may adversely affect performance if these installation guidelines are not followed. No liquid traps permitted.
- Vent riser threads shall be in accordance with the standard for pipe threads, general purpose (inch) ANSI/ASME B1.20.1-1983.
- The CCVP outlet shall be not less than 12 feet from grade.
- The CCVP outlet shall be located at least 15 feet from powered ventilation air intake devices.
- The CCVP must be mounted vertically.
- The structure to which the CCVP is mounted must be plumb and perpendicular to grade and independently supported and comply with all applicable codes.
- Offset piping and inlet piping to the CCVP shall be installed to avoid bends. No liquid traps permitted.
- Figures and illustrations in this manual represent typical installations and due to site variation, cannot represent all installation situations. Final installation must comply with instructions provided in this manual and all required codes per the jurisdiction having authority.

## Veeder-Root Parts

- Veeder-Root Carbon Canister Vapor Polisher, Form No. 861290-002.

**Table 1. CCVP 2" Installation Kit**

Item	Qty.	Description	P/N
1	1	Carbon Canister	332761-002
2	1	Inlet Piping Kit	330020-638
3	1	2" Mounting Bracket Kit	330020-647
4	1	Group - 2" Pipe and Reducing Tee	332954-002
5	1	CCVP Installation Instructions	577013-920



- Veeder-Root Carbon Canister Vapor Polisher, Form No. 861290-003.

**Table 2. CCVP 3" Installation Kit**

Item	Qty.	Description	P/N
1	1	Carbon Canister	332761-002
2	1	Inlet Piping Kit	330020-638
3	1	3" Mounting Bracket Kit	330020-648
4	1	Group - 3" Pipe, Reducing Tee & Bushing	332954-003
5	1	CCVP Installation Instructions	577013-920

- Veeder-Root CCVP replacement parts kits. Note: Replacement part kits are not included with new canister assemblies and must be ordered separately, as needed. See the maintenance section of this manual for details.

**Table 3. CCVP Replacement Parts Kits**

Item	Qty.	Description	P/N
1	1	Valve Enclosure Assembly Kit	330020-643
2	1	Sensor Housing Kit	330020-644
3	1	Filter Kit	330020-645
4	1	Temperature Probe Kit	330020-653

## Standard Vent Stack Installation Procedure

1. This procedure requires Veeder-Root installation kits and parts. When using customer provided parts refer also to the alternate vent stack installation procedures.
2. The TLS-3XX Site Prep manual (P/N 576013-879) or TLS-450PLUS Site Prep manual (P/N 577014-073), as appropriate, must be consulted when installing a direct-wired carbon canister into hazardous locations. The TLS RF Wireless 2 System (W2) Installation Manual (P/N 577013-964) and document 331940-012, must be consulted when installing a wireless carbon canister into hazardous locations.
3. During the installation, all required national, state and local safety codes must be followed.
4. The CCVP contains an integral vapor valve that operates in conjunction with the pressure/vacuum (P/V) vent. Location of the vapor valve outlet must conform to the same requirements as the P/V vent. Reference Article 514 of the National Electrical code (NEC) and NFPA 30/30A.
5. Do not install the CCVP on unsupported vent pipes. For all customer supplied supports or strut assemblies, wind loading must comply with all required local, state and national codes and shall be rated for 88 pounds (minimum) static load.

**NOTICE** **IMPORTANT! To ensure that the canister outlet is 12 feet (minimum) above grade, the CCVP mounting bracket must be positioned according to dimensions shown in Figure 1 and the U-bolts tightly clamped to the support structure before mounting the canister. The mounting bracket must be centered in line with the outlet of the tee before installing the CCVP.**

6. Following all required national, state, local and site safety precautions, carefully hang the CCVP's notched support tabs onto the top two side studs of its mounting bracket (Step 1 in Figure 2), swing the canister down until all of the slots in the canister's side mounting tabs seat against the studs in the bracket (Step 2 in Figure 2), then tighten the six side nuts to secure the canister onto its bracket (Step 3 in Figure 2).
7. Figure 3 shows important Class I Div 1, Group D and Class I Div 2, Group D radius spheres and operability test valve handle positions of the installed canister.
8. Install a weather-tight junction box, seal off and conduit per all NEC, state and local codes (see example installation in Figure 1).

**NOTICE** **For Wireless installations, the Carbon Canister Vapor Valve cable connects to a TLS RF transmitter, not to field wiring from the TLS Console (see manual 577013-964 for instructions). For wireless installations, skip Step 8. through Step 12.**

9. Connect the two-pin connector of the 6-foot cable provided in the installation kit to the CCVP vapor valve, observing plug polarities (see Figure 4). The other end of this cable is passed through a kit supplied cord grip in the weather tight junction box.
10. Observing polarity, connect the Vapor Valve wiring to the field wiring from the TLS console with wire nuts (see Figure 5). Seal the wire nuts in the epoxy pack following the instructions in Figure 6.
11. Push the epoxy sealed bag into the junction box. Replace and tighten the junction box cover.
12. Connect wiring from the Vapor Valve to the to the TLS-450PLUS Console as shown in Figure 7, or TLS-350 Console as shown in Figure 8, as appropriate.
13. Connect all lower fittings, valve and tubing between the vent pipe and the lower manifold on the CCVP (see Figure 3).
14. Confirm ball valve is in the open, canister to vent stack position (per Figure 3), then insert the clevis pin and secure with the hitch pin.
15. Perform the CCVP Integrity and Flow test.

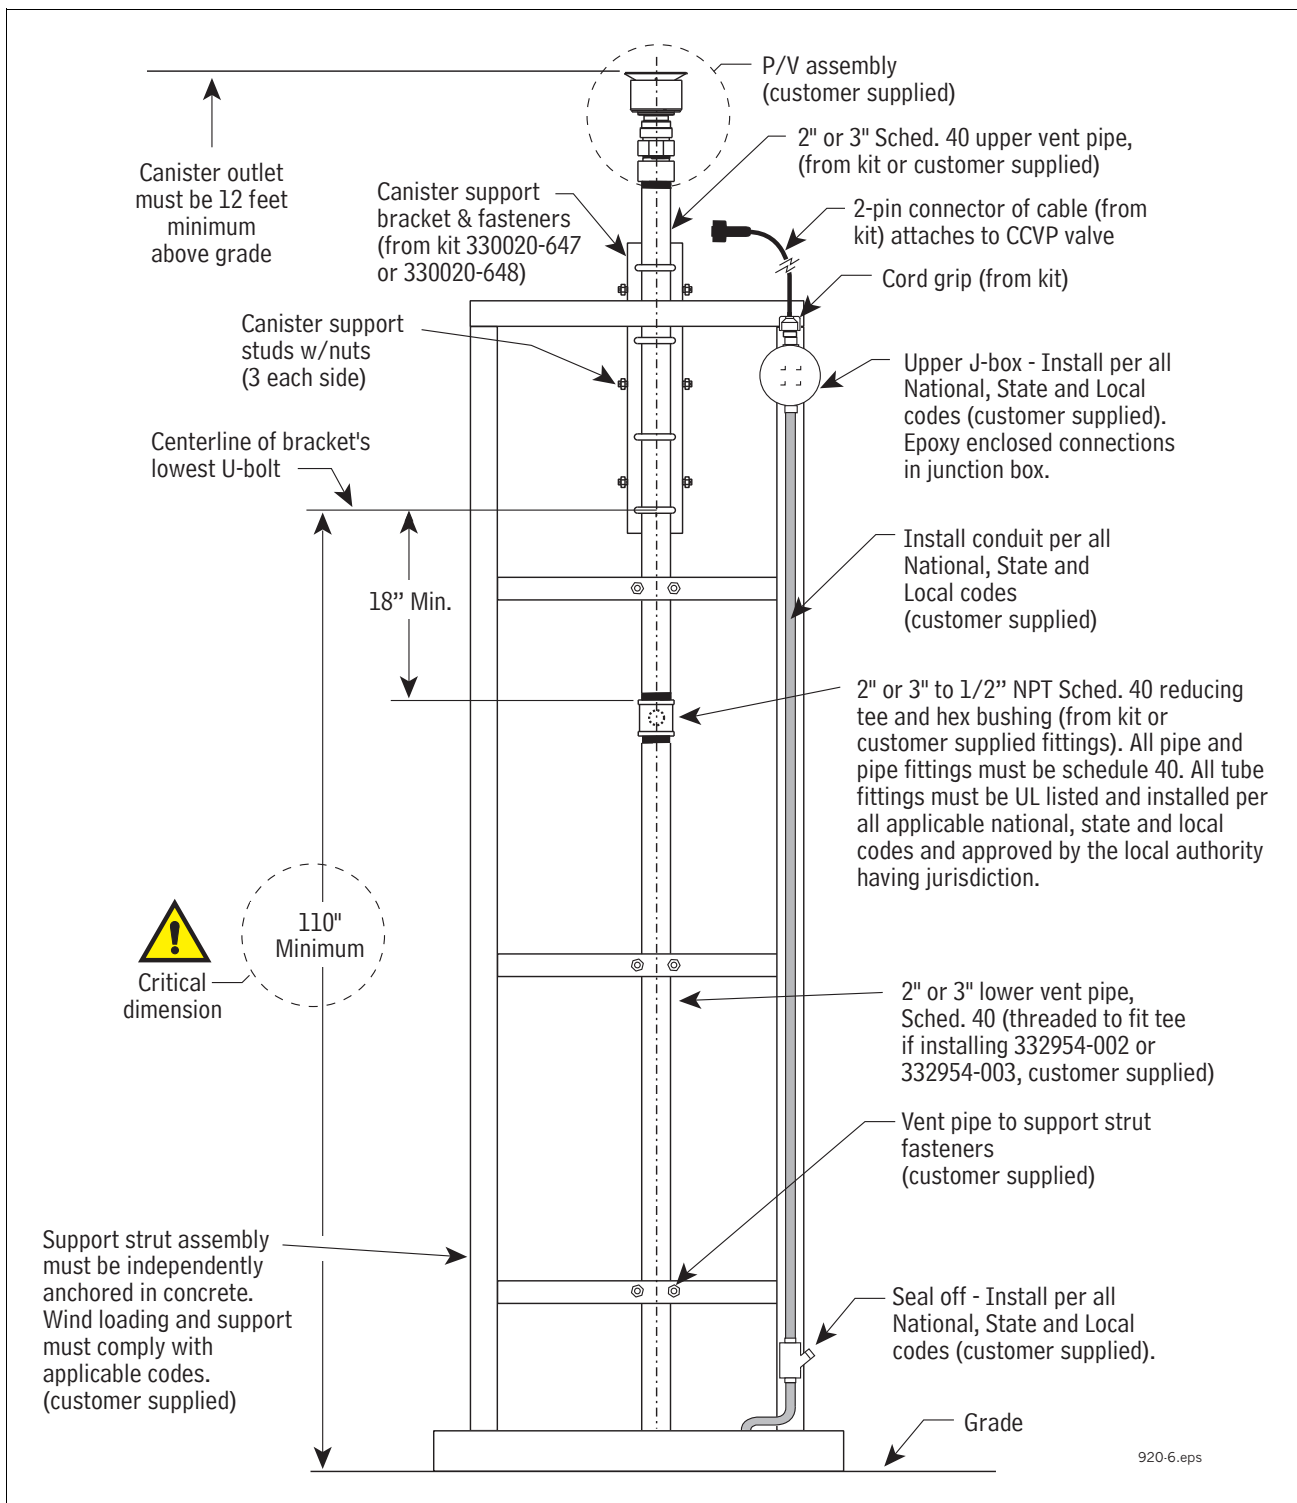


Figure 1. Typical direct wired installation example

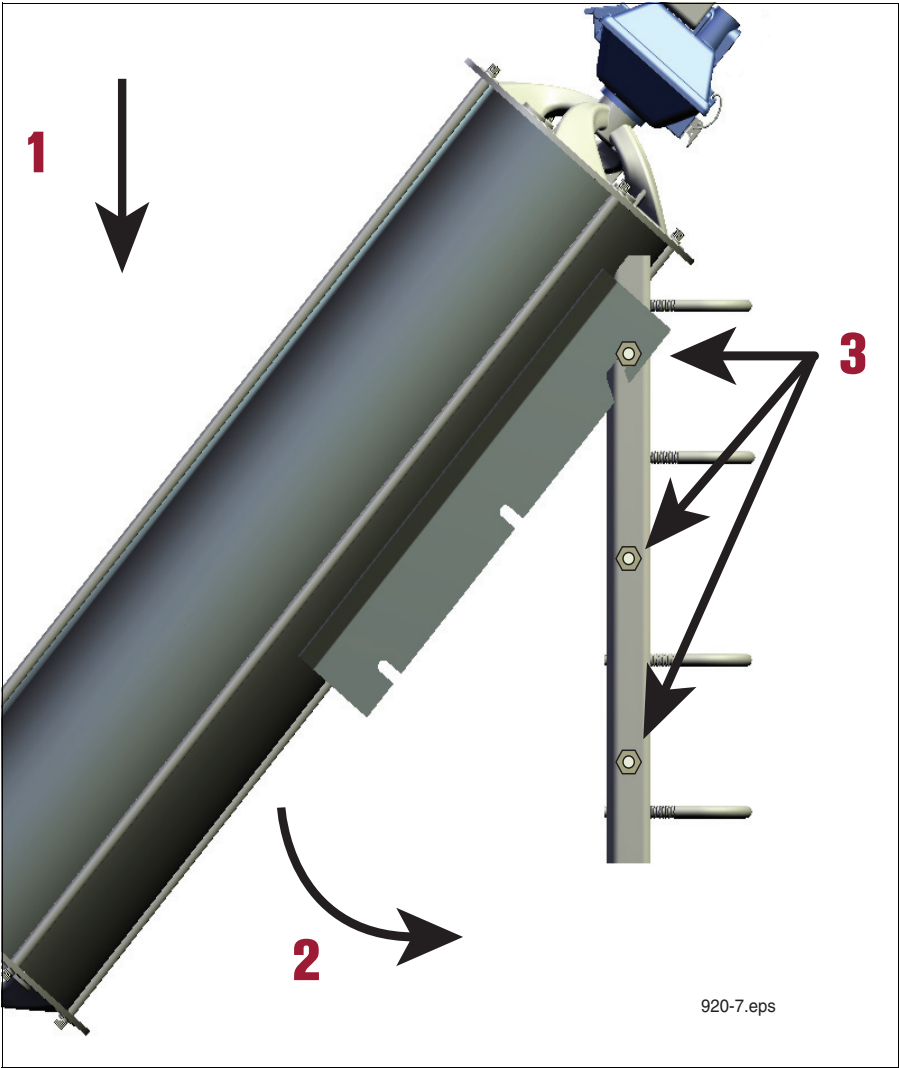


Figure 2. Installing CCVP onto bracket





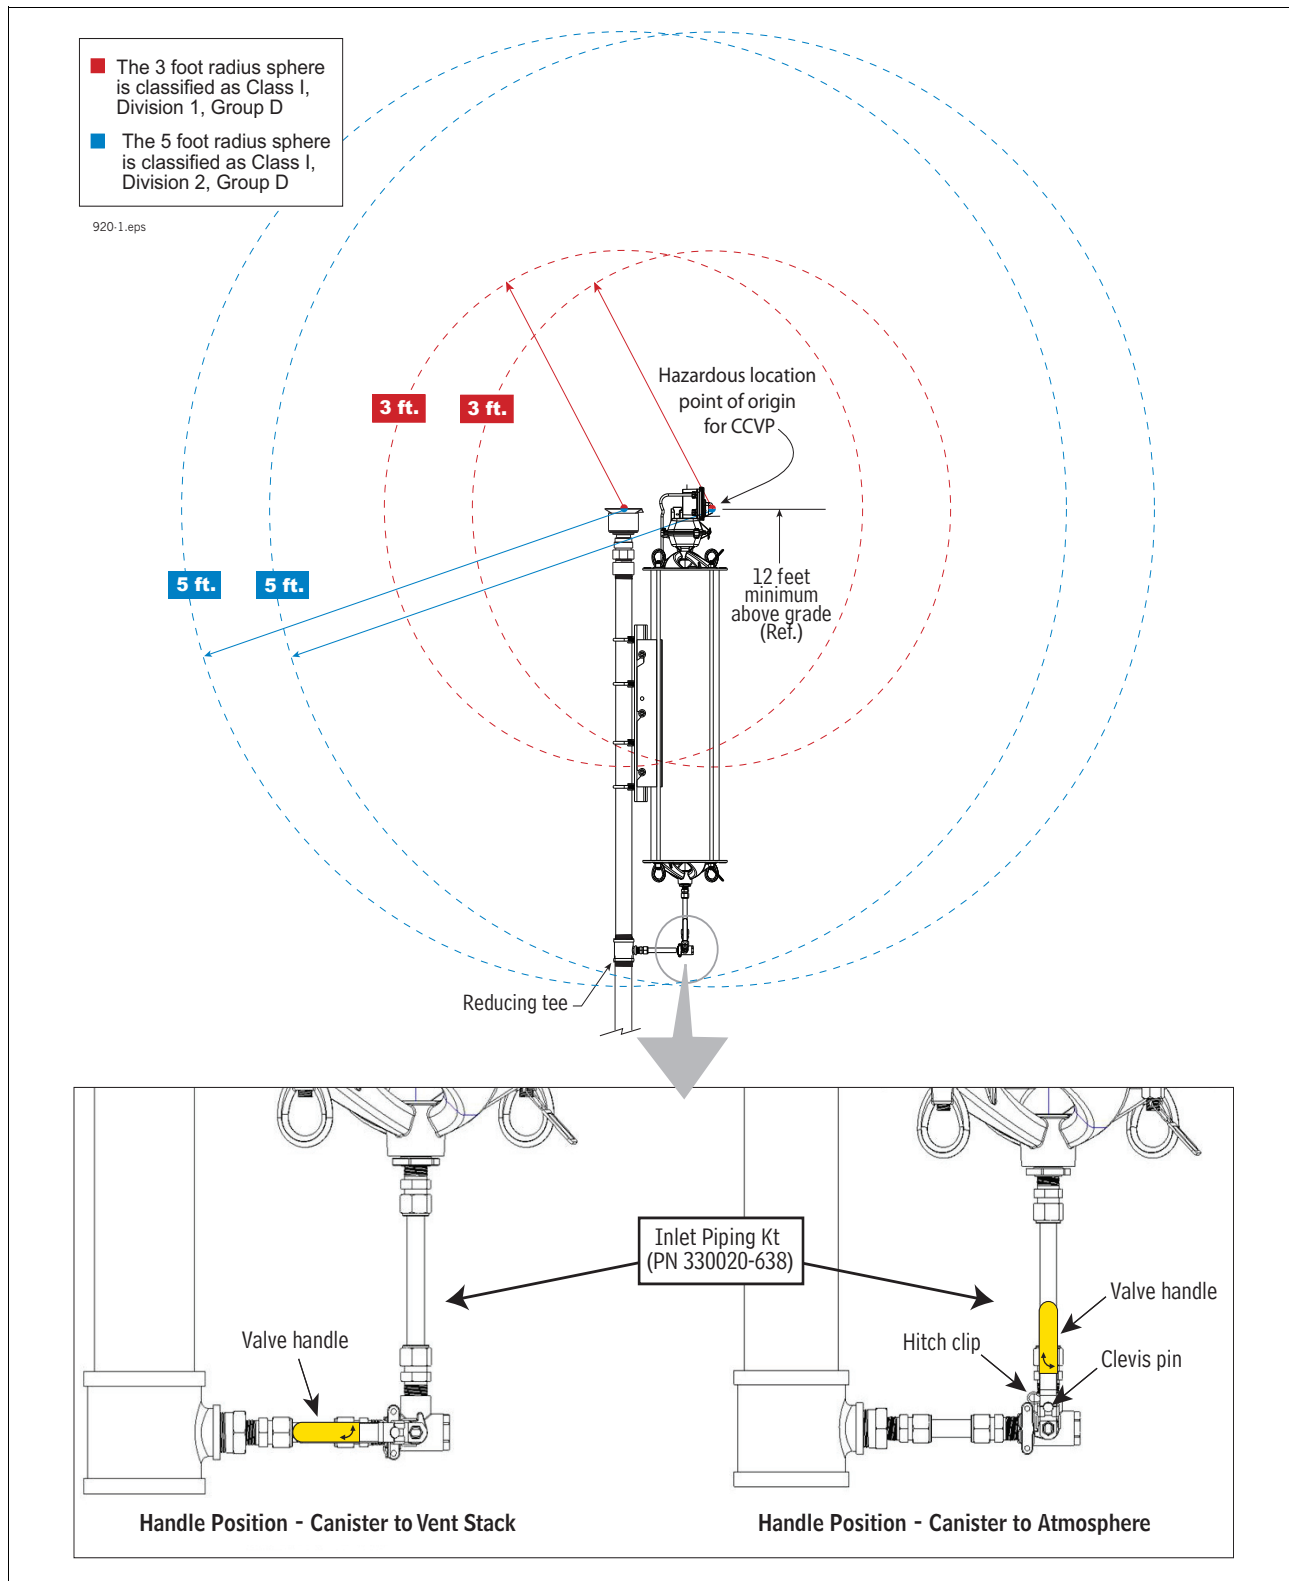


Figure 3. Inlet plumbing detail and classified area definition


**Figure 4. Locating the Vapor Valve Connector****Figure 5. Field Wiring Connections for Vapor Valve - Direct-Wired CCVP Only**

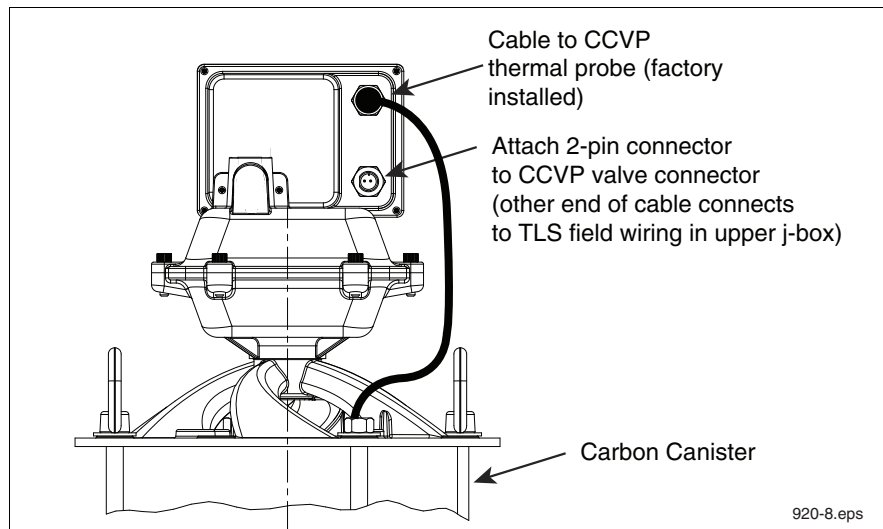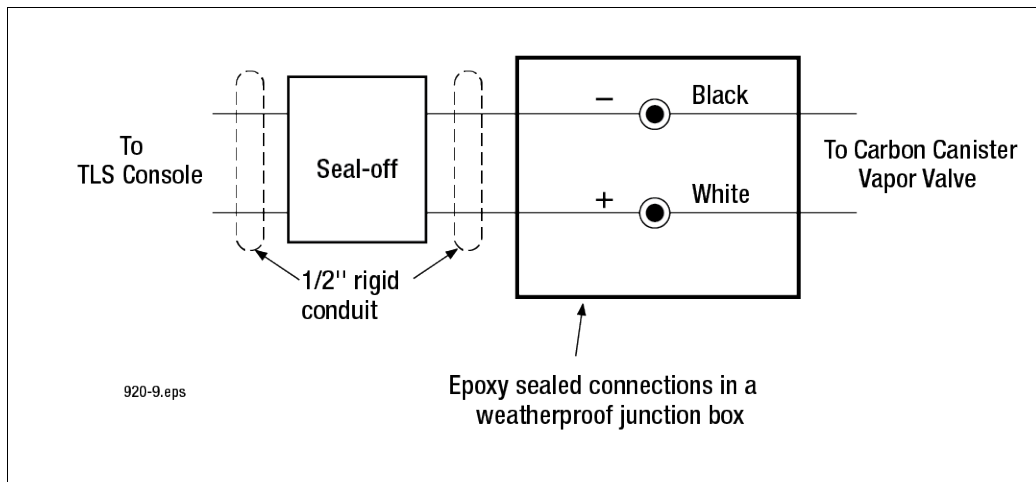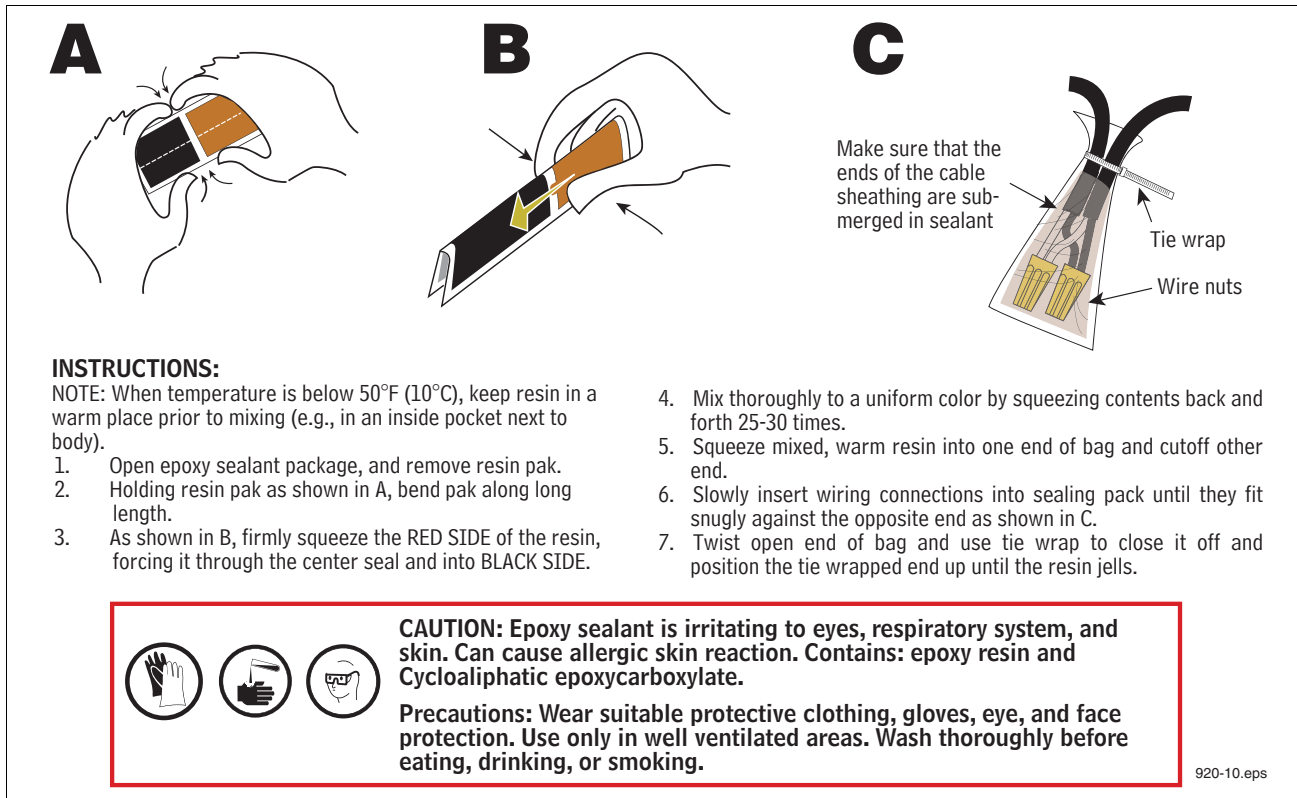

**Figure 6. Epoxy Sealing CCVP Vapor Valve Field Wiring Connections - Direct-wired CCVP Only**

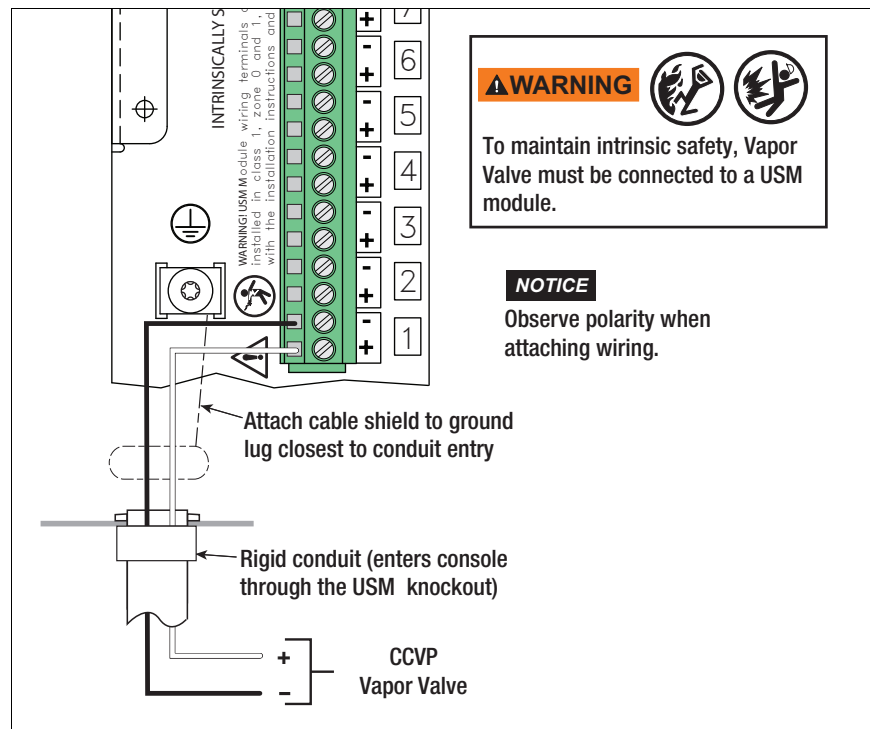

**Figure 7. Direct-Wired Vapor Valve Connects to Available TLS-450PLUS USM Module Position**

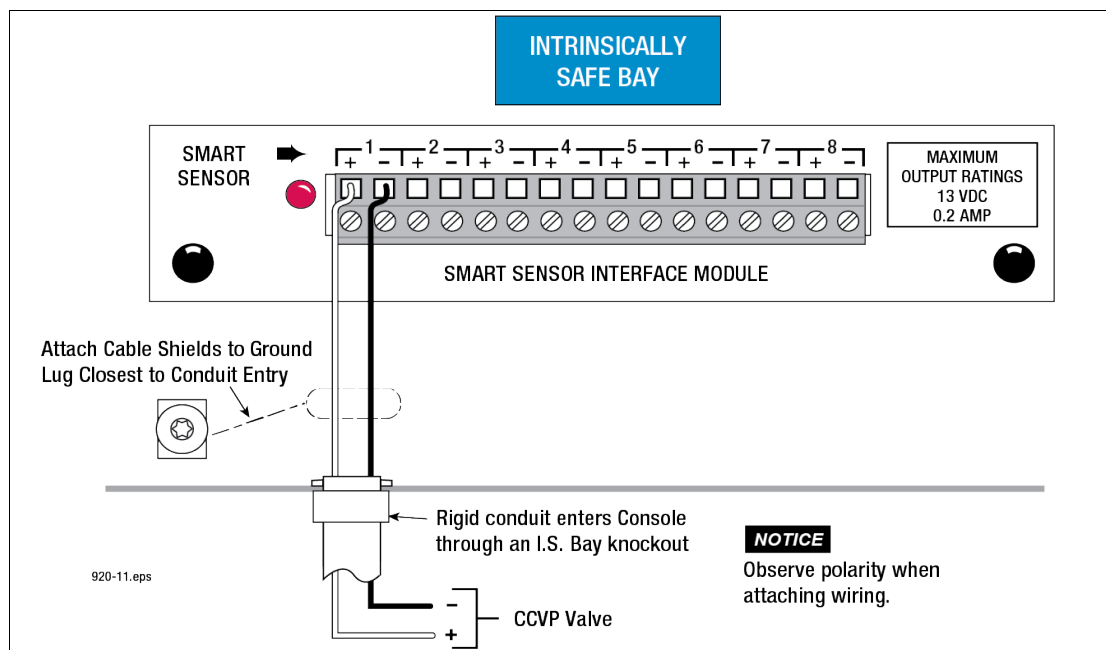

**Figure 8. Direct-Wired Vapor Valve Connects to Available TLS-3XX Smart Sensor Interface Module Position**

**NOTICE** For wireless configurations, see TLS RF System Control Drawing P/N 331940-012.



## Alternate Vent Stack Installations

**NOTICE** **IMPORTANT! When a canister is not installed directly to a vent pipe, it is the responsibility of the site owner(s) to:**

1. Provide suitably rated mounting locations designed for 88 pounds (minimum) static load.
2. Provide adequate wind loading per all applicable local codes.
3. Follow all recommendations providing an unrestricted flow path into the canister that is free of liquid traps and minimizes the number of bends and turns in the piping. Any departure from the specified installation procedures, must conform to all local code requirements per the jurisdiction having authority.
4. All standard vent stack installation procedures and applicable codes, etc., apply.
5. Additional requirements are as follows:
  - a. CCVP outlet shall be located not less than 5 feet above the canopy, see NFPA 30: 2008, clause 5.6.3.
  - b. The total length of the tubing (installed horizontally and vertically) between the 3-way valve and the CCVP can not exceed 12 feet. Horizontal lengths shall have a minimum slope of 1/8-inch per foot back to the 3-way valve to drain.
  - c. The horizontal length of tubing between the vent stack and the 3-way valve must not exceed 15 inches. If a horizontal length of more than 15 inches is required, follow the offset riser mounting installation procedures. No liquid traps permitted.
  - d. Customer can supply the following inlet piping materials:
    - 5/8" O.D. x 0.065 wall thickness hard temper copper tubing. Alternatively, customer supplied standard full weight (ASTM Schedule 40) wrought iron or steel pipe (1/2" I.D. minimum) can be substituted subject to applicable codes.
    - ASTM Schedule 40 wrought iron or steel, 2" or 3" vent riser pipe and pipe fittings
  - e. Vapor Polisher installation kit provides either 2" tee (Form Number 861290-002) or 3" reducing tee with bushing (Form Number 861290-003) to reduce to 1/2" NPT. Customer supplied reducing tee must not reduce from 2" or 3" to less than 1/2" NPT. If tee reduces to larger than 1/2" use appropriate bushing to reduce the tee to 1/2" NPT.
  - f. 3-way valve from the inlet piping kit must be used.
6. Follow the standard installation procedures when installing vapor polishers in configurations similar those in Figure 9 and Figure 10. All installations of this type must comply with NFPA 30/30A and NFPA 70 and are subject to the approval of the local authority having jurisdiction.

Alternate Vent Stack Installations

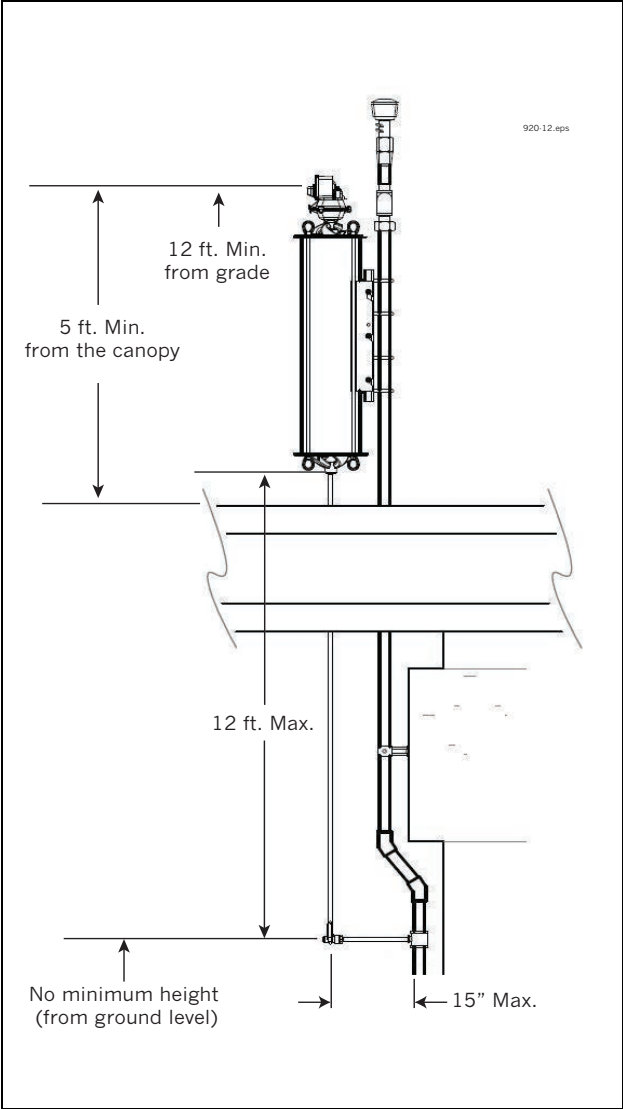


Figure 9. Through Canopy W/extended Plumbing

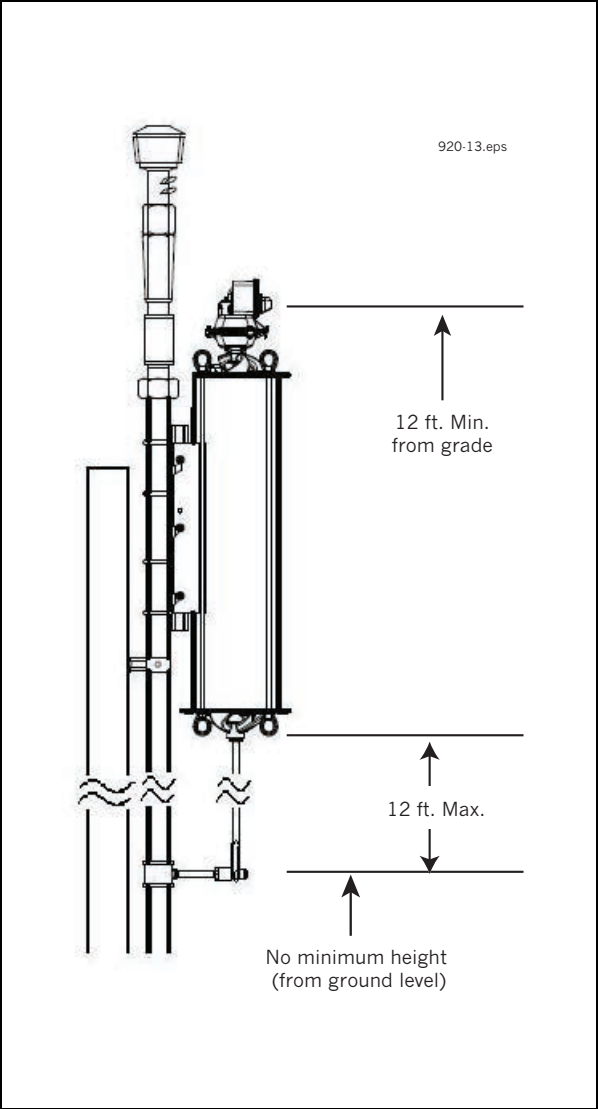


Figure 10. Vent Stack Mounting

## Offset Mount Installations

---

An offset mount is any installation where the CCVP is not mounted on the P/V vent stack. The CCVP can be mounted to a flat surface, or installed on an offset riser, that is plumbed to the vent stack (see Figure 11 and Figure 12).

The horizontal length of standard inlet piping between the vent stack and the 3-way valve must not exceed 15 inches. If a horizontal length of more than 15 inches is required, use 2-inch minimum pipe. No liquid traps permitted.

The manifold pipe between the vent riser and canister must not exceed 100 feet in length and must be at least 2-inch schedule 40 pipe with no liquid traps present and slope 1/8-inch per foot back to the vent riser to drain. To prevent the CCVP inlet piping from supporting the offset piping weight, provide additional support as required. Offset piping must be capped and comply with applicable local codes.

Flexible connections may be required by local jurisdiction having authority when offset mounting.

Flexible connections between the CCVP's offset piping and the vent riser are allowable if required by the local authority having jurisdiction to meet seismic requirements.

- Should the flex connection be installed such that it is not supported, the slope of the flex connection from the CCVP back to the vent riser shall be greater than the 1/8-inch per foot slope required for the rest of the piping.
- The flexible connector must be UL approved for a service station above-ground application.
- The local contractor is responsible to provide all necessary schedule 40 piping, pipe fittings and pipe cap.
- The Hazardous Location Area Classification shown for the CCVP in Figure 3 must be considered from the point of origin for all offset mountings.

## FLAT MOUNTING

1. The bracket in the installation kit must be used.
2. The mounting point must comply with all applicable codes.
3. The mounting method must be sufficiently rated for 88 pounds as per applicable building codes.
4. If bolting the mounting bracket to the mounting surface, use a minimum of 4 bolts.

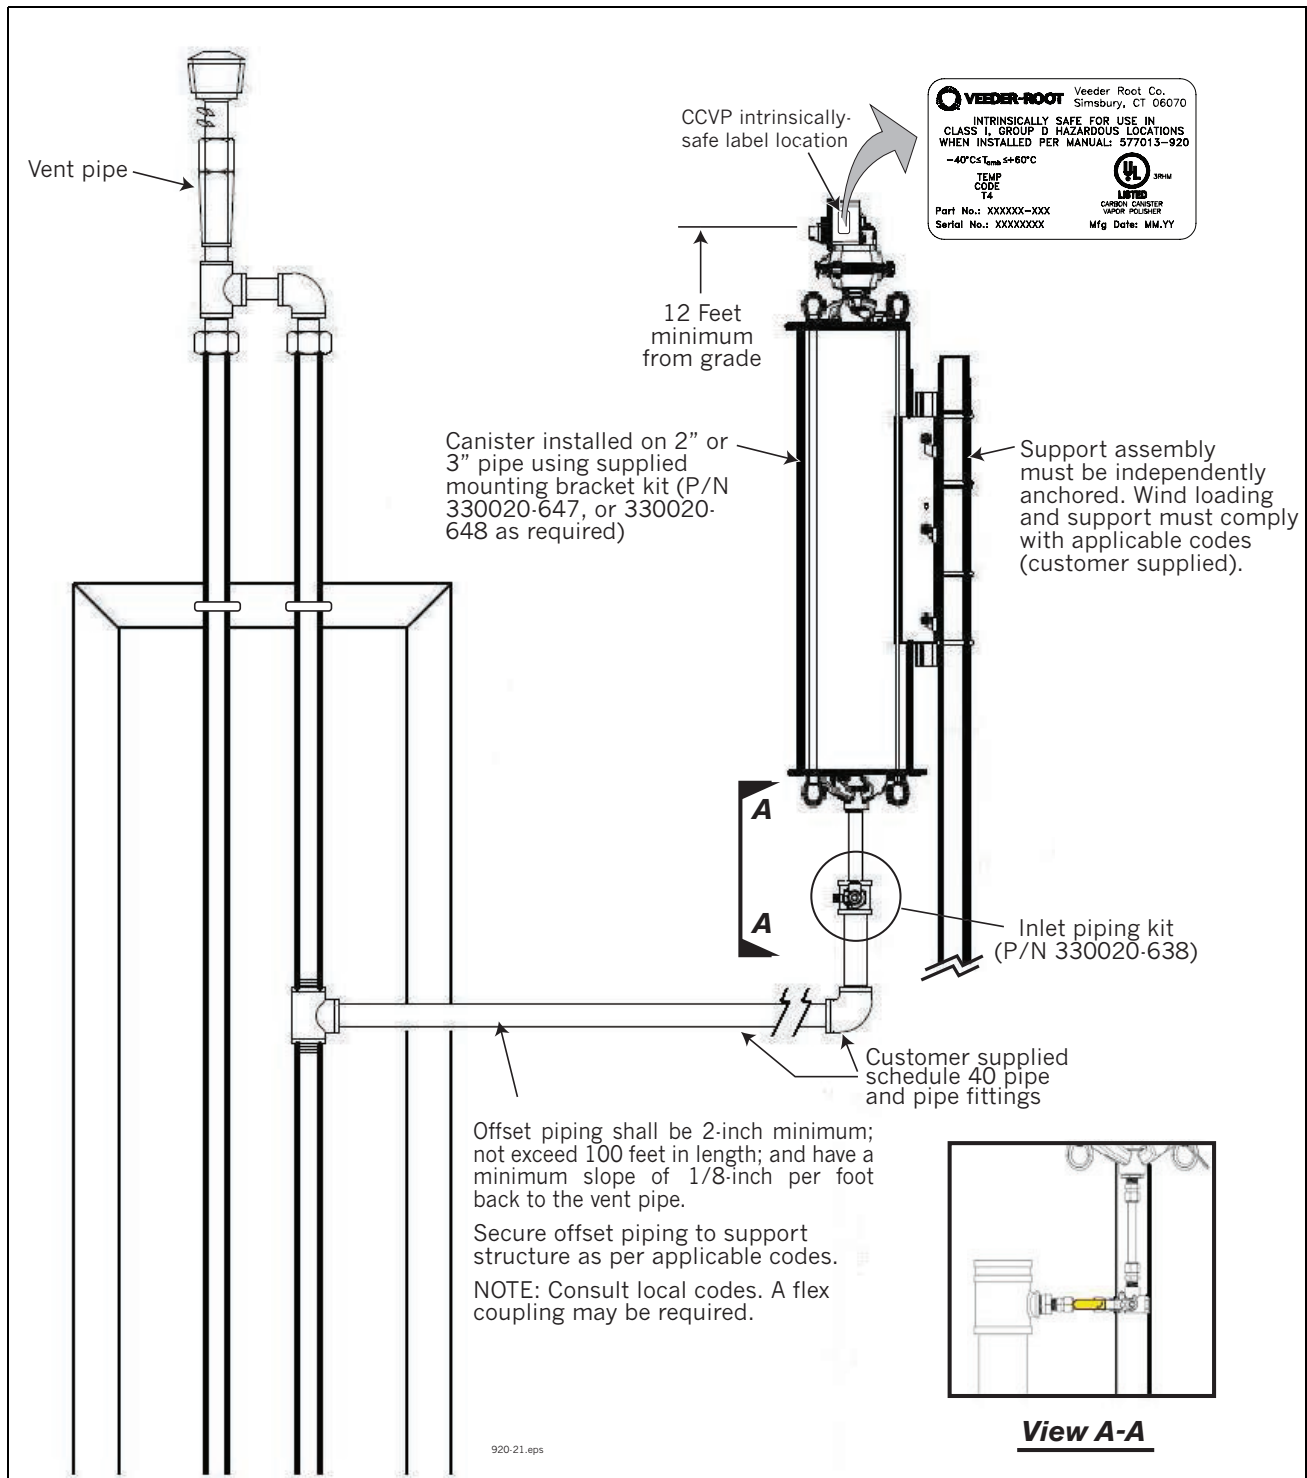


Figure 11. Offset Mount on a 2" or 3" Pipe

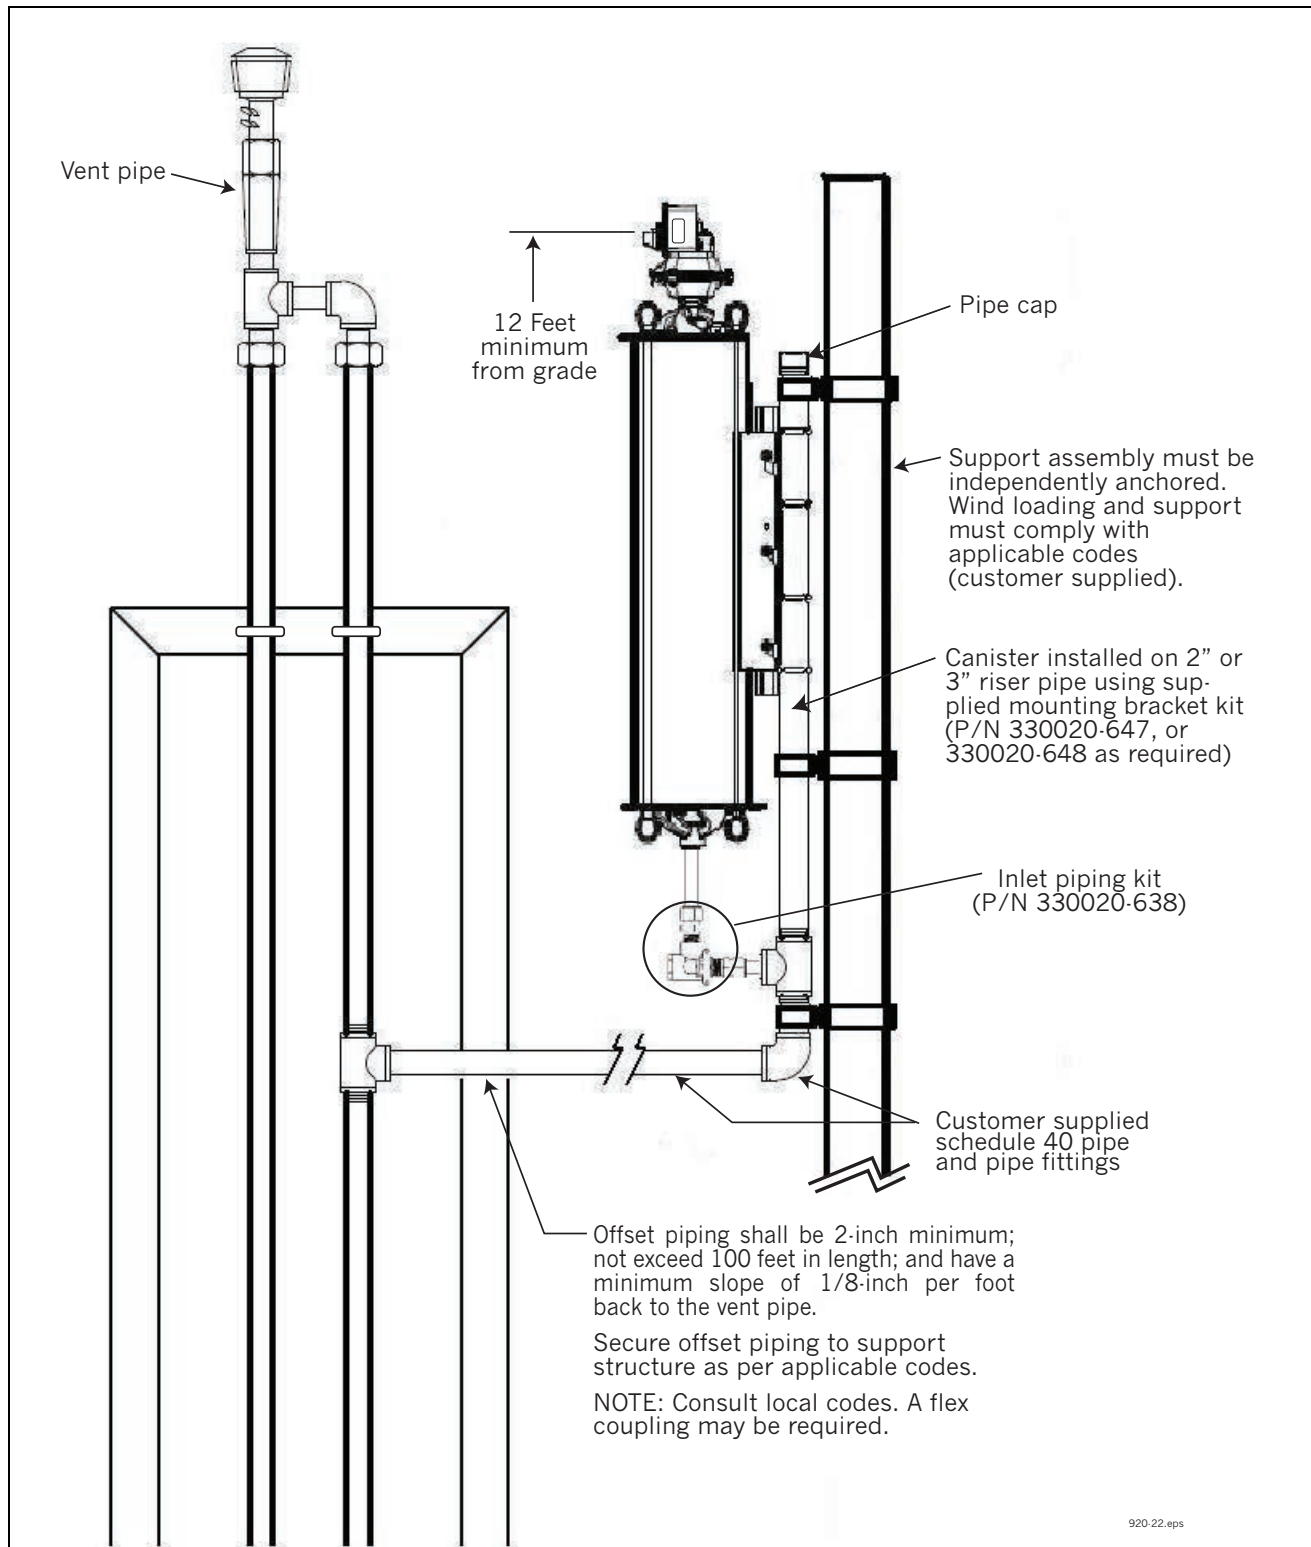


Figure 12. Offset Mount on a Supported Riser

## Test Port Installation


### Standard Installation Procedure

1. Remove 1/4-inch plug from upper manifold.
2. Install customer supplied schedule 40, 1/4-inch male-to-male with 90 degree elbow NPT fitting by applying Teflon™ tape to the threads and tighten 1/4 turn past snug.
3. Install the outlet test port cap by applying Teflon™ tape to the threads and tighten the cap 1/4 turn past snug.

### Alternate Lowering of the Upper Test Port

In some installations it may be desirable to have the upper test port more accessible. The steps below describe this procedure.

1. Refer to Figure 13 to install optional piping necessary to lower the CCVP's operability (upper) test port.
2. Use schedule 40, 1/4-inch pipe and pipe fittings (customer supplied) - install per all applicable codes.

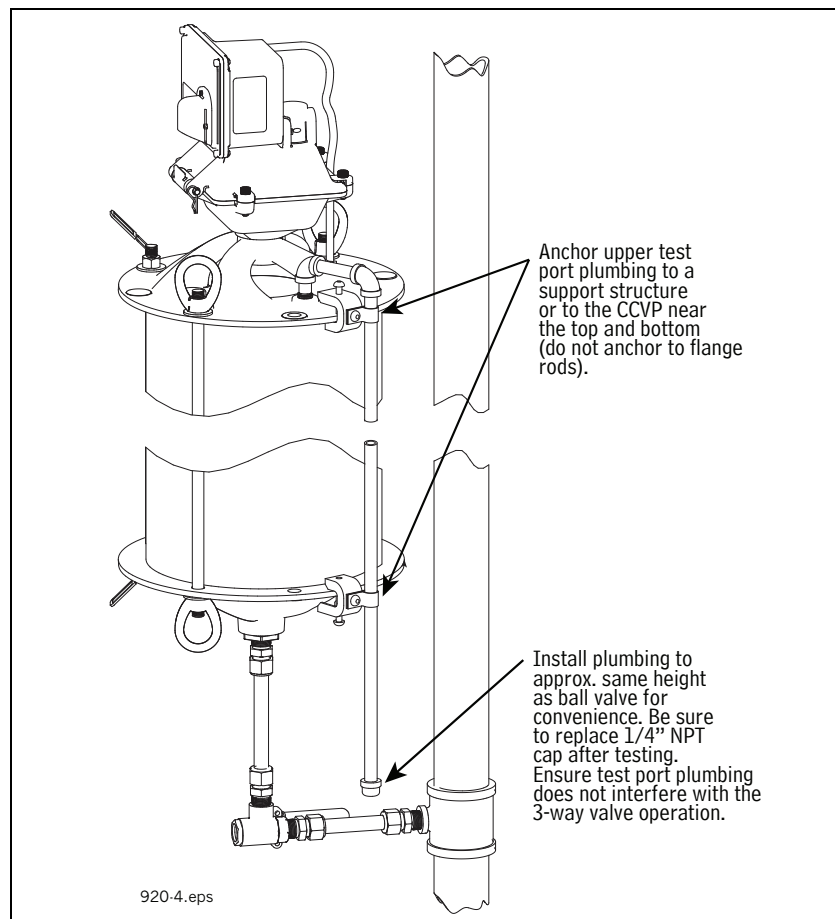

**Figure 13. Optional Lowering of Upper Test Port**

## Maintenance

### Sensor Housing Kit (P/N 330020-644)

1. Remove the three T25 Torx screws holding the sensor housing assembly to the vapor valve assembly (see Figure 14).
2. Pull the sensor housing assembly straight out (unplugging it).
3. Align the replacement sensor housing assembly's connector with the connector in the vapor valve assembly and push in the assembly until it seats against the vapor valve assembly (see Figure 15).
4. Replace the three #25 torx screws in the sensor housing assembly cover until tight.

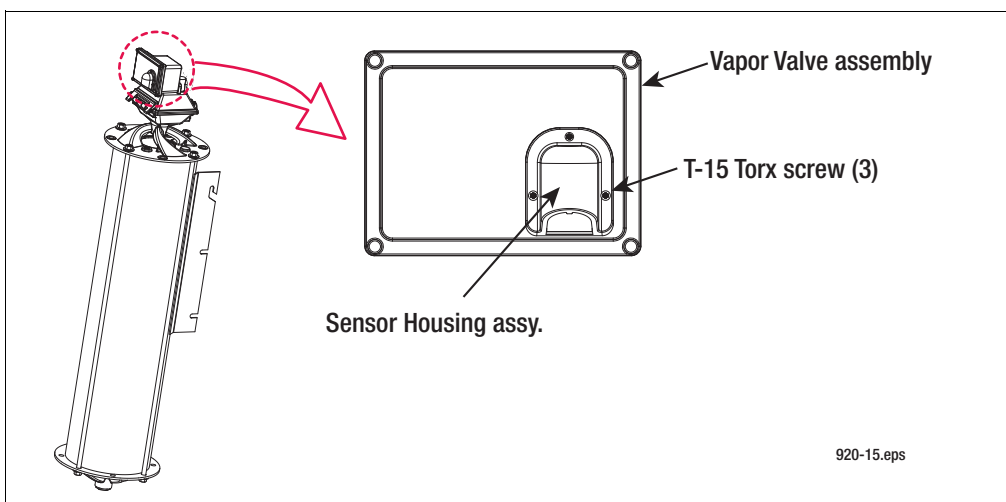


Figure 14. Removing Sensor Housing Assembly


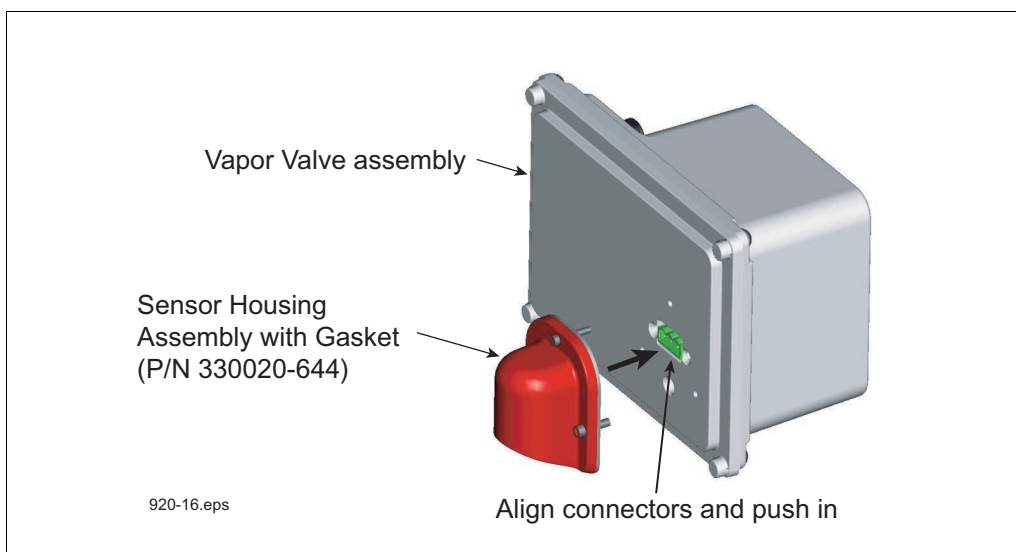



Figure 15. Replacing sensor housing assembly

## Filter Kit (P/N 330020-645)

1. Remove the four 1/4-20 x 1 inch hex key bolts from the top of the vapor valve filter housing (see Figure 16).
2. Swing the housing top back and remove the filter plate from its seat and the o-ring from its groove in the vapor valve filter housing's lower half (see Figure 17).
3. Install a new o-ring in the groove and insert a new filter plate into its seat in the lower half of the housing, close the cover and screw in the four 1/4-20 hex key bolts until tight.

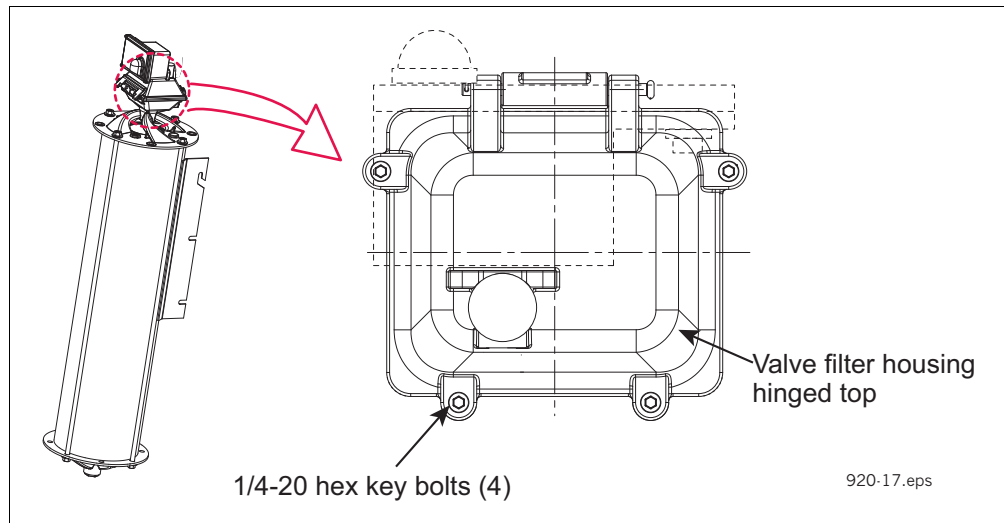


**Figure 16. Accessing the VALVE FILTER and O-Ring**

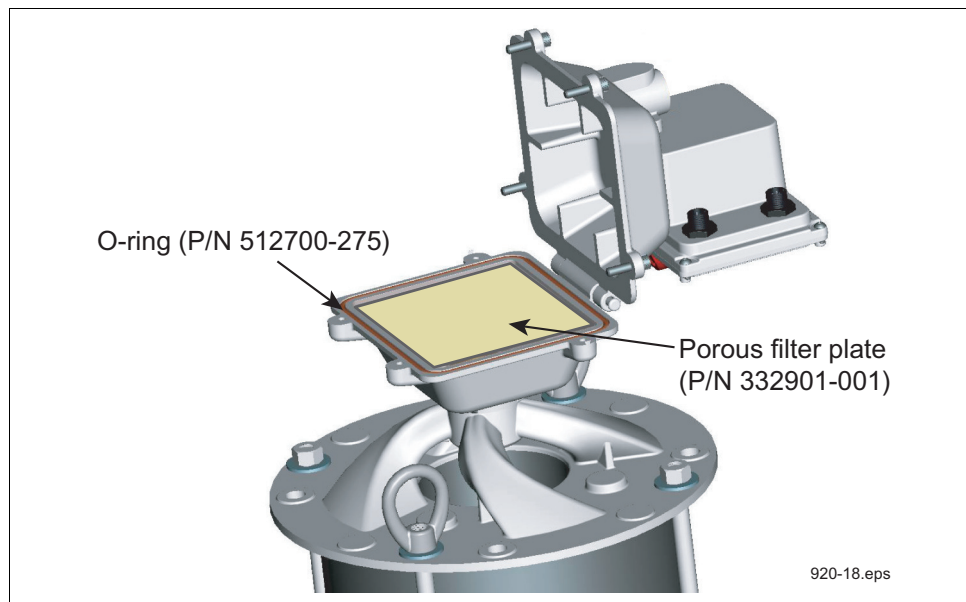


**Figure 17. Replacing the Valve Filter and O-Ring**

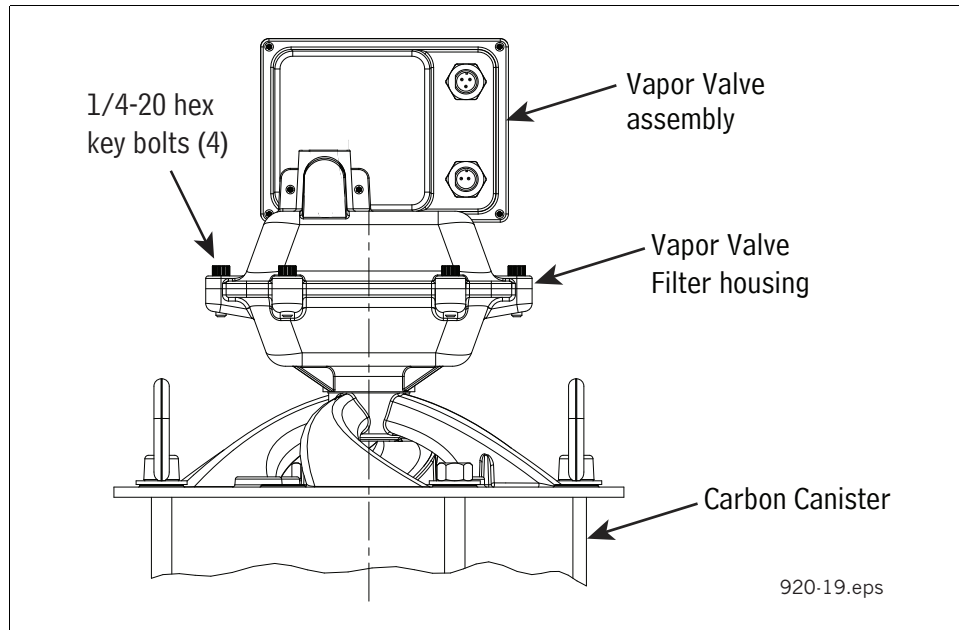


**Valve Enclosure Assembly Kit (P/N 330020-643)****Figure 18. Removing Vapor Valve Assembly**

1. Remove the cables from the two connectors on the rear of the vapor valve assembly.
2. Remove the four 1/4-20 x 1 inch hex key bolts from the top of the vapor valve filter housing (see Figure 18).
3. Remove the hitch clip from the long clevis pin in the front hinge of the vapor valve assembly and vapor valve filter housing (see Figure 19).
4. Push the long clevis pin out and free of the hinge bores and lift up the vapor valve assembly. Be careful not to damage the filter in the vapor valve filter housing.
5. Place the new vapor valve assembly onto the vapor valve filter housing and push the long clevis pin through the hinge bores. Insert the hitch pin in the hole in the end of the clevis pin.
6. Screw in the four 1/4-20 hex key bolts until tight.
7. Reconnect the two cables to the two connectors on the vapor valve assembly.

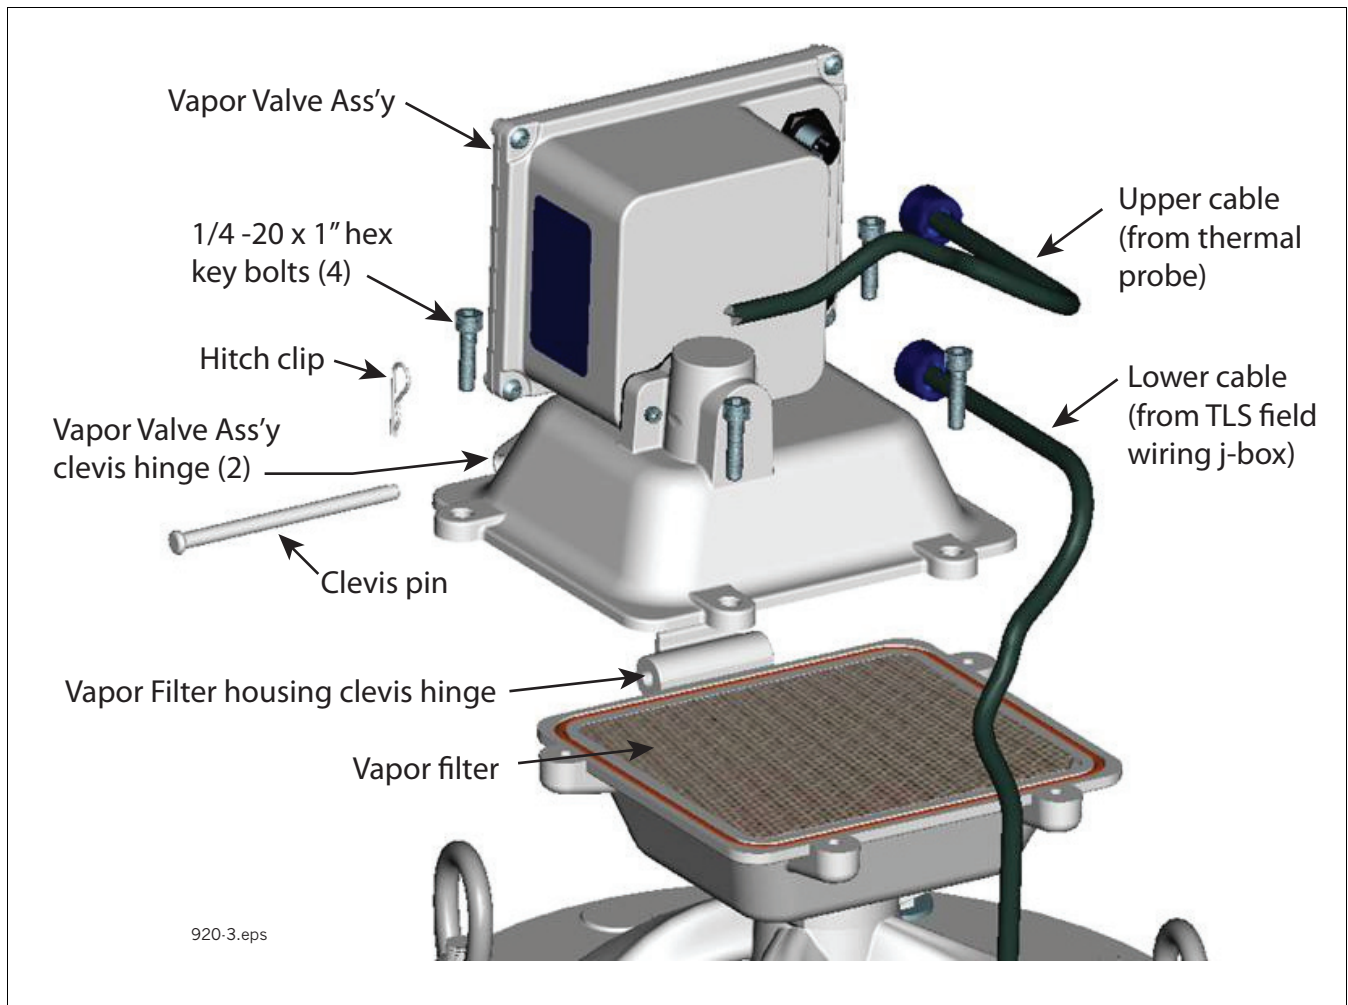
**Figure 19. Replacing Vapor Valve Assembly**

## Thermal Probe Kit (P/N 330020-653)

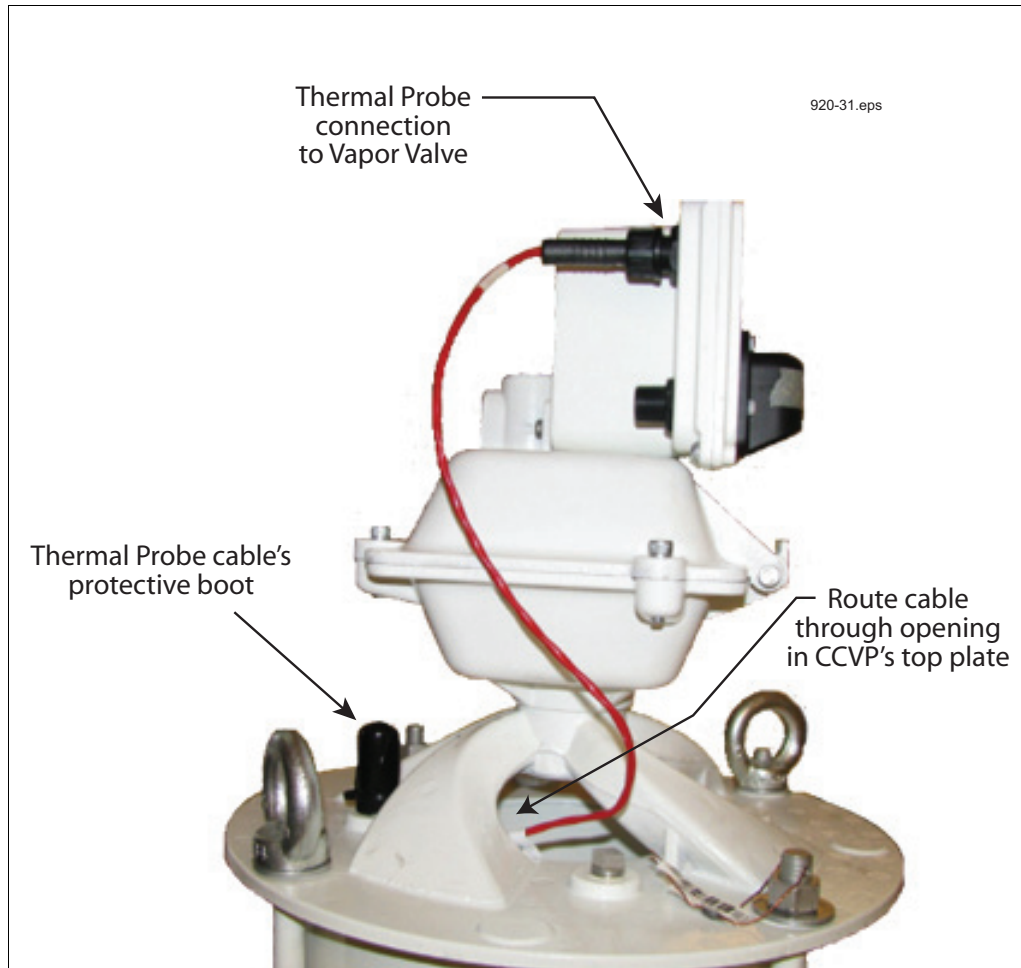


**Figure 20. CCVP Thermal Probe**

1. Cut the tie wrap around the thermal probe's protective boot and remove and set aside the boot. Remove the thermal probe cable connector from the back of the vapor valve assembly (see Figure 20).
2. Using a 9/16-inch open-end wrench, remove the thermal probe from the top of the CCVP.
3. Install and tighten the replacement thermal probe into its port in top of the CCVP.
4. Route the thermal probe connector cable through the opening in the top of the CCVP as shown in the above figure and attach the cable connector to the top port on the rear of the vapor valve assembly.
5. Make a small bend in the thermal probe cable no more than one inch above the probe hex nut (see Figure 21).
6. Slide the boot over the bend of the cable and push it down over the probe's hex nut until it rests on the top of the CCVP. Get a tie wrap from the kit and position it around the end of the boot just under the probe's hex nut and tighten it (see Figure 22).

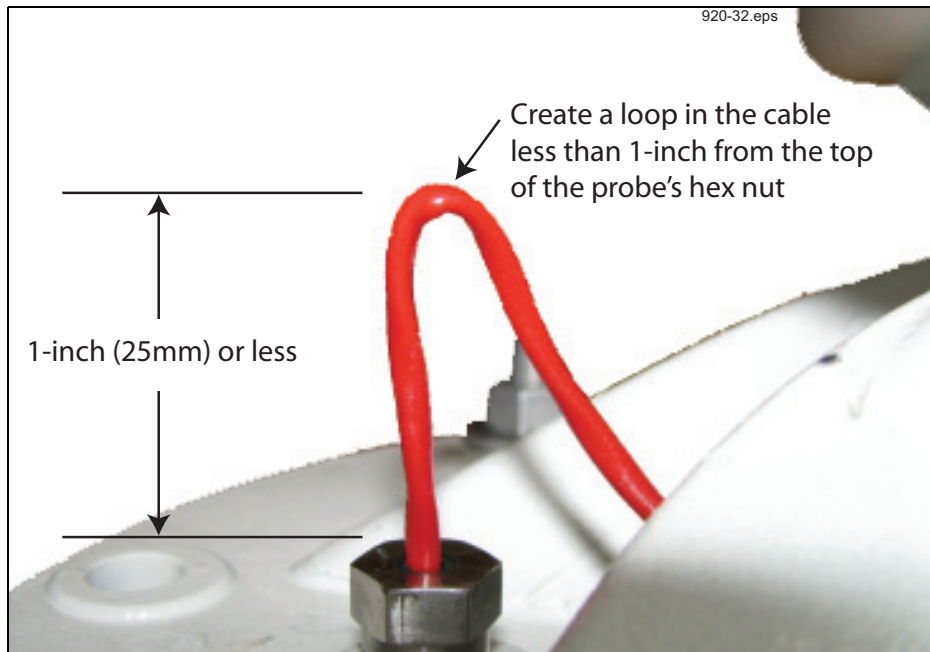

**Figure 21. Preparing the Thermal Probe Cable for the Protective Boot**

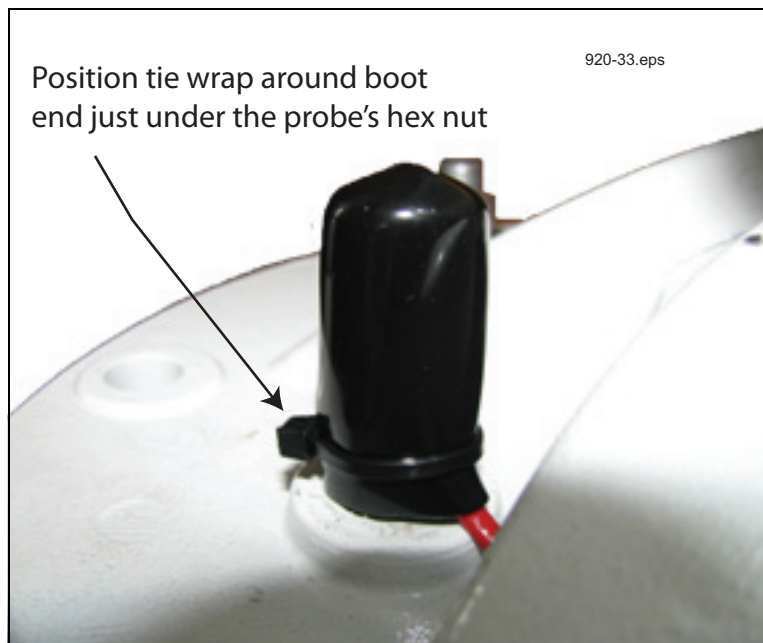

**Figure 22. Positioning the Tie Wrap Over the Probe Cable Protective Boot**



For technical support, sales or  
other assistance, please visit:  
[veeder.com](http://veeder.com)