

# Single-Point Mini Hydrostatic Sensor for Double-Wall Sumps

## Installation Guide

# Notice

---

Veeder-Root makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Veeder-Root shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this publication.

Veeder-Root reserves the right to change system options or features, or the information contained in this publication.

This publication contains proprietary information which is protected by copyright. All rights reserved. No part of this publication may be photocopied, reproduced, or translated to another language without the prior written consent of Veeder-Root.

Contact TLS Systems Technical Support for additional troubleshooting information at 800-323-1799.

## **DAMAGE CLAIMS / LOST EQUIPMENT**

Thoroughly examine all components and units as soon as they are received. If any cartons are damaged or missing, write a complete and detailed description of the damage or shortage on the face of the freight bill. The carrier's agent must verify the inspection and sign the description. Refuse only the damaged product, not the entire shipment.

Veeder-Root must be notified of any damages and/or shortages within 30 days of receipt of the shipment, as stated in our Terms and Conditions.

## **VEEDER-ROOT'S PREFERRED CARRIER**

1. Contact Veeder-Root Customer Service at 800-873-3313 with the specific part numbers and quantities that were missing or received damaged.
2. Fax signed Bill of Lading (BOL) to Veeder-Root Customer Service at 800-234-5350.
3. Veeder-Root will file the claim with the carrier and replace the damaged/missing product at no charge to the customer. Customer Service will work with production facility to have the replacement product shipped as soon as possible.

## **CUSTOMER'S PREFERRED CARRIER**

1. It is the customer's responsibility to file a claim with their carrier.
2. Customer may submit a replacement purchase order. Customer is responsible for all charges and freight associated with replacement order. Customer Service will work with production facility to have the replacement product shipped as soon as possible.
3. If "lost" equipment is delivered at a later date and is not needed, Veeder-Root will allow a Return to Stock without a restocking fee.
4. Veeder-Root will NOT be responsible for any compensation when a customer chooses their own carrier.

## **RETURN SHIPPING**

For the parts return procedure, please follow the appropriate instructions in the "General Returned Goods Policy" pages in the "Policies and Literature" section of the Veeder-Root **North American Environmental Products** price list. Veeder-Root will not accept any return product without a Return Goods Authorization (RGA) number clearly printed on the outside of the package.

**Introduction**

Contractor Certification Requirements ..... 1  
Product Marking Information ..... 1  
    Related Documents ..... 1  
Safety Warnings ..... 3  
Safety Precautions ..... 3  
System Description ..... 4  
    Required Components..... 4  
    Operating Capabilities ..... 4

**Installation.....5**

**Figures**

Figure 1. Example sensor installation .....5  
Figure 2. Sensor Wiring Installation Diagram .....6  
Figure 3. Epoxy sealing example .....6

# Introduction

This manual contains procedures to install the Veeder-Root Single-Point Mini Hydrostatic Sensor for double-walled sumps. This manual assumes field wiring has been run from the console to the sump junction box in which the sensor will be installed following instructions in the appropriate console's site prep manual.

## Contractor Certification Requirements

---

Veeder-Root requires the following minimum training certifications for contractors who will install and setup the equipment discussed in this manual:

**Installer (Level 1) Certification:** Contractors holding valid Installer Certification are approved to perform wiring and conduit routing; equipment mounting; probe, sensor and carbon canister vapor polisher installation; wireless equipment installation; tank and line preparation; and line leak detector installation.

**ATG Technician (Level 2/3 or 4) Certification:** Contractors holding valid ATG Technician Certifications are approved to perform installation checkout, startup, programming and operations training, system tests, troubleshooting and servicing for all Veeder-Root Series Tank Monitoring Systems, including Line Leak Detection. In addition, Contractors with the following sub-certification designations are approved to perform installation checkout, startup, programming, system tests, troubleshooting, service techniques and operations training on the designated system.

- Wireless 2
- Tall Tank

**Warranty Registrations** may only be submitted by selected Distributors.

## Product Marking Information

---

### RELATED DOCUMENTS


#### *Documents Required to Install Equipment*

This intrinsically safe apparatus is only for use as part of a Veeder-Root Automatic Tank Gauging System (ATG Console with probes and sensors). To install intrinsically safe apparatus, use the specific control drawing that appears on the nameplate of the applicable associated apparatus (ATG Console):



Equipment	UL/cUL Control Drawing Document No.
<b>Associated Apparatus</b>	
TLS-450/8600	331940-008
TLS-350, TLS-350R	331940-011
TLS-300	331940-013
TLS4/8601	331940-018

The control drawings contain information related to the correct installation of the overall intrinsically Safe System. This includes information such as maximum number of apparatus, specific apparatus allowed in the system, maximum cable lengths, references to codes, proper grounding and so on. Control drawings can be found on the

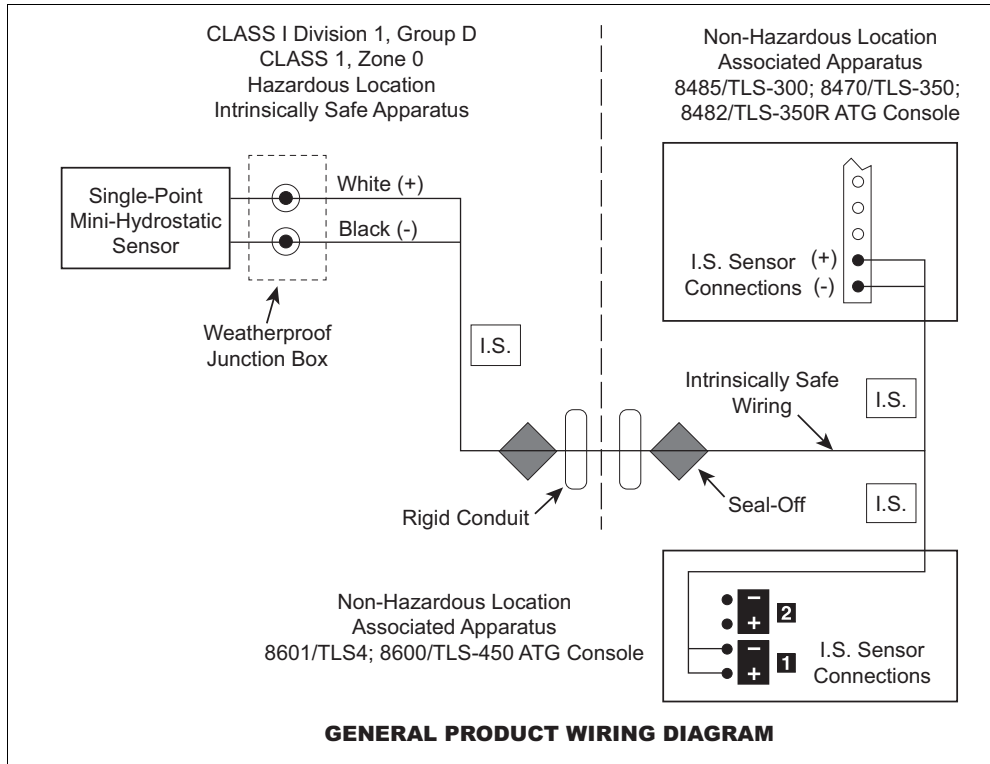accompanying Compact Disk (TECH DOCS CD) or on the internet at [veeder.com](http://veeder.com) under SUPPORT; VR TECHNICAL DOCUMENTS; DRAWINGS.









**Product Label Contents**

 <p><b>VEEDER-ROOT</b> TM</p>	<p>I.S. CIRCUIT FOR HAZLOC SENSOR</p> <p>F/N 794380-XXX</p> <p>S/N XXXXXX</p> <p>-40°C ≤ Ta ≤ +60°C</p> <p>MANUAL NO. 577013-838</p>	<p>24G6</p>  <p><b>UL</b> LISTED</p>
<p>CL I, DIV. 1, GP.D</p> <p>CL I, ZONE 0</p> <p>AEx ia IIA</p> <p>Ex ia IIA</p> <p>TC=T4</p> <p>SECURITE INTRINSEQUE</p>		





## Safety Warnings





To protect yourself and your equipment, observe the following warnings and important information:

 <b>WARNING</b>	
    	<p><b>This product is to be installed and operated in the highly combustible environment of a gasoline storage tank where flammable liquids and explosive vapors may be present.</b></p> <p><b>FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS AND SAFETY PRECAUTIONS COULD CAUSE DAMAGE TO PROPERTY, ENVIRONMENT, RESULTING IN SERIOUS INJURY OR DEATH.</b></p> <ol style="list-style-type: none"> <li><b>1. Read and follow all instructions in this manual, including all safety warnings to protect yourself and others from serious injury, explosion, or electrical shock.</b></li> <li><b>2. Comply with all applicable codes including: the National Electrical Code; federal, state, and local codes; and other applicable safety codes.</b></li> <li><b>3. To protect yourself and others from being struck by vehicles, block off your work area during installation or service.</b></li> <li><b>4. Do not alter or modify any component or substitute components in this kit.</b></li> <li><b>5. Warning! Substitution of components may impair intrinsic safety.</b></li> <li><b>6. Field wiring to the Sensor must not share a conduit with any non-intrinsically safe device's wiring.</b></li> <li><b>7. Warning! To prevent ignition of flammable or combustible atmospheres, disconnect power before servicing.</b></li> <li><b>8. Before installing or taking the unit into a hazardous area, earth the unit in a safe area to remove any static charge. Then immediately transport the unit to the installation site. Do not rub or clean the unit prior to installation. Cleaning is not required under normal service conditions. Do not rub or clean the unit after installation. If the unit is not fixed to a known earth point when installed, ensure that a separate earth connection is made to prevent the potential of a static discharge. When fitting or removing the unit, use of anti-static footwear or clothing is required.</b></li> <li><b>9. Materials used in the construction of this device do not contain, by mass, more than 10% in total of aluminum, magnesium, zirconium and titanium or 7.5% in total of magnesium, titanium and zirconium.</b></li> </ol>

## Safety Precautions

The following safety symbols are used throughout this manual to alert you to important safety hazards and precautions.

	<p><b>EXPLOSIVE</b> Fuels and their vapors are extremely explosive if ignited.</p>		<p><b>FLAMMABLE</b> Fuels and their vapors are extremely flammable.</p>
	<p><b>TURN POWER OFF</b> Live power to a device creates a potential shock hazard. Turn Off power to the device and associated accessories when servicing the unit.</p>		<p><b>USE SAFETY BARRICADES</b> Unauthorized people or vehicles in the work area are dangerous. Always use safety cones or barricades, safety tape, and your vehicle to block the work area.</p>

 <p><b>GLOVES</b> Wear gloves to protect hands from irritation or injury.</p>	 <p><b>READ ALL RELATED MANUALS</b> Knowledge of all related procedures before you begin work is important. Read and understand all manuals thoroughly. If you do not understand a procedure, ask someone who does.</p>
 <p><b>WEAR EYE PROTECTION</b> Fuel spray from residual pressure in the lines can cause serious eye injuries. Always wear eye protection.</p>	 <p><b>INJURY</b> Careless or improper handling of materials can result in bodily injury.</p>

## System Description

The Veeder-Root Single-Point Mini Hydrostatic Sensor monitors the level of liquid in the interstitial space of a double-wall sump. When liquid in the sump’s interstitial brine reservoir drops below a certain level, the sensor sends an alarm signal to the TLS Console. The console’s visual and audible built-in alarm indicators immediately tell you where the problem is, so you can quickly take action to help prevent environmental problems.

### Required Components

- Single-Point Mini Hydrostatic Sensor and install kit for double-wall sumps - P/N 794380-304

### Operating Capabilities

- Operating temperature Range: -25°C to +50°C. Rests in salt brine solution of up to 30% calcium chloride.
- Storage Temperature Range: -40° C to + 60° C.
- Dimensions: 2.5" high, 1.50" diameter
- Cable length: 8 feet
- Minimum (alarm) operating liquid depth: 0.8"

## Installation



1. Turn OFF power to the console.
2. Make sure liquid is present in the sump's interstitial liquid reservoir. Important! Do not install the sensor if there is less than 0.8" of liquid in the reservoir. Failure to comply will lead to an alarm.
3. Lower the float switch assembly into the reservoir until it sits on the bottom of the reservoir as shown in the installation example in Figure 1. Note: the actual reservoir type and location will vary between sump manufacturers.

The sensor housing should not be suspended by the cable. Do not use more cable than necessary between the sensor and junction box to avoid excess cable being damaged when replacing the sump lid. Route and tie off the cable so that it can not be damaged by sump component installation or maintenance.

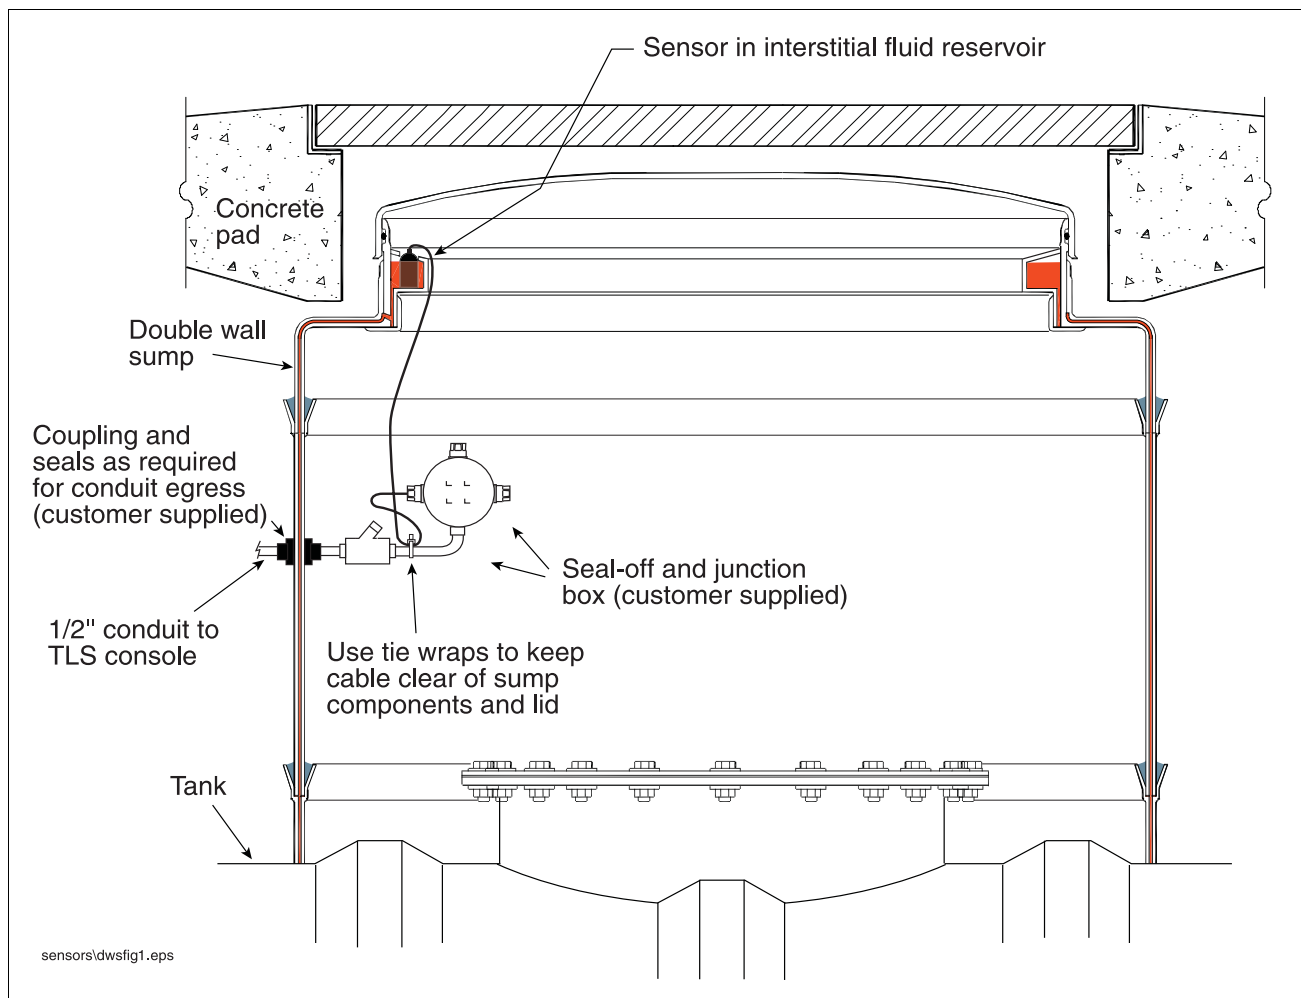


Figure 1. Example sensor installation

4. Using wire nuts, connect the two-wire sensor cable to the field wires in the sensor junction box (Figure 2).
5. Seal wire nuts with epoxy sealant following the instructions in Figure 3.




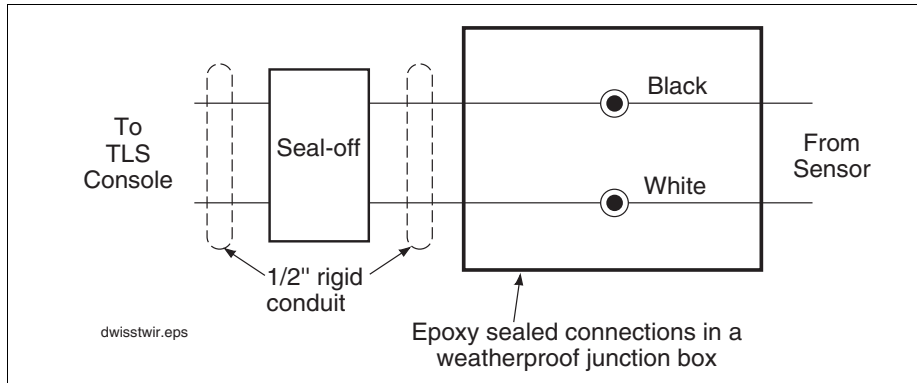


Figure 2. Sensor Wiring Installation Diagram

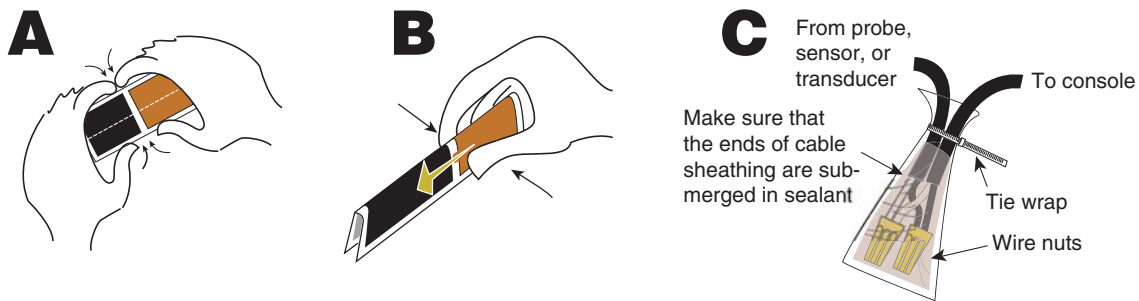

**Instructions:**

NOTE: When temperature is below 50°F (10°C), keep resin in a warm place prior to mixing (e.g., in an inside pocket next to body).

1. Open epoxy sealant package, and remove resin pak.
2. Holding resin pak as shown in A, bend pak along long length.
3. As shown in B, firmly squeeze the RED SIDE of the resin, forcing it through the center seal and into BLACK SIDE.

4. Mix thoroughly to a uniform color by squeezing contents back and forth 25-30 times.
5. Squeeze mixed, warm resin into one end of bag and cutoff other end.
6. Slowly insert wiring connections into sealing pack until they fit snugly against the opposite end as shown in C.
7. Twist open end of bag and use tie wrap to close it off and position the tie wrapped end up until the resin jells.



**CAUTION:** Epoxy sealant is irritating to eyes, respiratory system, and skin. Can cause allergic skin reaction. Contains: epoxy resin and Cycloaliphatic epoxy-carboxylate.

**Precautions:** Wear suitable protective clothing, gloves, eye, and face protection. Use only in well ventilated areas. Wash thoroughly before eating, drinking, or smoking.

consoles/epxy2w.eps

Figure 3. Epoxy sealing example

